



USER'S MANUAL

PRESSURE AND DIFFERENTIAL PRESSURE TRANSMITTERS
Exd, Exi / Exd versions





**PYRP-2000ALW, PYRD-2000ALW,
PYRD-2000ALW, PYRD-2000GALW
PYRD-2000YALW**



Pyropress Ltd, Bell Close, Plymouth PL7 4JH. UK.
tel. +44 1752 333933

www.pyropress.com e-mail: sales@pyropress.com

Symbols used

Symbol	Description
	Warning to proceed strictly in accordance with the information contained in the documentation in order to ensure the safety and full functionality of the device.
	Information particularly useful during installation and operation of the device.
	Information particularly useful during installation and operation of an Ex type device.
	Information on disposal of used equipment.

BASIC REQUIREMENTS AND SAFE USE

The manufacturer will not be liable for damage resulting from incorrect installation, failure to maintain suitable technical condition of the device, or use of the device other than for its intended purpose.

Installation should be carried out by qualified staff having the required authorisations to install electrical and I&C equipment. The installer is responsible for performing the installation in accordance with this manual and with the electromagnetic compatibility and safety regulations and standards applicable to the type of installation.

In systems with I&C equipment, in case of leakage, there is a danger to personnel due to the medium under pressure. All safety and protection requirements must be observed during installation, operation and inspections.

If a device is not functioning correctly, disconnect it and return it for repair to the manufacturer.



In order to minimise the risk of malfunction and associated risks to personnel, do not install or use the device in particularly adverse conditions, where the following dangers occur:

- possibility of mechanical impacts, excessive shocks and vibration;
- excessive temperature fluctuation;
- condensation of steam, dust, ice.

Continuous development may result in changes to specification without prior notice. The latest version can be found on the manufacturer's website: www.pyropress.com.

TABLE OF CONTENTS

1. INTRODUCTION	7
1.1. Purpose of the document	7
1.2. Symbols used.....	7
1.3. Trademarks.....	7
1.4. Definitions and abbreviations	8
1.5. Transmitter set range	9
2. SAFETY	10
3. LIST TO CHECK COMPLETENESS OF DELIVERY	10
4. TRANSPORT AND STORAGE.....	11
4.1. Delivery check.....	11
4.2. Transport.....	11
4.3. Storage	11
5. GUARANTEE.....	11
6. IDENTIFICATION.....	12
6.1. Manufacturer's address	12
6.2. Transmitter identification	12
6.3. Identification of sensor/measuring head type	13
6.4. CE mark, declaration of conformity	13
7. Construction	14
7.1. Intended use and features	14
7.2. Transmitter housing	15
7.3. Processing unit.....	15
7.4. Measuring head	15
7.5. Separators.....	15
8. INSTALLATION	16
8.1. General recommendations.....	16
8.1.1. Transmitter installation site.....	16
8.1.2. Low temperature of measuring media.....	16
8.1.3. High temperature of measuring media	16
8.1.4. Mechanical vibrations, surge.....	16
8.2. Mounting and connection of mechanical transmitters	17
8.2.1. Gas and steam flow rate measurement system	17
8.2.2. Liquid flow rate measurement system.....	20
8.2.3. Liquid level measurement system in open tanks.....	21
8.2.4. Liquid level measurement system in closed tanks	24
8.2.5. Pressure measurement system.....	30
8.2.6. Differential pressure measurement system.....	33
8.2.7. Installation instructions for transducers with distance separators.....	36
8.2.8. Flange gasket installation instructions.....	36
8.2.9. Instruction of installing the clamp to pipe and wall	37
8.2.10. Assembly and mounting of the variant with distance separator.....	41
8.2.11. Rotation of the housing	43
8.2.12. Closing of housing covers, sealing.....	43
8.3. Post-installation control operations	44

9. ELECTRICAL CONNECTION	45
9.1. Cable connection to transmitter internal terminals.....	45
9.1.1. Cable connection.....	45
9.1.2. Connection of transmitter with the option of using local HART communication ..	46
9.2. Transmitter power supply	47
9.2.1. Transmitter supply voltage	47
9.2.2. Uninterruptible current measurement in 4...20mA current loop.....	48
9.2.3. Specifications of electrical switching terminals	48
9.2.4. Cabling specification	48
9.2.5. Resistance load in power supply line	48
9.2.6. Shielding, equipotential bonding.....	50
9.2.7. Connection of HART communicator unit	50
9.2.8. Connection of HART modem.....	50
9.3. Equipotential bonding.....	51
9.4. Lightning protection	51
9.5. Final inspection of cabling	51
10. OPERATION.....	52
10.1. Local LCD display	52
10.2. Local keypad	57
10.3. Local configuration of setpoints	57
10.4. Navigation in local setpoints MENU	57
10.5. Acceptance of local setpoints	57
10.6. List of local setpoints MENU messages	58
10.7. Structure of local setpoints MENU.....	59
10.8. Remote configuration of setpoints (HART 5 / HART 7)	64
10.8.1. Compatible devices	64
10.8.2. Compatible configuration software	64
10.8.3. Local HART communication jumper	64
10.8.4. Method of connecting communication devices	65
10.8.5. Structure of remote configuration menu	65
11. START-UP	69
11.1. Alarm configuration	69
11.2. Configuration of operating mode	71
11.3. Correction of impact of mounting position	71
11.4. Flow measurements	72
11.5. Level measurements	72
11.6. Pressure measurements	72
11.7. Differential pressure measurements.....	72
12. MAINTENANCE.....	73
12.1. Periodic inspections	73
12.2. Non-periodic inspections	73
12.3. Cleaning / washing	73
12.3.1. Diaphragm cleaning	73
12.4. Spare parts.....	74
12.5. Repair.....	74
12.6. Returns.....	74

13. SCRAPPING, DISPOSAL	74
14. TROUBLESHOOTING	75
14.1. Malfunction messages on LCD display	75
14.2. Failure statuses read using HART	78
14.3. Influence of malfunction and failure on transmitter operation and output current	84
15. TECHNICAL DATA	84
16. ADDITIONAL INFORMATION	84
16.1. Additional information	84
16.2. History of revisions	84

LIST OF DRAWINGS

Figure 1. Set range and measurement limits.	9
Figure 2. Nameplate – graphic version.	12
Figure 3. Gas flow rate measurement system using PYRD-2000ALW.	17
Figure 4. Measurement of gas flow rate of low pressure using PYRD-2000GALW.	18
Figure 5. Steam flow rate measurement using PYRD-2000ALW.	19
Figure 6. Liquid flow rate measurement using PYRD-2000ALW.	20
Figure 7. Liquid level measurement in open tanks using PYRD-2000ALW.	21
Figure 8. Liquid level measurement in open tanks using PYRD-2000ALW with direct chemical seal.	22
Figure 9. Liquid level measurement in open tanks using PYRP-2000ALW with direct chemical seal.	23
Figure 10. Liquid level measurement in closed tanks using PYRD-2000ALW.	24
Figure 11. Liquid level measurement in closed tanks using PYRD-2000ALW and direct chemical seal.	25
Figure 12. Liquid level measurement in closed tanks using PYRD-2000ALW and remote chemical seals.	26
Figure 13. Liquid level measurement in closed tanks using PYRD-2000ALW with direct and remote chemical seal.	27
Figure 14. Liquid level measurement in closed tanks with steam cushion using PYRD-2000ALW.	28
Figure 15. Liquid level measurement in closed tanks with steam cushion using PYRD-2000ALW with direct chemical seal.	29
Figure 16. Gas pressure measurement using PYRP-2000ALW.	30
Figure 17. Steam pressure measurement on horizontal pipeline using PYRP-2000ALW.	31
Figure 18. Steam pressure measurement on vertical pipeline using PYRP-2000ALW.	32
Figure 19. Liquid pressure measurement using PYRP-2000ALW.	32
Figure 20. Gas and steam differential pressure measurement using PYRD-2000ALW.	33
Figure 21. Liquid differential pressure measurement using PYRD-2000ALW.	34
Figure 22. Gas, steam and liquid differential pressure measurement using PYRD-2000ALW with remote chemical seals.	35
Figure 23. Installation of the flange gasket.	36

Figure 24. Transmitter PYRP-2000ALW. Wall and pipe mounting.	37
Figure 25. Transmitter PYRD-2000GALW. Wall and pipe mounting.	38
Figure 26. Transmitter PYRD-2000ALW with C type connector. Mounting on pipe.	39
Figure 27. Transmitter PYRD-2000ALW with CR connector. Mounting on pipe.	40
Figure 28. Assembly and mounting of the variant with distance separator.	41
Figure 29. Rotation of the housing.	43
Figure 30. Housing covers and sealing principle.	44
Figure 31. Electrical connection 4...20 mA of HART to transmitter.	46
Figure 32. Electrical connection 4...20 mA of HART to transmitter with local HART communication.	47
Figure 33. The maximum load resistance R_{L_MAX} [Ω] in the supply line of transmitter (Exi and Exd variant) depending on the power supply voltage U [V].	49
Figure 34. The maximum load resistance R_{L_MAX} [Ω] in the supply line of transmitter (Exd variant) depending on the power supply voltage U [V].	49
Figure 35. Change of display position and access to buttons.	52
Figure 36. Display information fields.	52
Figure 37. Set range current, saturation currents, alarm currents.	69
Figure 38. Example of the Sensor Block statuses read out from the transmitter via Raport 2.	75
Figure 39. Statuses of the analogue output block.	78
Figure 40. Device specific (summary) statuses.	79
Figure 41. Analog input block statuses.	80
Figure 42. Physical block statuses.	81
Figure 43. Pressure sensor block statuses.	82
Figure 44. Transducer block statuses.	83
Figure 45. Operational modes statuses.	83

LIST OF TABLES

Table 1. Definitions and abbreviations.	8
Table 2. Permissible supply voltages depending on the version of electronics.	48
Table 3. HART rev 5.1 communication. Commands, parameters, methods.	65
Table 4. HART rev 7 communication. Commands, parameters, methods.	66
Table 5. Numbers of error statuses displayed on the display.	76

1. INTRODUCTION

1.1. Purpose of the document

This manual covers intelligent pressure transmitters **PYRP-2000ALW** and differential pressure transmitters **PYRD-2000ALW**, **PYRD-2000YALW**, **PYRD-2000ALW** & **PYRD-2000GALW** (hereinafter referred jointly to as transmitters) in flameproof version Exd and in intrinsically safe version and in flameproof version, marked with Exi and Exd. This manual contains data, tips and recommendations for safe installation and operation of transmitters, as well as proceeding in case of possible failure.

In addition, if necessary, please refer to the Technical Information:

- Technical Information containing detailed technical data, parameters and recommendations for installation and operation.



In case of Ex types of the device, it is mandatory to read hazardous area transmitter Manual MAN.PYRP.PYRD.EX.001, containing detailed information concerning the Ex transmitters.

1.2. Symbols used

The information which is particularly relevant and useful from the point of view of the user is additionally marked with special symbols. Descriptions of the individual symbols are available on the page of this User's Manual – see ([→ Symbols used](#))

1.3. Trademarks

HART® is a registered trademark of FieldComm Group.

Windows® – is a registered trademark of Microsoft Corporation.

Google Play® – is a service registered and managed by Google® Inc

1.4. Definitions and abbreviations

Table 1. Definitions and abbreviations.

Item no.	Abbreviation	Meaning
1	LRV	“Lower Range Value” – the value of the set range expressed in physical units corresponding to the current of 4.000mA, i.e. 0% of the output setpoint. The set range cannot exceed the set range limits. The minimum width of the set range [(URV-LRV)] is limited to 10% of the base range (URL-LRL) .
2	URV	“Upper Range Value” – the value of the set range expressed in physical units corresponding to the current of 20.000mA, i.e. 100% of the output setpoint. The set range cannot exceed the set range limits. The minimum width of the set range [(URV-LRV)] is limited to 10% of the base range (URL-LRL) .
3	LRL LSL	“Lower Range Limit” or “Lower Sensor Limit” – lower limit of set range expressed in physical units. Value (URL-LRL) or (USL-LSL) is referred to as the base transmitter range.
4	URL USL	“Upper Range Limit” or “Upper Sensor Limit” – upper limit of set range expressed in physical units. Value (URL-LRL) or (USL-LSL) is referred to as the base transmitter range.
5	LPL	“Lower Processing Limit” – lower limit of digital processing of measured value. The transmitter processes a digital measurement up to 50% of the base range width below the lower limit of set range LRL (LSL) . After reaching the LPL and when below this value up to LSAL , the transmitter freezes the refreshing of digital value of the measurement. In this situation, error number E0128 will be displayed on the display and diagnostic alarm mode I_AL < 3.600 mA will be set. Additionally, collective status PV_OUT_OF LIMITS and status PV_LOW_LIMITED in the Transducer Block will be set, which can be read out in the diagnostic tab via HART communication.
6	UPL	“Upper Processing Limit” – upper limit of digital processing of measured value. The transmitter processes a digital measurement up to 50% of the base range width above the upper limit of set range URL (USL) . After reaching the UPL and when above this value up to USAL , the transmitter freezes the refreshing of digital value of the measurement. In this situation, error number E0128 will be displayed on the display and diagnostic alarm mode I_AL < 3.600 mA will be set. Additionally, collective status PV_OUT_OF LIMITS and status PV_HIGH_LIMITED in the Transducer Block will be set, which can be read out in the diagnostic tab via HART communication.
7	LSAL	“Lower Saturation Limit” – lower limit of the A/D transmitter processing range. The lower limit of the A/D transmitter saturation is on the pressure/differential pressure scale below the LPL point and is associated with the minimum pressure, at which the analogue-digital pressure measurement transmitter reaches the lower limit of the processing capacity. The exact determination of this pressure is not possible, however usually the pressure does not exceed the pressure corresponding to 200% of the base range width (URL-LRL) below the lower limit of the digital processing of measured LPL value. After reaching LSAL and when below this value, error number E0136 will be displayed on the display and the diagnostic alarm mode I_AL < 3.600 mA will be activated. Additionally, collective status SENSOR_FAULT , PV_OUT_OF LIMITS , status NOREF+ERR@AIN1_AD7794 in the Sensor Block and PV_LOW_LIMITED in the Transducer Block will be set, which can be read out in the diagnostic tab via HART communication.
8	USAL	“Upper Saturation Limit” – upper limit of the A/D transmitter processing range. The upper limit saturation point of A/D transmitter is on the pressure/differential pressure scale above the UPL point and is associated with the maximum pressure at which the analogue-digital pressure measurement transmitter reaches the upper limit of the processing capacity. The exact determination of this pressure is not possible, however usually the pressure does not exceed the pressure corresponding to 200% of the base range width (URL-LRL) above the upper limit of the digital processing of measured UPL value. After reaching USAL and when above this value, error number E0136 will be displayed on the display and diagnostic alarm mode I_AL < 3.600 mA will be activated. Additionally, collective status SENSOR_FAULT , PV_OUT_OF LIMITS , status NOREF+ERR@AIN1_AD7794 in the Sensor Block and PV_HIGH_LIMITED in the Transducer Block will be set, which can be read out in the diagnostic tab via HART communication.

1.5. Transmitter set range

The figure below shows the transmitter set range and limits related to allowable set range, digital processing range and saturation limits of A/D pressure measurement transducer. As standard, values of 4 mA/20 mA currents are assigned to LRV/URV points. In order to obtain reverse characteristics, it is possible to reverse the assignment so that the LRV/URV points are assigned to 20 mA/4 mA currents. Therefore, the description in the figure below takes into account this situation by identifying a point corresponding to 4 mA as LRV/URV. For a point of 20 mA, the designation is URV/LRV.


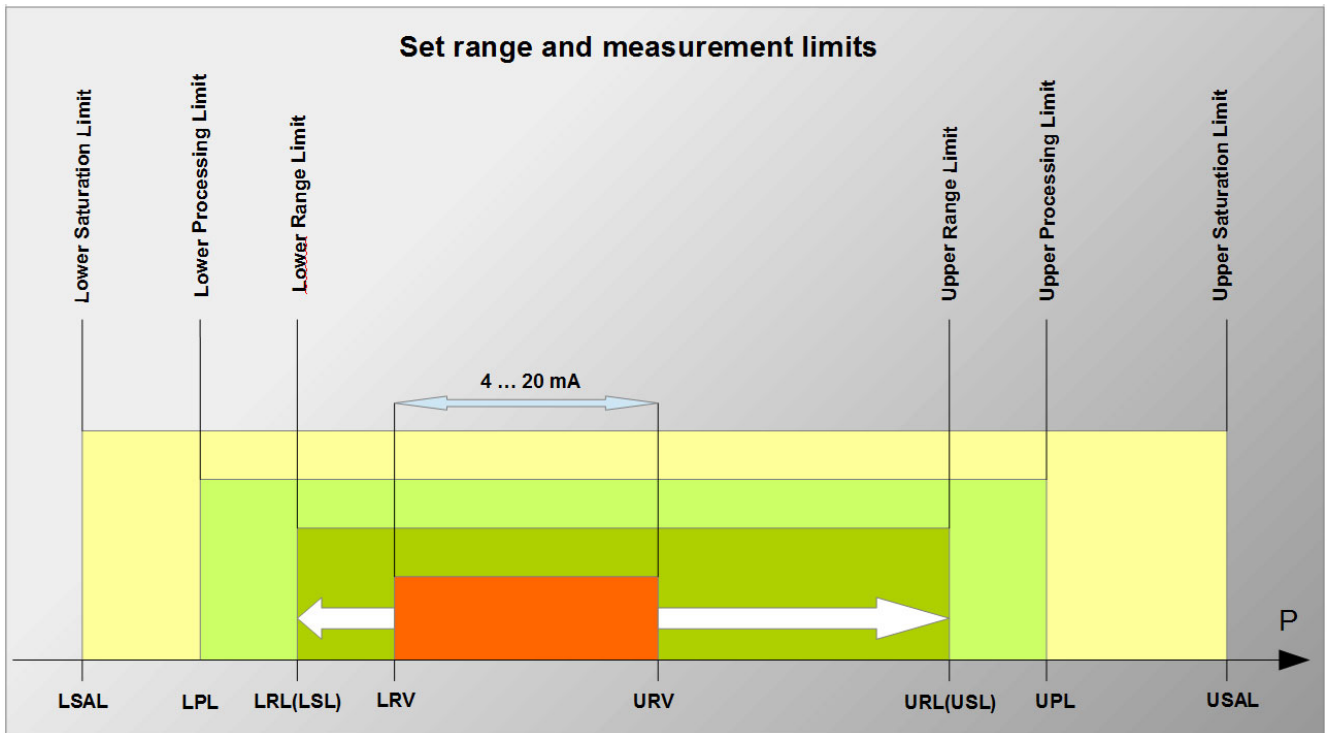


Figure 1. Set range and measurement limits.

2. SAFETY



- The installation and start-up of the device and any operations related to operation shall be carried out after thorough examination of the contents of this Manual and the instructions related thereto;
- installation and maintenance should be carried out by qualified personnel having the required authorisation to install electrical and measuring devices;
- the transmitter shall be used according to its intended purpose (→ [Intended use and features](#)) in line with the permissible parameters specified on the nameplate (→ [Transmitter identification](#));
- Hazardous area design characteristics employed by the manufacturer may be less effective if the transmitter is operated in a manner not consistent with its intended purpose;
- before installing or disassembling the transmitter, it must be disconnected from the power source;
- no repairs or alterations to the transmitter electronic system are permitted. Assessment of damages and possible repair may only be performed by the manufacturer;
- do not use instruments if damaged. In case of failure, the device must be disconnected from operation;
- When the transmitter is fitted with process connector of C and CR type, it is unacceptable to loosen the fixing screws of the connector cover (item 1). Any tampering will result in a loss of warranty.

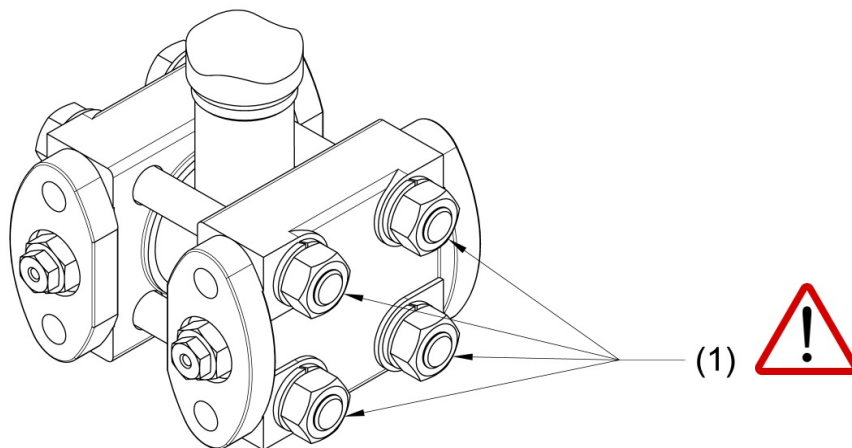

3. LIST TO CHECK COMPLETENESS OF DELIVERY

With the transmitter the user receives the following:

- a) Declaration of conformity (on request).
- b) Copies of certificates (on request).
- c) User's Manual MAN.PYRP.PYRD.EX.002.

Additionally, in the case of explosion-proof transmitters:

- d) Manual of Explosion-proof Variant MAN.PYRP.PYRD.EX.001.

Items b)–d) are available at www.pyropress.com.

On the manufacturer's website you can also find:

- Technical Information.

4. TRANSPORT AND STORAGE

4.1. Delivery check

After receiving the delivery of the equipment, it is necessary to:

- make sure that the packaging and its contents were not damaged during transportation.
- check the completeness and correctness of the received order, and make sure no parts are missing.

4.2. Transport

Transport of transmitters shall be carried out with the use of covered means of transport, in original packages or process connectors (with diaphragm provided with protection during transport). The packaging shall be protected against movement and direct impact of atmospheric factors.



- The housing, diaphragm and capillaries may be subject to damage; in such a case, there is a risk of injury from damaged components.
- It is not allowed to use capillaries as additional support for diaphragm chemical seals.

4.3. Storage

Transmitters shall be stored in a factory packaging, in a roofed room, without vapours and aggressive substances. They shall be also protected against mechanical impact.

Allowable range of storage temperature:
-40 ... 85°C (-40 ... 185°F).



Exd transmitters have a thermal fuse which trips at $+87 \pm 2^{\circ}\text{C}$. Exceeding the temperature of $+85^{\circ}\text{C}$ may result in disconnection of the transmitter power supply circuit and the need to repair the transmitter in the manufacturer.

5. GUARANTEE

The manufacturer provides the guarantee under the terms and conditions specified in the terms of sale.



The guarantee shall be invalid if the device

- 1) Is used not as intended,
- 2) User fails to comply with instruction in this User's Manual,
- 3) is installed by unqualified personnel
- 4) is modified in a way that affects the structure of the transmitter.

6. IDENTIFICATION

6.1. Manufacturer's address

PyroPress Ltd
 Bell Close
 Plymouth
 PL7 4JH
 United Kingdom
www.pyropress.com

6.2. Transmitter identification

Each transmitter is equipped with a nameplate showing the following data:

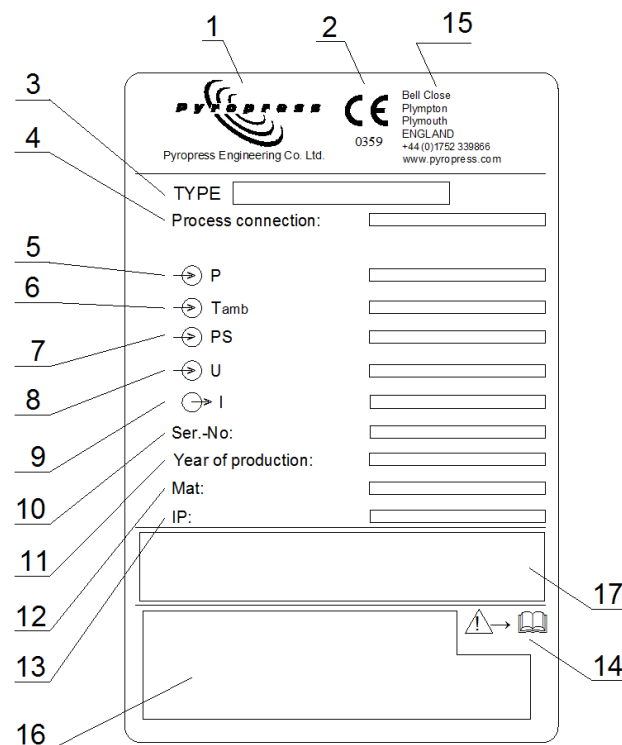


Figure 2. Nameplate – graphic version.

1. Logo and name of manufacturer.
2. CE mark & number of the notified body
3. Transmitter type.
4. Type of process connector.
5. Base range.
6. Permissible range of ambient temperature.
7. Maximum static pressure.
8. Value of supply voltage.
9. Output signal.
10. Transmitter serial number.

11. Year of manufacture.
12. Material of wetted parts.
13. IP protection rating.
14. Note about the obligation to read the manual.
15. Manufacturer's address.

Additionally the specific types of transmitters have the following data:

16. Designation of the explosion-proof type, designation of a certificate – for transducers with ATEX and/or IECEx certificate.
17. Data provided in case of types compliant with other directives and certificates.

Additionally, for Exd transmitters, on the plate the cable entry thread is indicated.

6.3. Identification of sensor/measuring head type

Each transmitter is marked on the housing with a unique number to provide full traceable identification.

6.4. CE mark, declaration of conformity

The device has been designed to meet the highest safety requirements. It has been tested and was shipped from the factory in a condition that is safe for operation. The device complies with the applicable standards and regulations listed in the EU Declaration of Conformity, and therefore complies with the statutory requirements of EU directives. PyroPress Ltd confirms the compliance of test results of the device with the requirements by placing the CE mark on it.

7. Construction

The basic components of the transmitter include a two-chamber housing with microprocessor processing unit and an anti-interference filter in separate chambers and a measuring head.

7.1. Intended use and features

Pressure transmitters PYRP-2000ALW and differential pressure transmitters PYRD-2000ALW, PYRD-2000YALW, PYRD-2000ALW & PYRD-2000GALW are designed for measurements in industrial automation systems, where the processed values of pressures (over- and under pressure) or absolute and differential pressures for: gases, steam and liquids are used.



Transmitters are equipped with a variety of process connections. Depending on the application and the medium measured, they can be installed with direct or remote chemical seals, manifold valve or shut-off valves. This allows for measurement of various media such as: viscous, aggressive media and media at high and low temperatures. Shut-off valves are used to isolate the transmitter from the measuring medium, and manifold valves allow the transmitter to be started and zeroed at static pressure.



The PYRD-2000ALW transmitters can be equipped with a number of different types of chemical seals. Depending on the application and the medium being measured, the transmitters are installed with direct or remote chemical seals. This makes it possible to measure various media, such as dense, aggressive media, as well as high and low temperature media.



The PYRD-2000GALW transmitters are designed for measuring pressure and differential pressure of non-aggressive gases. Typical applications are measurements of blast pressure, chimney drafts, pressure or under pressure in combustion chambers.



Transmitters provide output signal 4...20 mA (20...4 mA in an inverted system), in a two-wire power supply system (current loop). Communication with the transmitter is ensured by using modulation FSK BELL202 with HART 5.1 or HART 7 protocol. The configuration of the transmitters is performed by using:

- local keypad;
- KAP03 or other type communicator using DDL libraries;
- computer with Raport2 and HART/RS232 or HART/USB converter;
- computer with software using DDL or DTM libraries;

7.2. Transmitter housing

The two chamber housing of transmitters are made of high pressure aluminium alloy cast or acid-resistant steel. The covers are threaded and have locking facilities, one cover has a small glass window.

The housing has an internal and external earth clamp. When the cover with the glass window unscrewed, it is possible to change the position of the display module by 15° increments. In the other chamber there is an anti-interference filter board with a terminal block. Electrical connections (1/2NPT or M20x1.5) are present, enabling the fixing of glands for connection cables or blanking plugs to seal unused entries.

7.3. Processing unit

The sensor provides an electric signal proportional to the pressure and temperature value. This is converted into a digital form and in this form, via an optoelectronic barrier, is transmitted to the main processor, which computes the exact pressure and temperature values. Process variables are displayed on LCD and the pressure value is transformed to 4...20 mA analogue signal. The BELL202 modem and the implemented HART stack rev. 5.1 or HART 7 enables communication with the transmitter. The electrical connector of the transmitter is protected by an anti-interference and surge protection filter. Transmitters monitor the operation of their processors and if malfunctions occur internal signals are initiated, displaying messages on the LCD whilst simultaneously setting low alarm current in the current loop.

7.4. Sensor

The sensor is a piezoresistive silicon sensor separated from the measured medium by a diaphragm and fill. Sensors have integral process connectors. Information on the process connectors are provided in data sheets and in Technical Information.

7.5. Chemical seals

Chemical seals are used for the measurement of chemically aggressive, dense, food media or media with temperatures exceeding the temperature of the sensor and transmitter. Information regarding the range of chemical seals are included in the data sheets and in Technical Information.

8. INSTALLATION

8.1. General recommendations



It is recommended that the impulse tubes are installed at a gradient (vertical and horizontal orientation should be avoided unless the impulse tube is looped). Mount the impulse tubes as short as possible with a sufficiently large diameter, without sharp bends to avoid the possibility of clogging. The configuration of impulse tubes and valve connection system shall be selected taking into account the measurement conditions.

8.1.1. Transmitter installation site

Pressure and differential pressure transmitters can be installed both indoors and outdoors. If the transmitter is to operate in open air, it is recommended that it be placed in a box or under cover. The location of the transmitter shall provide access for operators and protection against mechanical exposure.

8.1.2. Low temperature media applications



Transmitters must be protected to ensure that medium does not freeze. In such applications it is necessary to provide protection against freezing. This applies especially to the installation of transmitters in open air.

Impulse tubes filled, for example, with a mixture of ethylene glycol and water or other liquid with the solidification temperature lower than the ambient temperature, are used as protection. It is also possible to use the thermal insulation methods. However, it is important to note that the thermal insulation of transmitter and impulse tubes can only protect them against short-term operation at low temperatures. When low temperatures continue for a long period the transmitter and impulse tubes must be heated.

8.1.3. High temperature media applications

Process media temperature must not exceed **+85°C**. Impulse tubes or syphon loops shall be used to protect the sensor experiencing higher temperatures than **+85°C**. Chemical seals with radiators can be used to dissipate heat and reduce the temperature.

Information regarding this can be found in data sheets and Technical Information.

8.1.4. Mechanical vibrations, surge

Where excessive vibrations may occur transmitters shall be installed with suitable mounting fixings and flexible impulse tubes. In applications where this is not possible mounting the transmitter remotely and using chemical seals can be considered. Information regarding this can be found in data sheets and Technical Information.



Before installation an assessment should be made to ensure the transmitter is not at risk to impacts or strikes by heavy objects which may cause Damage to the housing or affect the integrity of the process system. If there is a possibility of the above protection shields or process instrument cabinets should be used to prevent damage and in cases prevent sparking from occurring.

8.2. Mounting and process connection of transmitters

8.2.1. Gas and steam flow rate measurement system

Measurement of gas flow rate

Transmitter PYRD-2000ALW must be installed above the measuring point so that the condensate can flow out of the process capillaries.

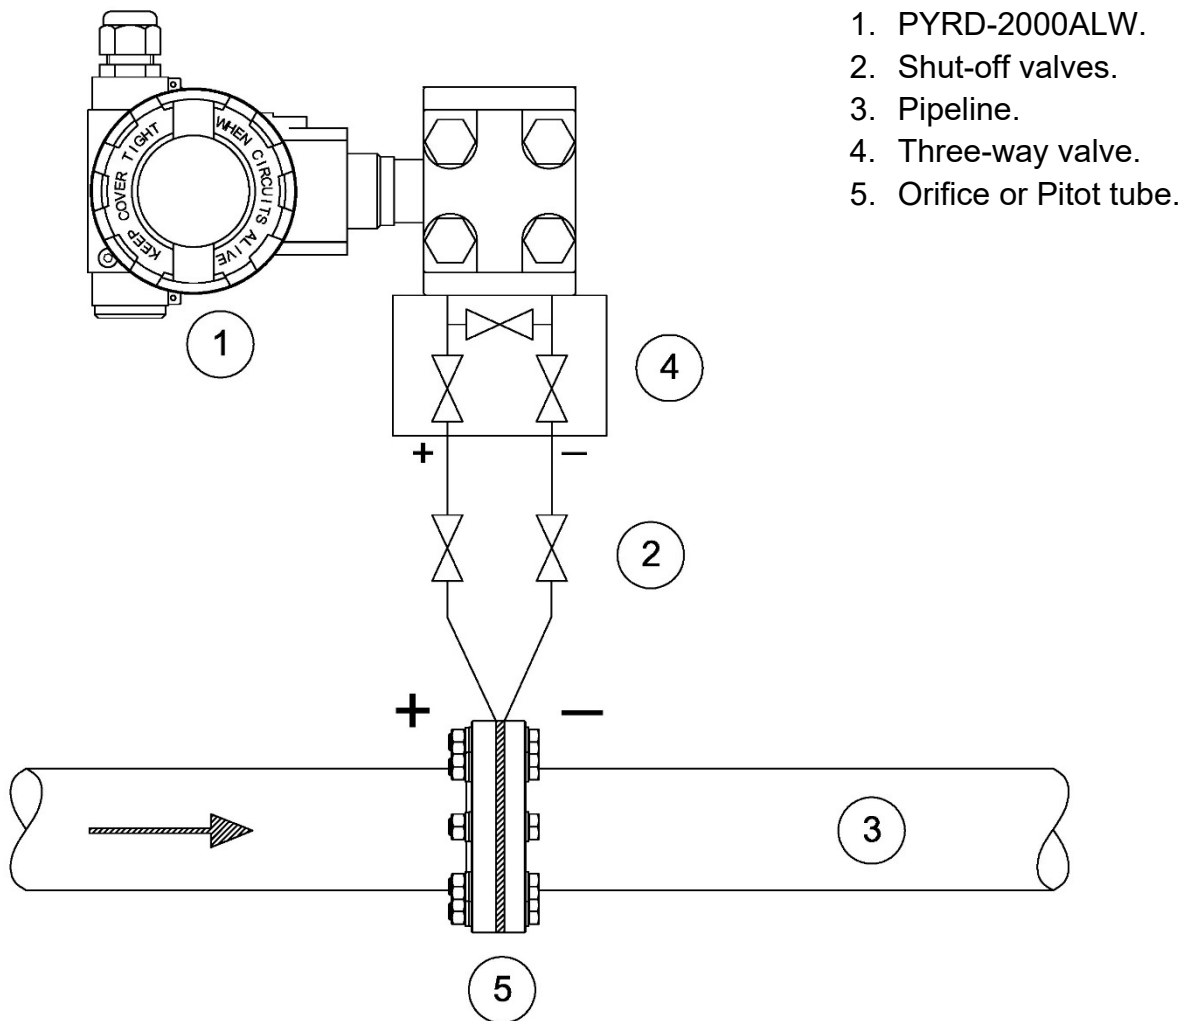


Figure 3. Gas flow rate measurement system using PYRD-2000ALW.

Measurement of gas flow rate of low pressure

Transmitter PYRD-2000GALW must be installed above the measuring point so that the condensate can flow out of the process capillaries.

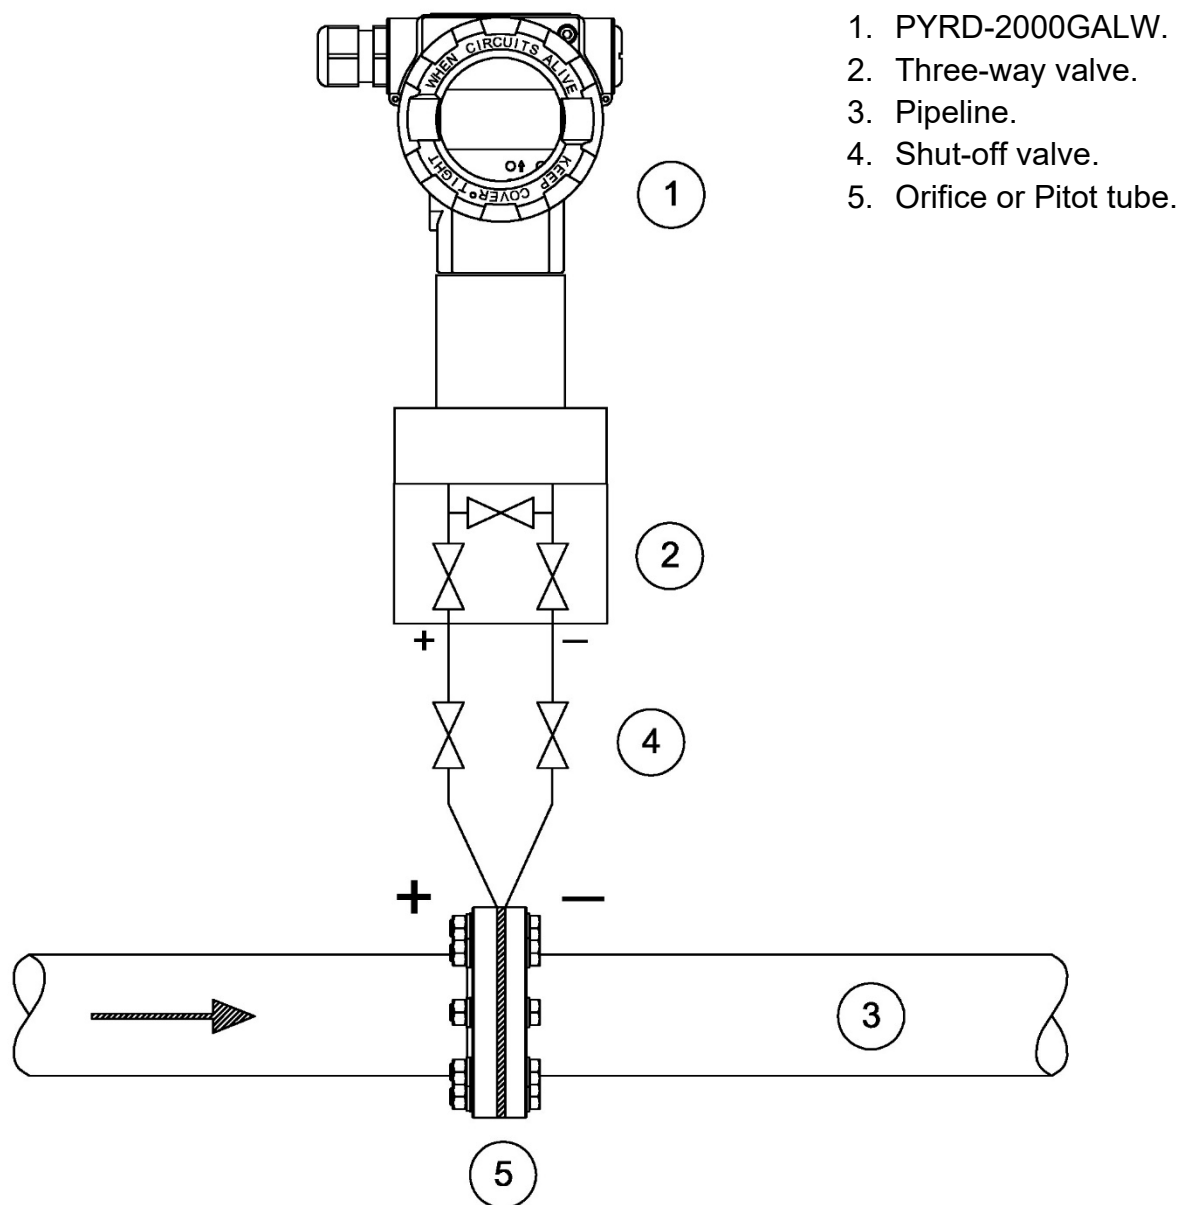


Figure 4. Measurement system of **gas flow** rate of low pressure using PYRD-2000GALW.

Measurement of steam flow

Transmitter PYRD-2000ALW must be installed below the measuring point.

Traps (siphons) should be located at the same level as the sampling points and at the same distance from the transmitter.

Before turning the device on, fill the impulse tubes up to the height of condensate traps.

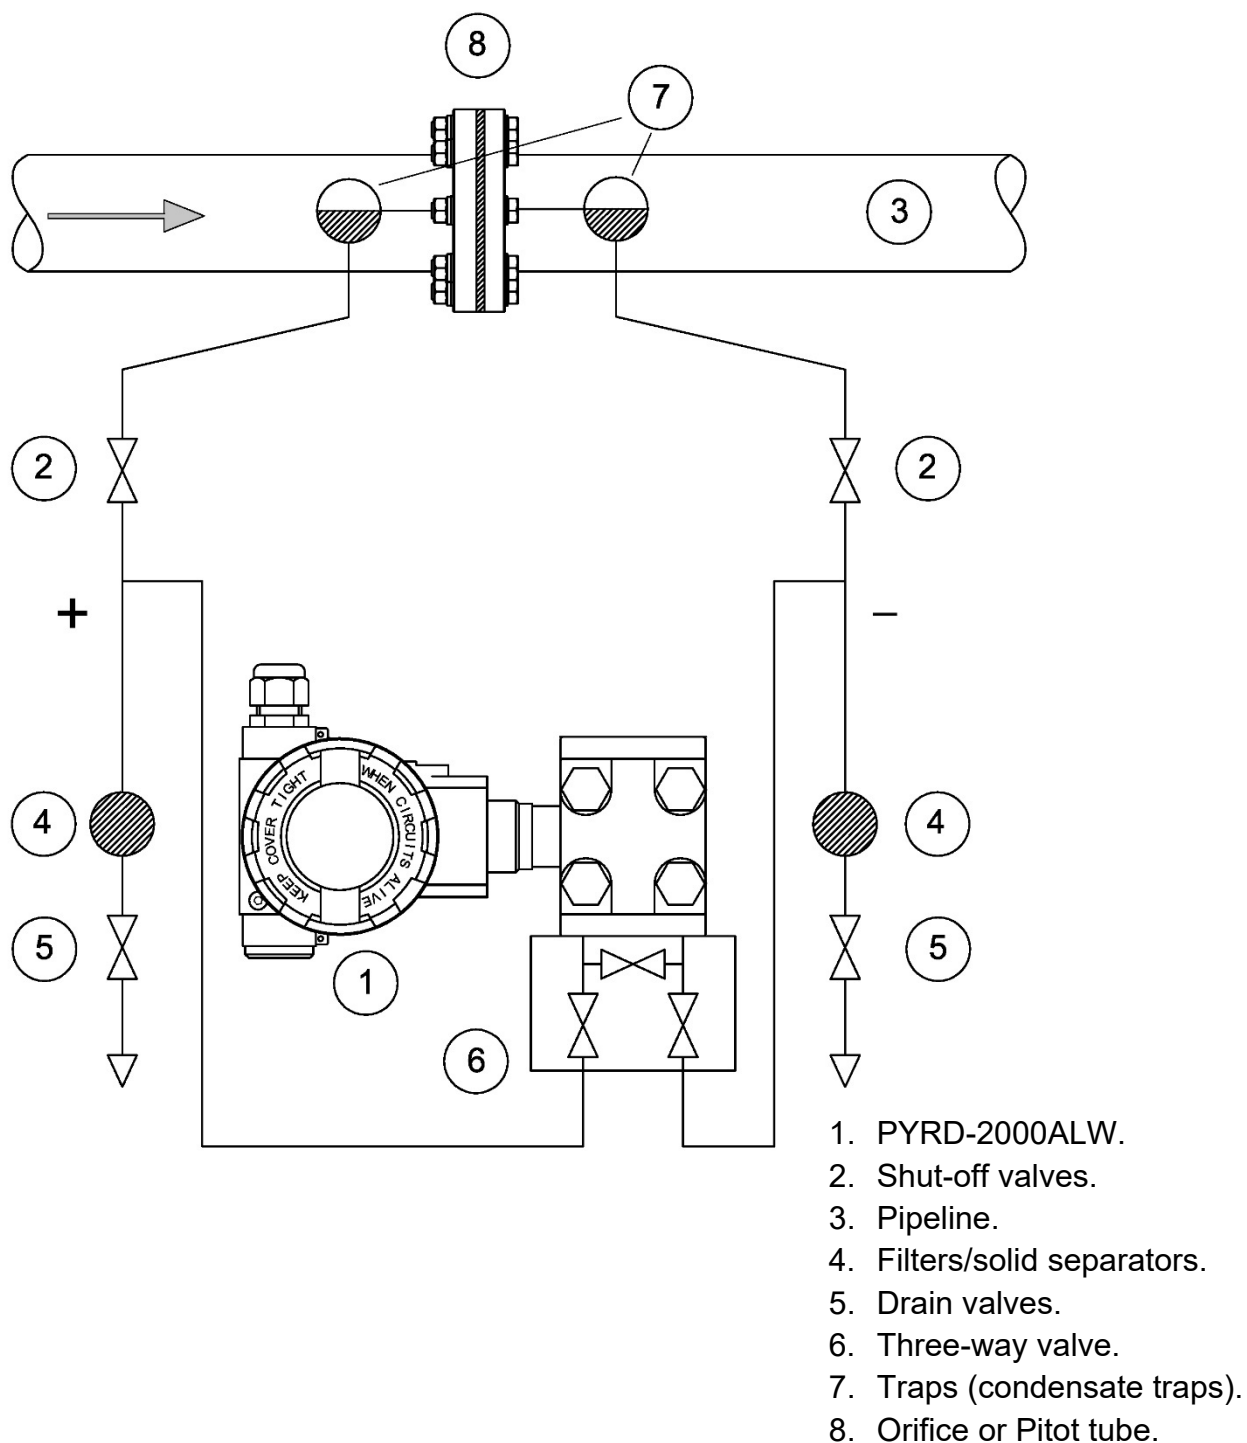


Figure 5. Steam flow rate measurement using PYRD-2000ALW

8.2.2. Liquid flow measurement

Transmitter PYRD-2000ALW must be mounted below the measuring point so that the impulse tubes are always filled with liquid and the gas bubbles can freely escape into the process pipe.

If the measured medium contains particles, it is useful to install filters and drain valves to remove deposits.

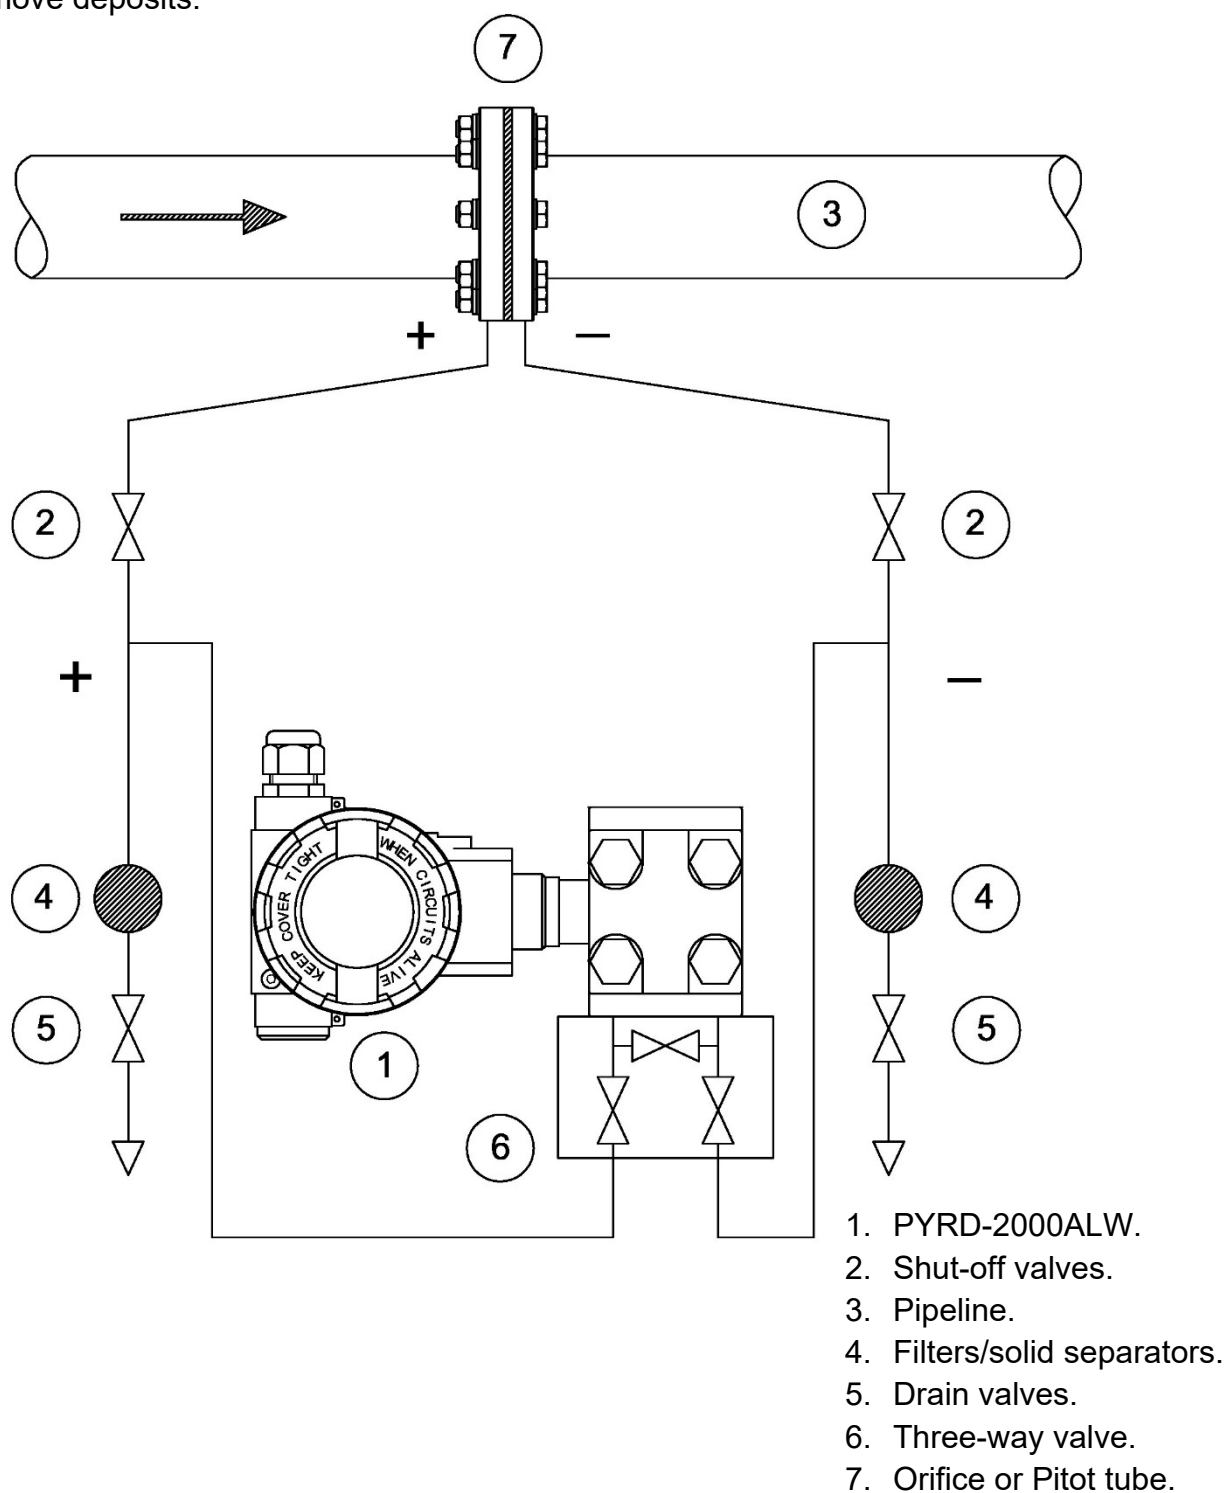


Figure 6. Liquid flow rate measurement using PYRD-2000ALW.

8.2.3. Liquid level measurement in open tanks

Transmitter PYRD-2000ALW must be mounted below the measuring point so that the impulse tubes are always filled with liquid.

The negative side of pressure connector is open to atmosphere.

If the measured medium contains particles, it is useful to install filters and drain valves to remove deposits.

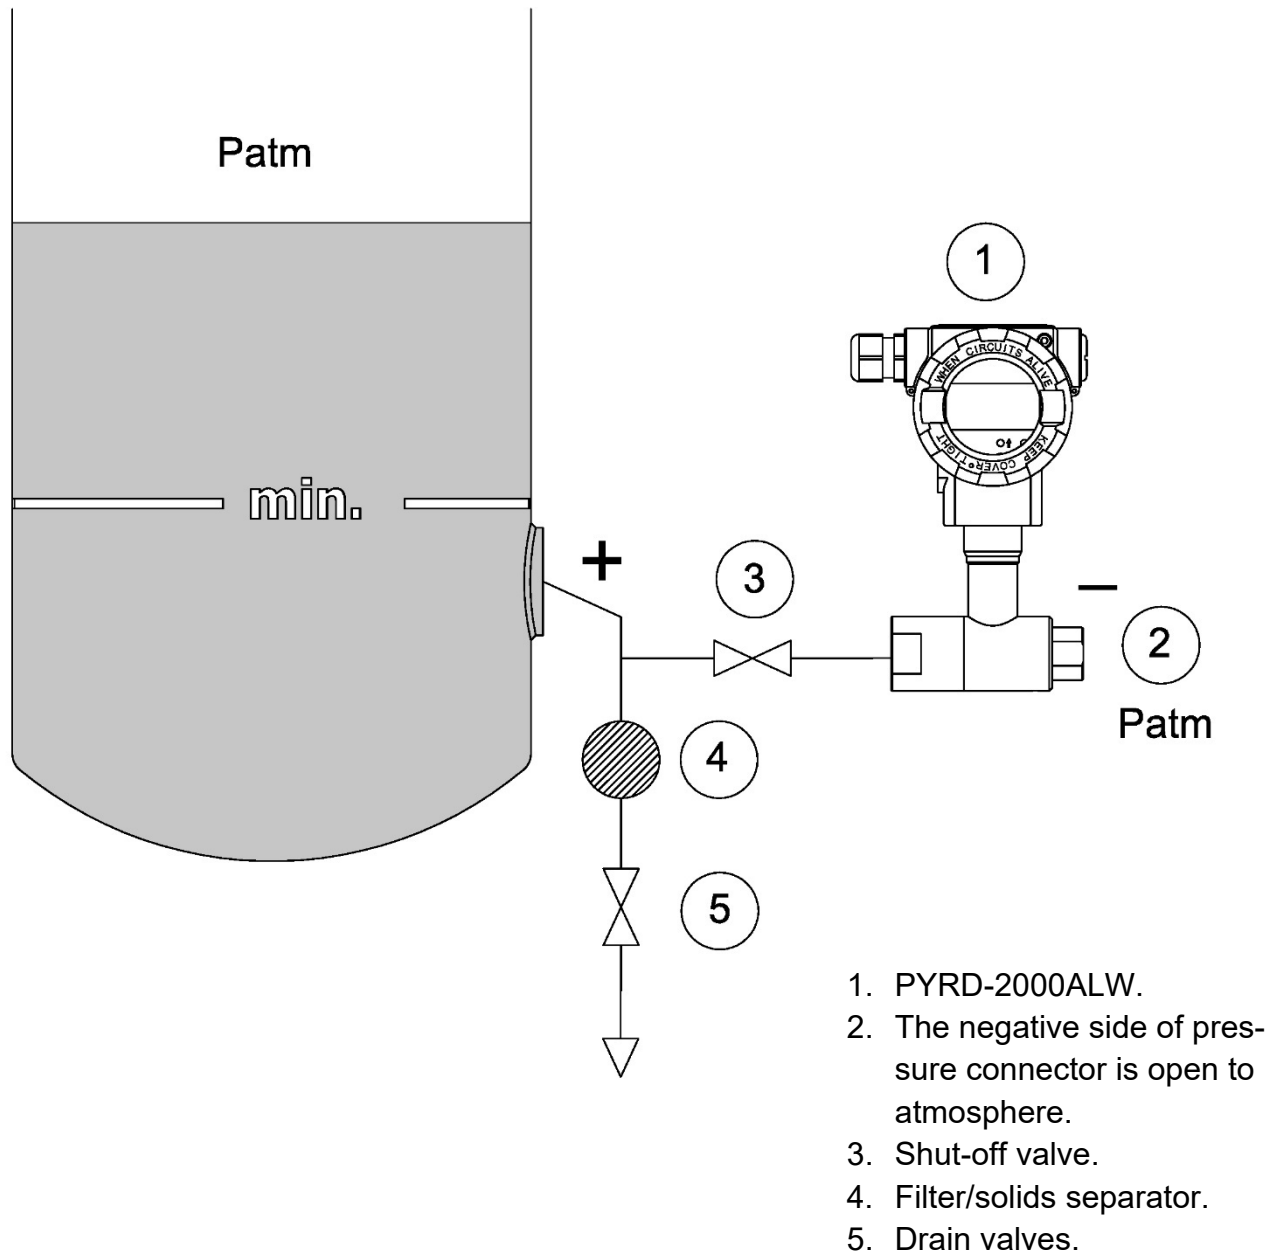


Figure 7. Liquid level measurement in open tanks using PYRD-2000ALW.

Liquid level measurement in open tanks with the use of direct chemical seal

Transmitter PYRD-2000ALW shall be mounted directly into the tank using an integrated chemical seal installed below the minimum liquid level.

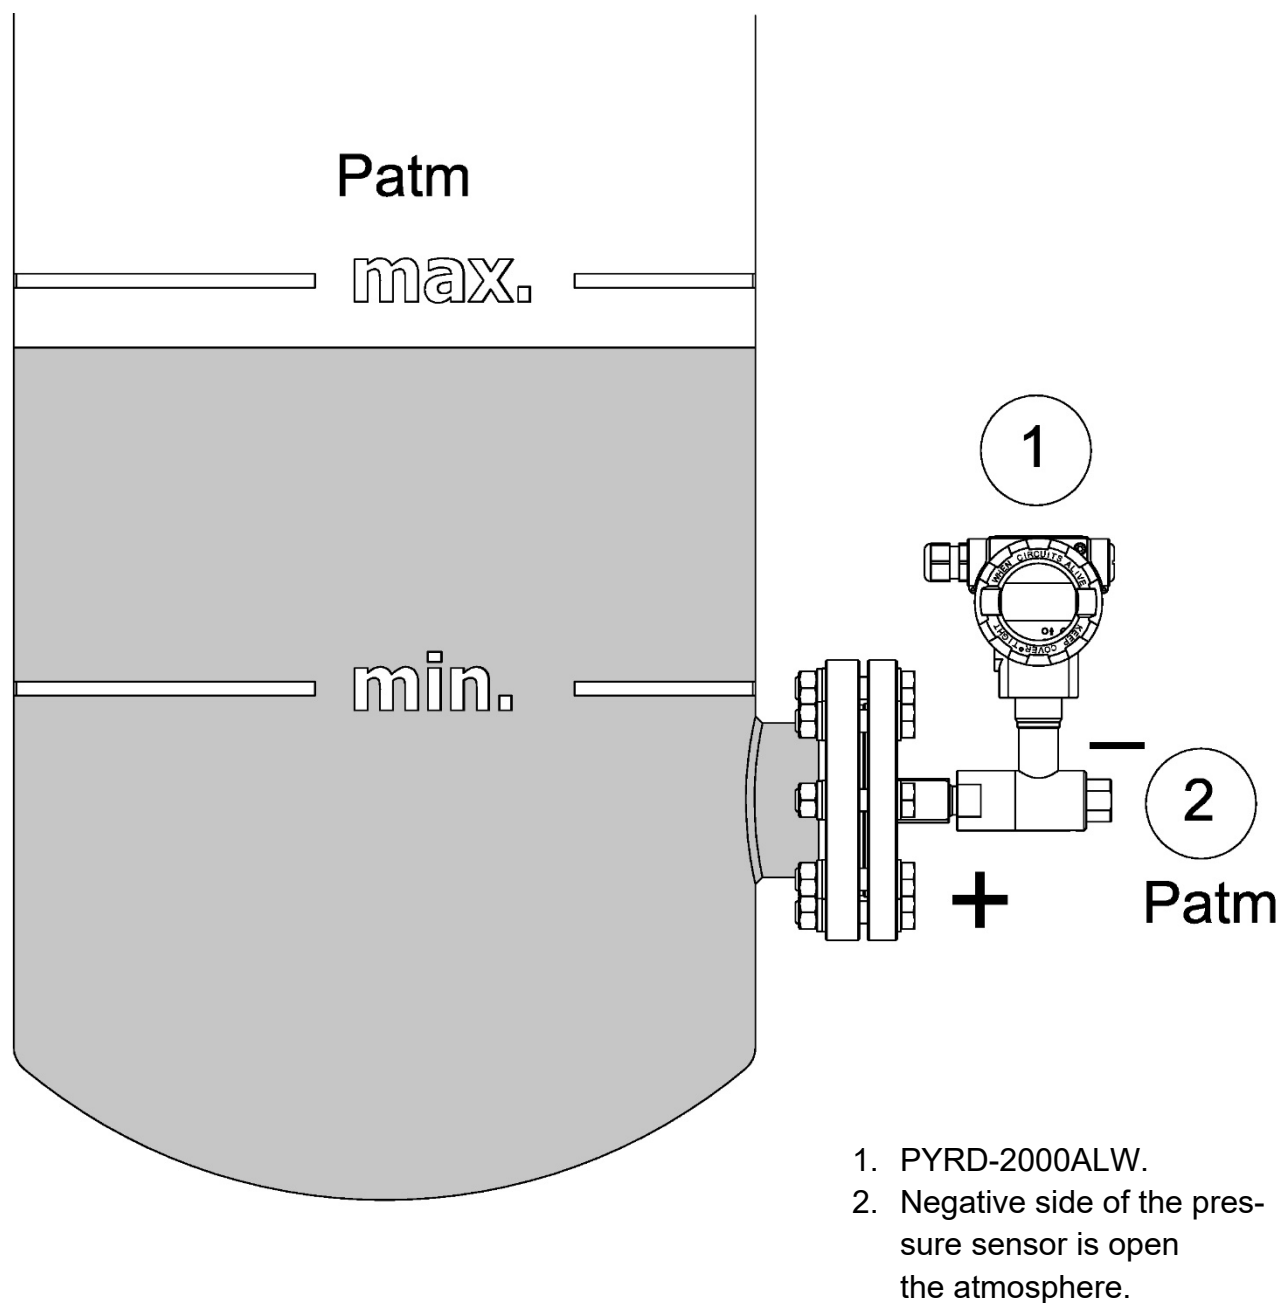


Figure 8. Liquid level measurement in open tanks using PYRD-2000ALW with direct chemical seal.

Transmitter PYRP-2000ALW Safety shall be mounted directly into the tank using an integrated separator always below the minimum liquid level.

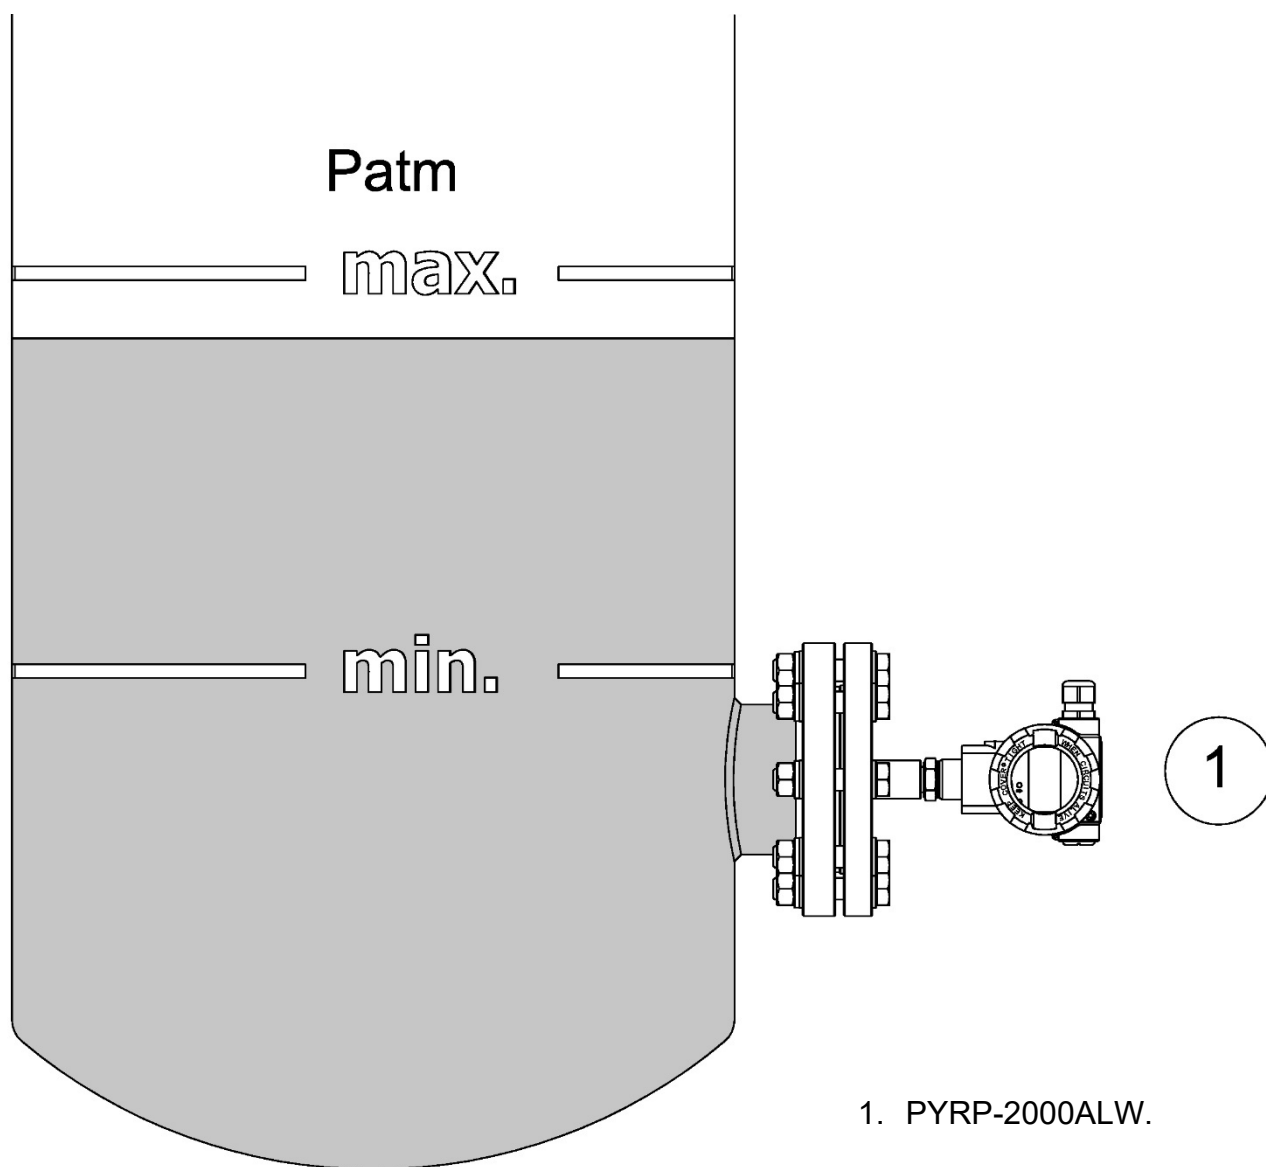


Figure 9. Liquid level measurement in open tanks using PYRP-2000ALW with direct separator.

8.2.4. Liquid level measurement in closed tanks

Transmitter PYRD-2000ALW must be mounted below the minimum measuring point to ensure that the impulse tubes are filled with liquid.

The negative side of pressure sensor must be connected above the maximum liquid level.

If the measured medium contains particles, it is useful to install filters and drain valves to remove deposits.

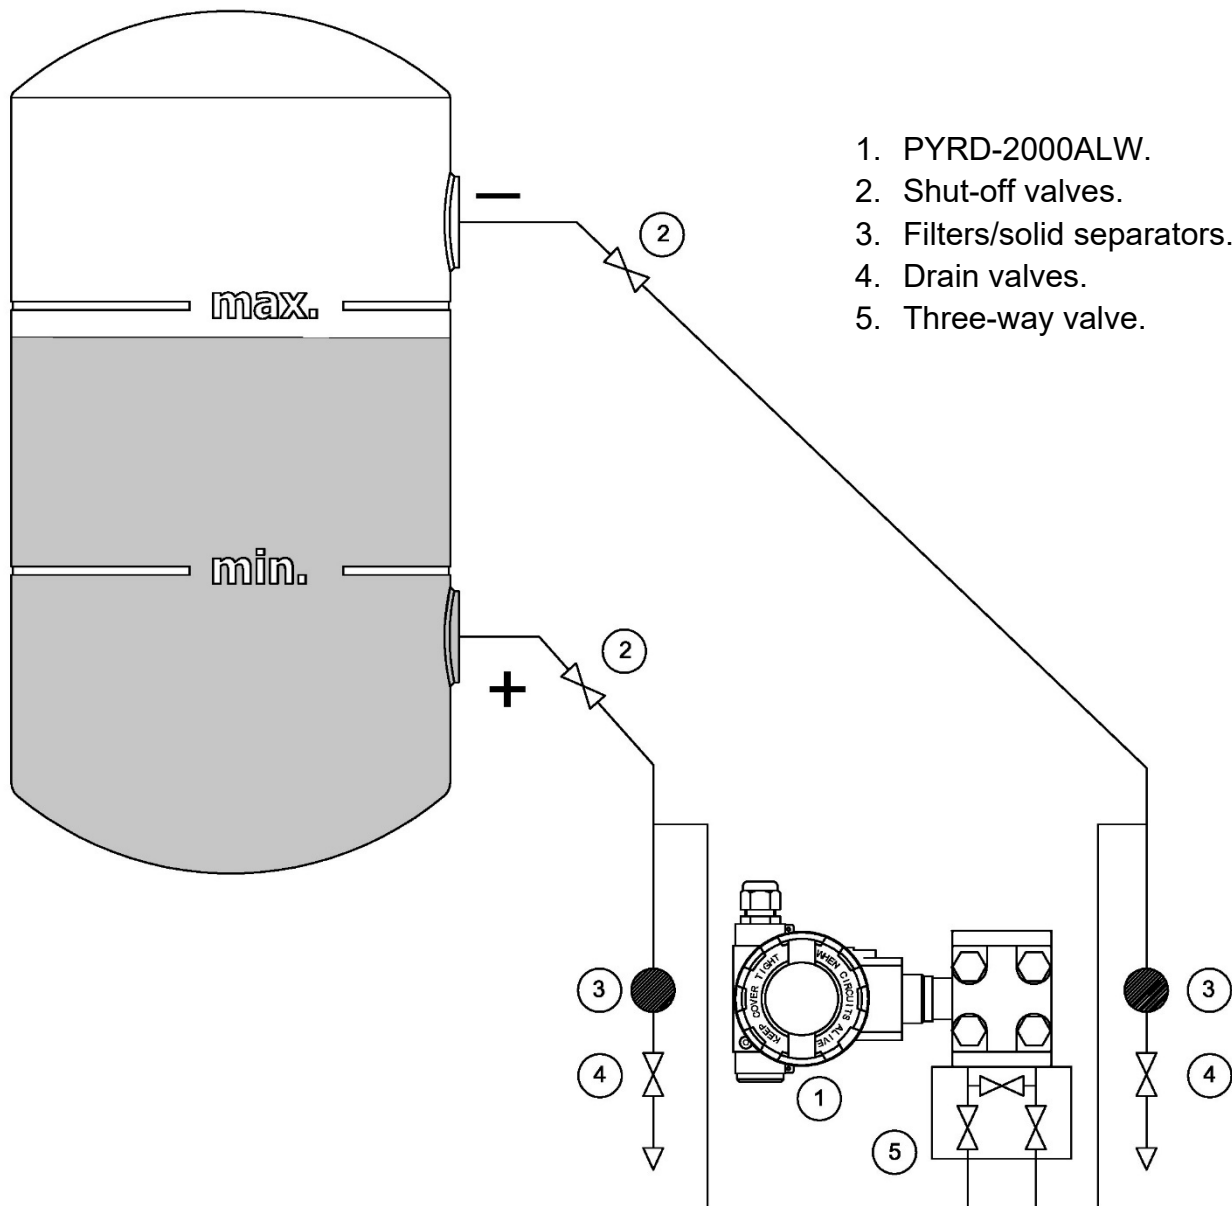


Figure 10. Liquid level measurement in closed tanks using PYRD-2000ALW.

Liquid level measurement in closed tanks with the use of direct chemical seal

Transmitter PYRD-2000ALW must be mounted directly into the tank using a chemical seal. The negative side of pressure sensor must be connected above the maximum liquid level. If the measured medium contains particles, it is useful to install separators and drain valves to remove deposits.

1. PYRD-2000ALW.
2. Filters/solid separators.
3. Drain valve.
4. Shut-off valve.

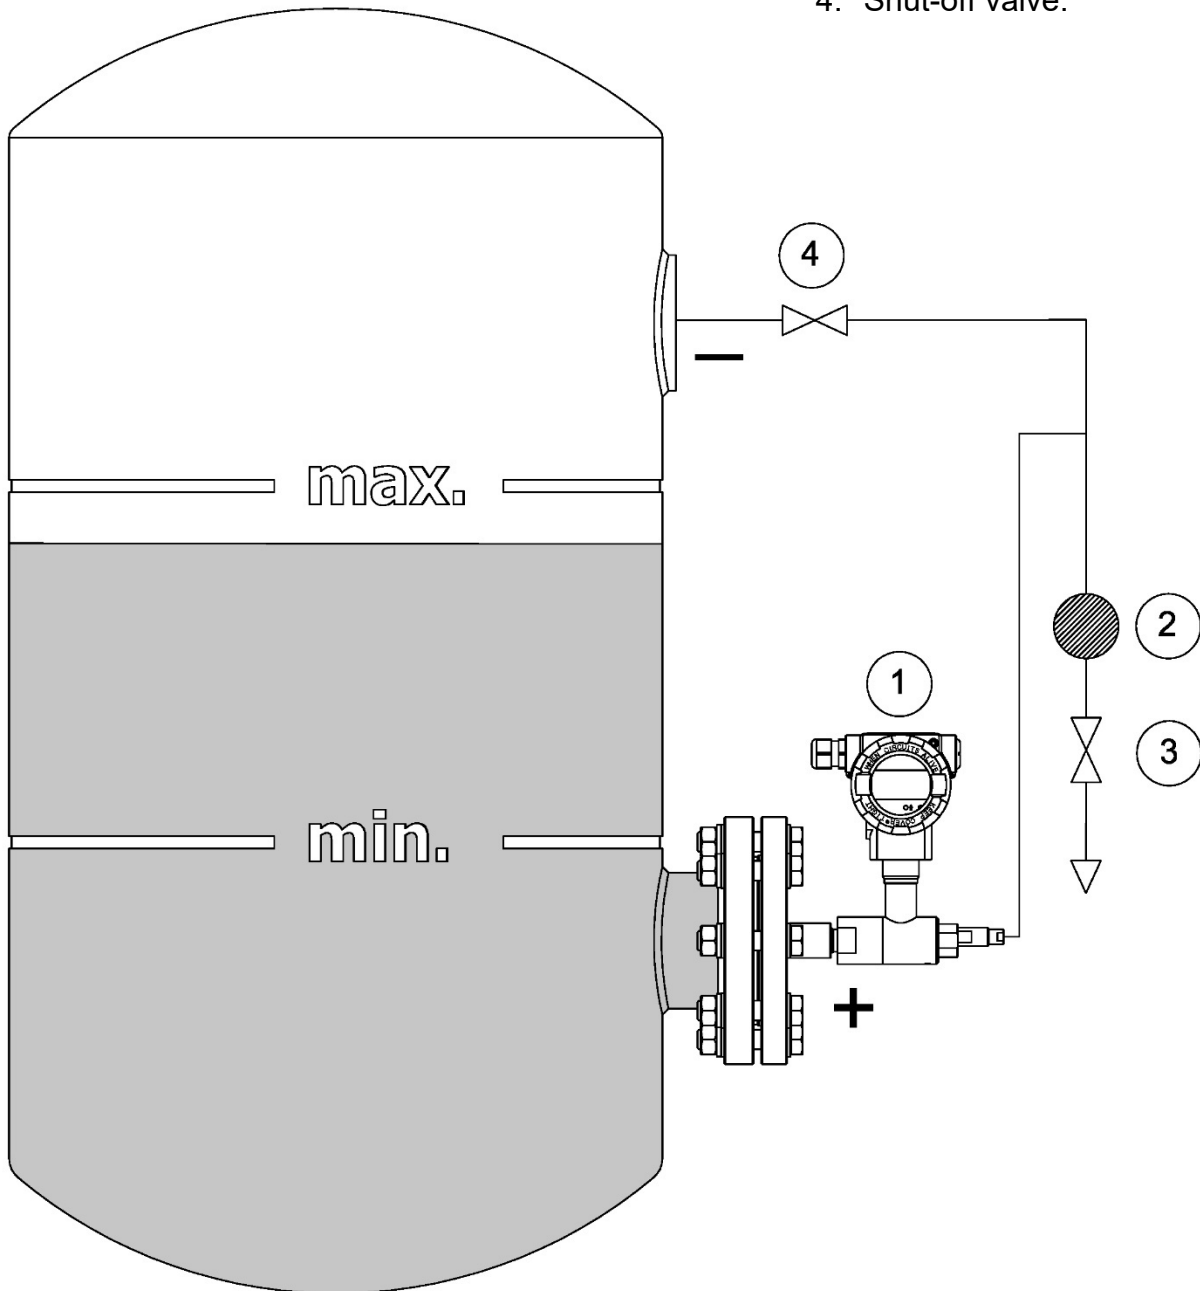


Figure 11. Liquid level measurement in closed tanks using PYRD-2000ALW and direct chemical seal.

Liquid level measurement in closed tanks with the use of chemical seals

Transmitter PYRD-2000ALW must be installed below the mounting point of the remote chemical seals.

The capillaries attaching the chemical seal to the transmitter must be installed in an environment where the ambient temperature on each leg are the same.

The correct measurement is ensured only between the upper edge of the lower separator and the lower edge of the upper separator.

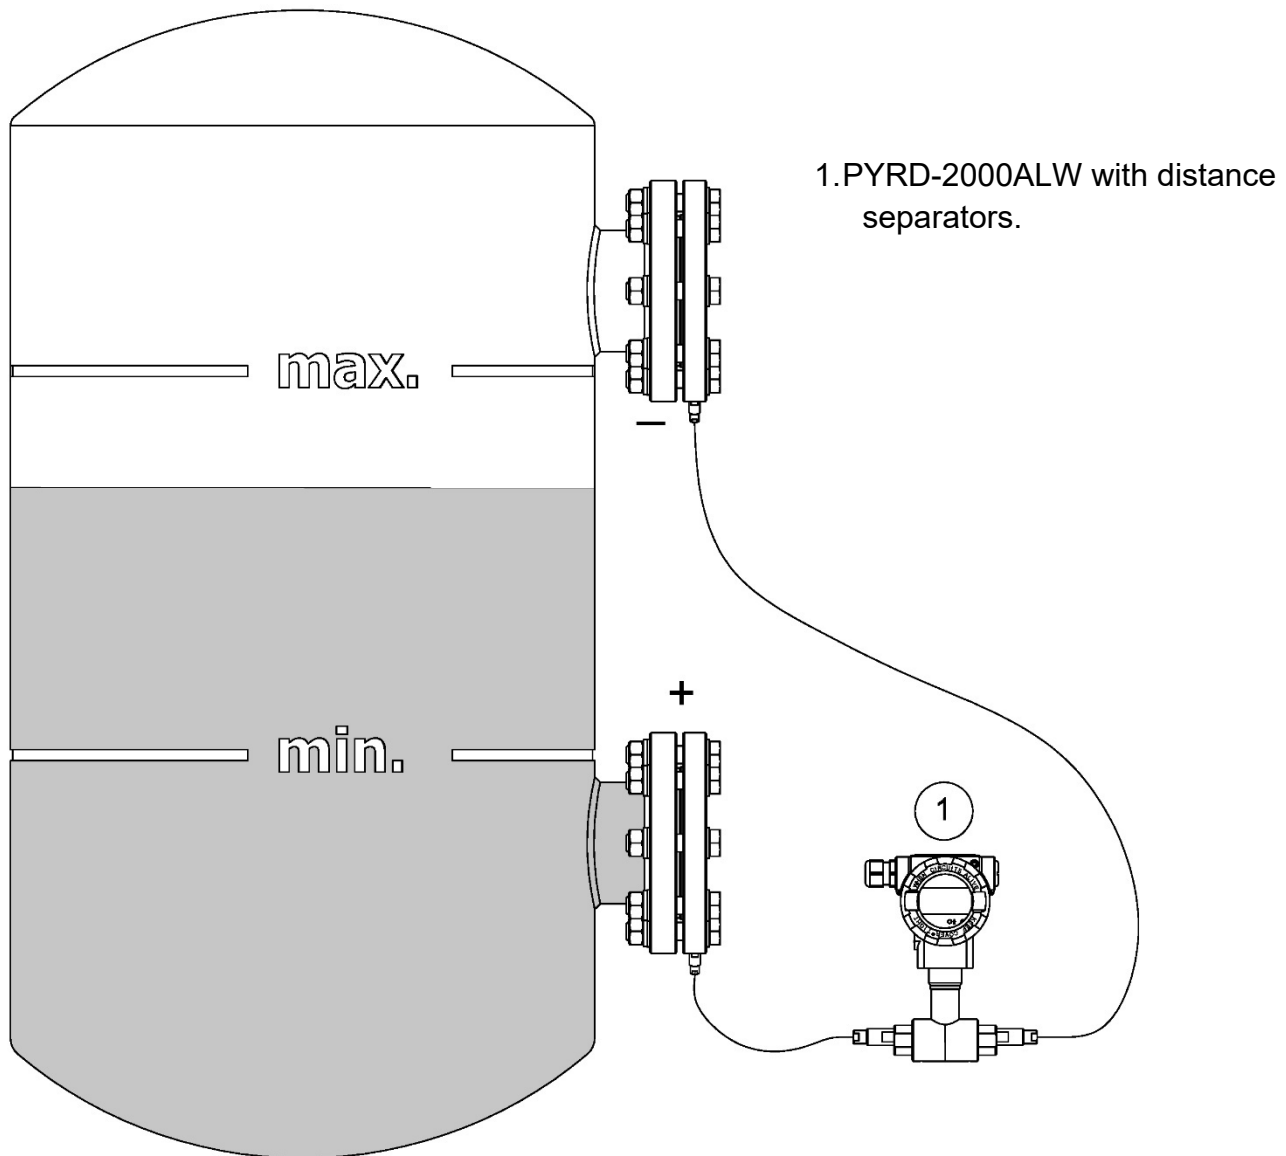


Figure 12. Liquid level measurement in closed tanks using PYRD-2000ALW and remote Chemical seals.

Liquid level measurement in closed tanks with the use of one direct and one remote chemical seal

Transmitter PYRD-2000ALW must be mounted directly into the tank using a chemical seal. The negative side of pressure connector must be connected via capillary to a point above the maximum liquid level.

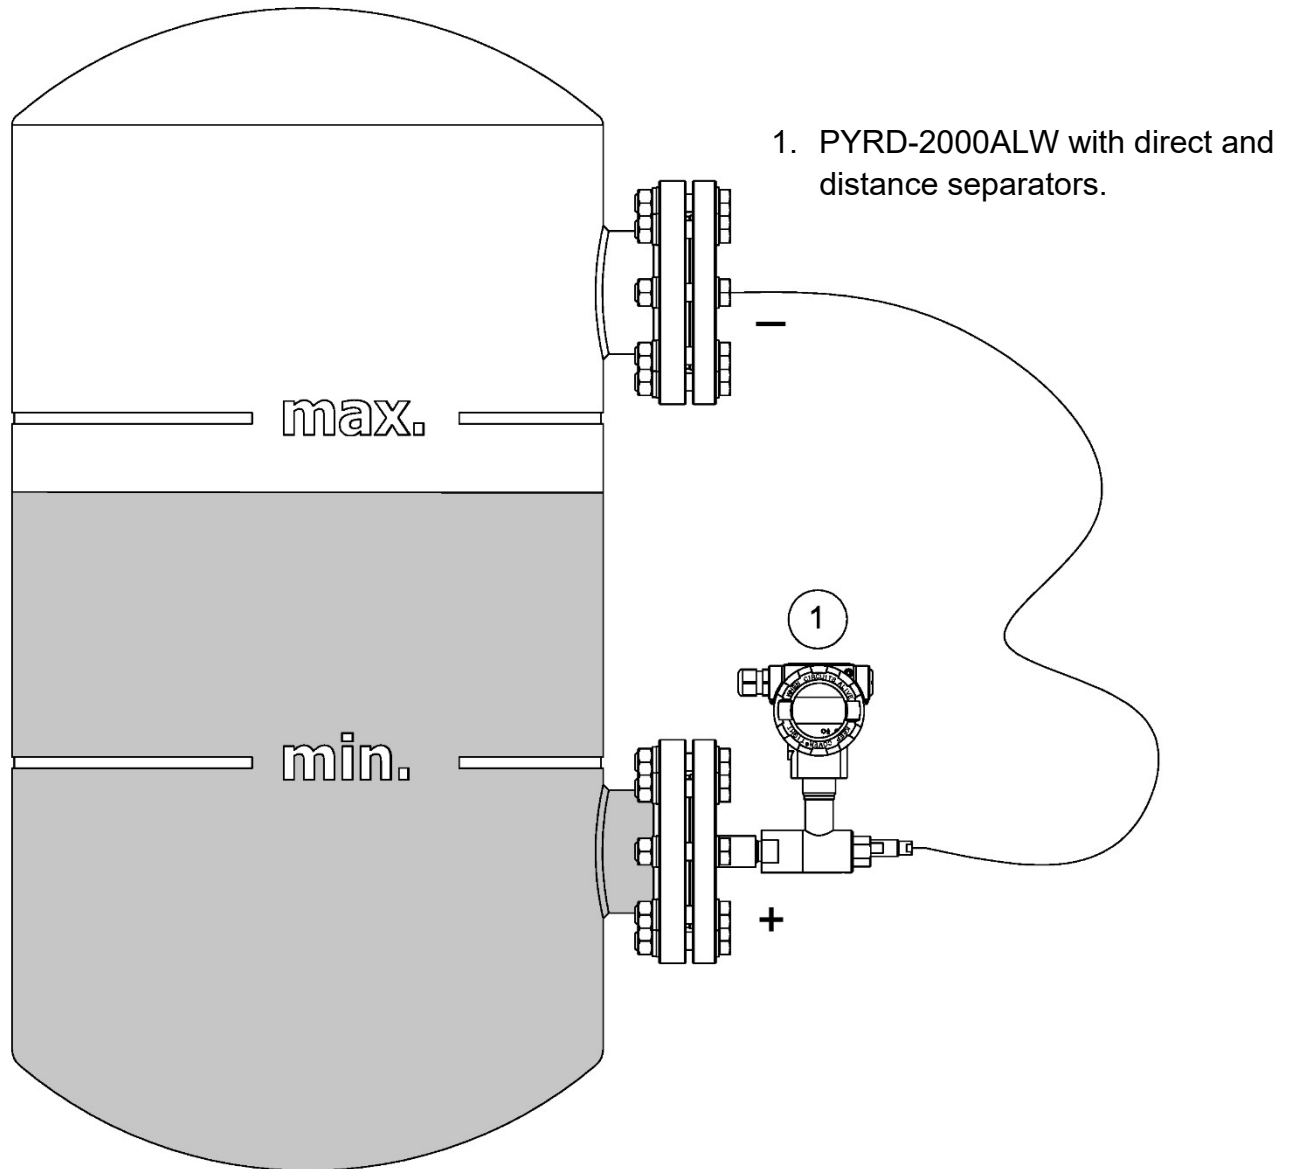


Figure 13. Liquid level measurement in closed tanks using PYRD-2000ALW with direct and remote chemical seals.

Liquid level measurement in closed tanks with steam pillow

Transmitter PYRD-2000ALW must be mounted below the measuring point to ensure that the impulse tubes are filled with liquid.

The negative side of pressure connector must be connected above the maximum liquid level. If the measured medium contains particles, it is useful to install separators and drain valves to remove deposits.

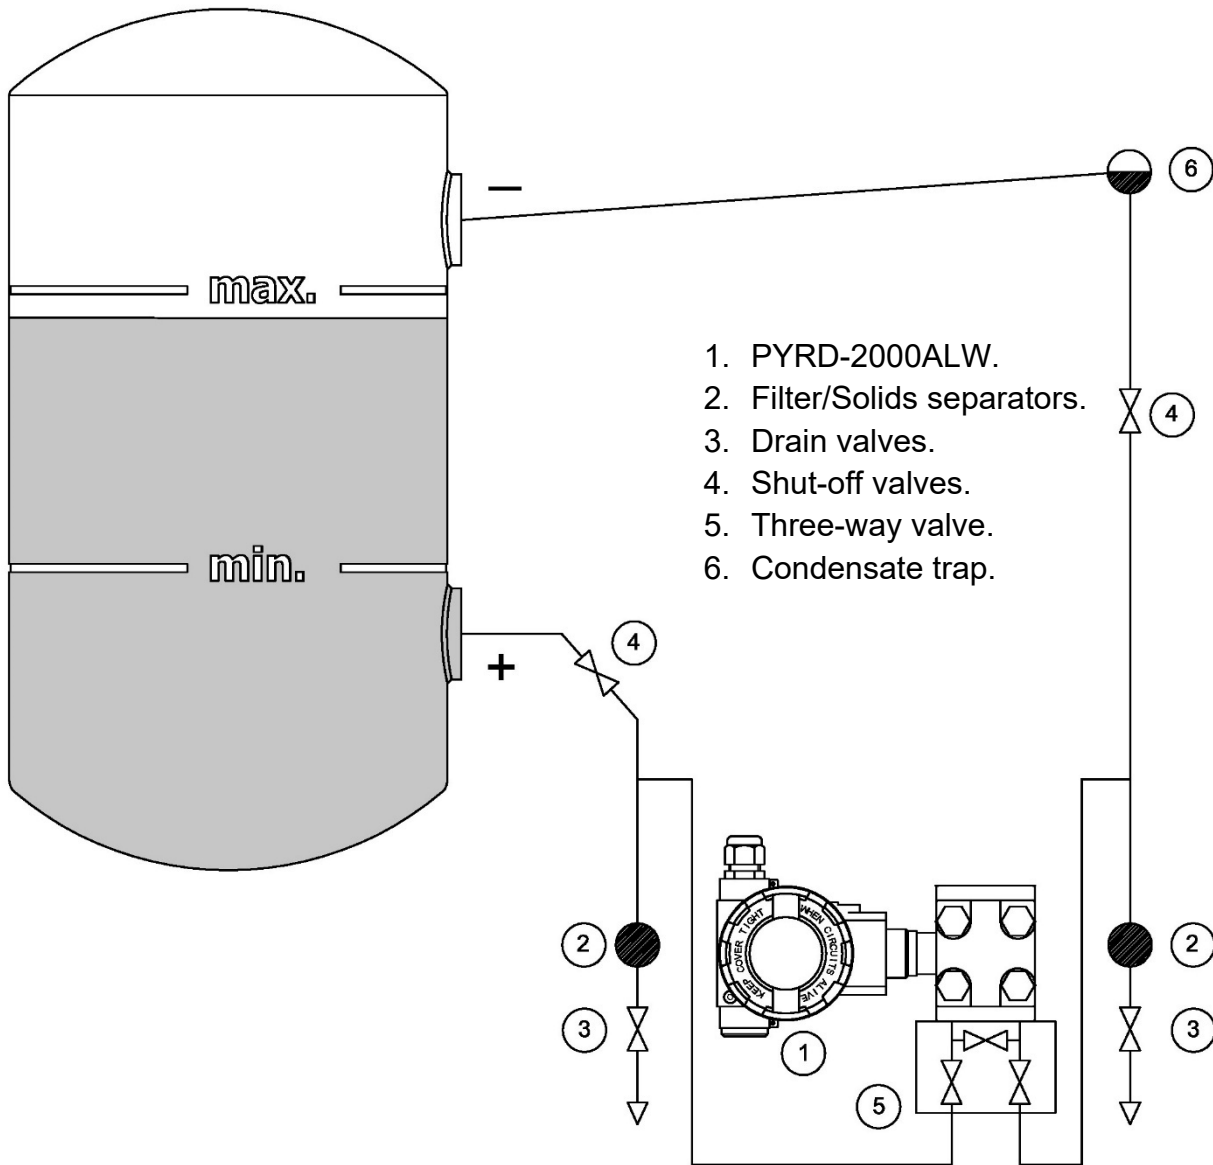


Figure 14. Liquid level measurement in closed tanks with steam cushion using PYRD-2000ALW.

Liquid level measurement in closed tanks with steam cushion with the use of direct chemical seal

Transmitter PYRD-2000ALW must be mounted directly into the tank using a direct mount chemical seal.

The negative side of pressure connector must be connected above the maximum liquid level. Condensate trap ensures constant pressure from the negative process pressure side.

When measuring medium contains solid particles, it is useful to install a separator and drain valve to remove deposits.

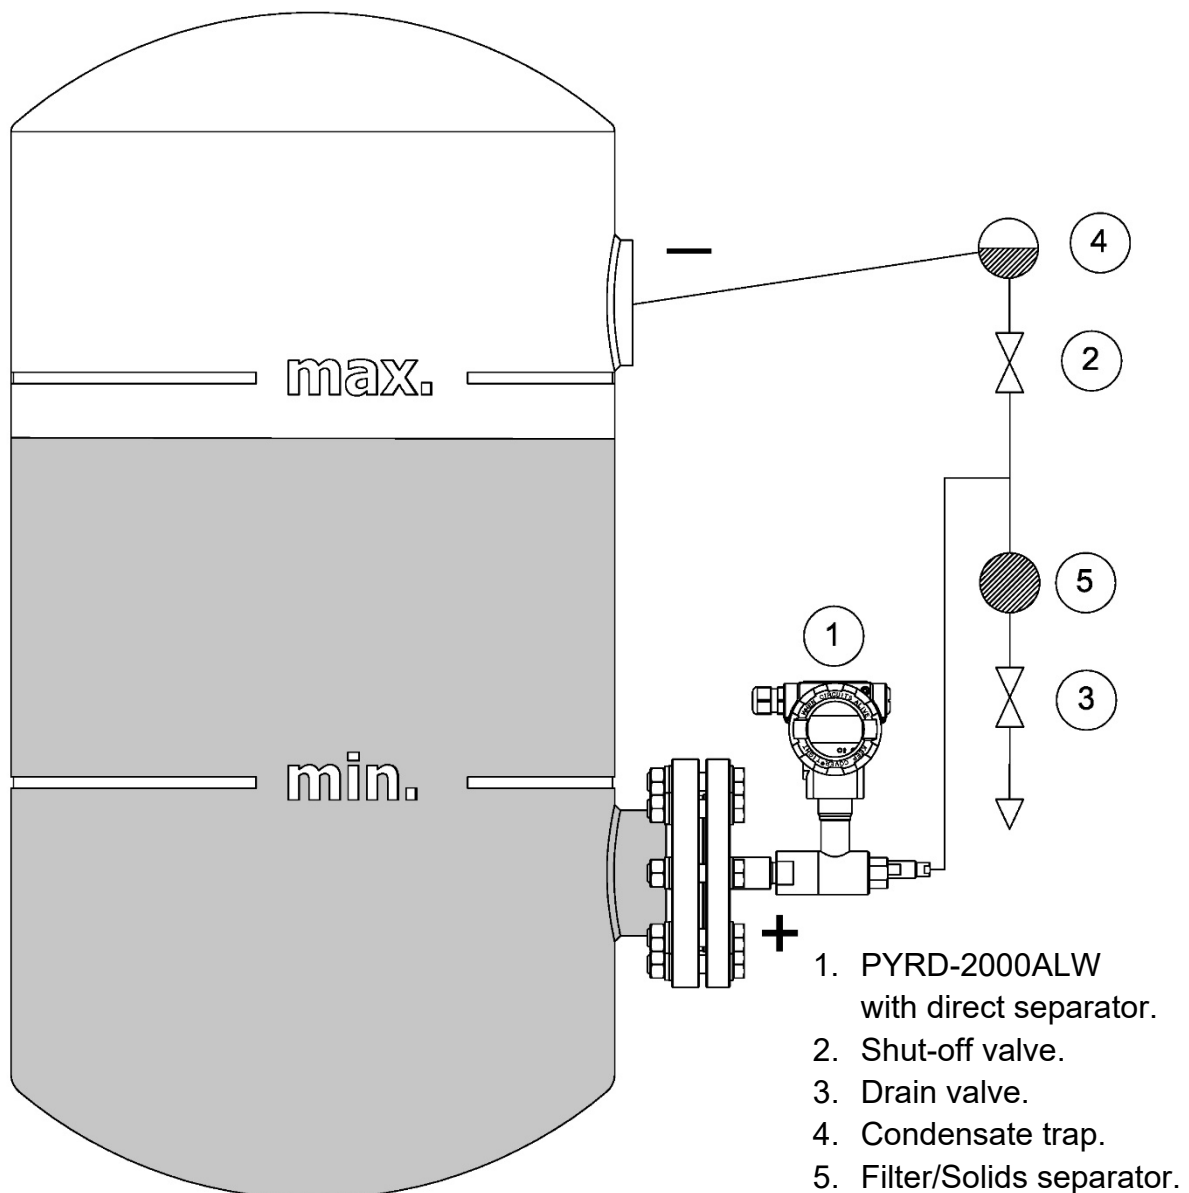


Figure 15. Liquid level measurement in closed tanks with steam cushion using PYRD-2000ALW with chemical seal.

8.2.5. Pressure measurement

Transmitters with metric and imperial threads can be sealed by using a flat gasket on the sealing surface of the process connection. Hemp and similar materials shall not be used as seals.

Teflon tape should be used with transmitters with NPT threads to ensure a tight seal.



The transmitter must be tightened only using the hexagon nut above the process connection. Never use the housing as a lever to tighten the thread.

Gas pressure measurement

Transmitter PYRP-2000ALW must be installed above the measuring point so that the condensate can flow into the piping.

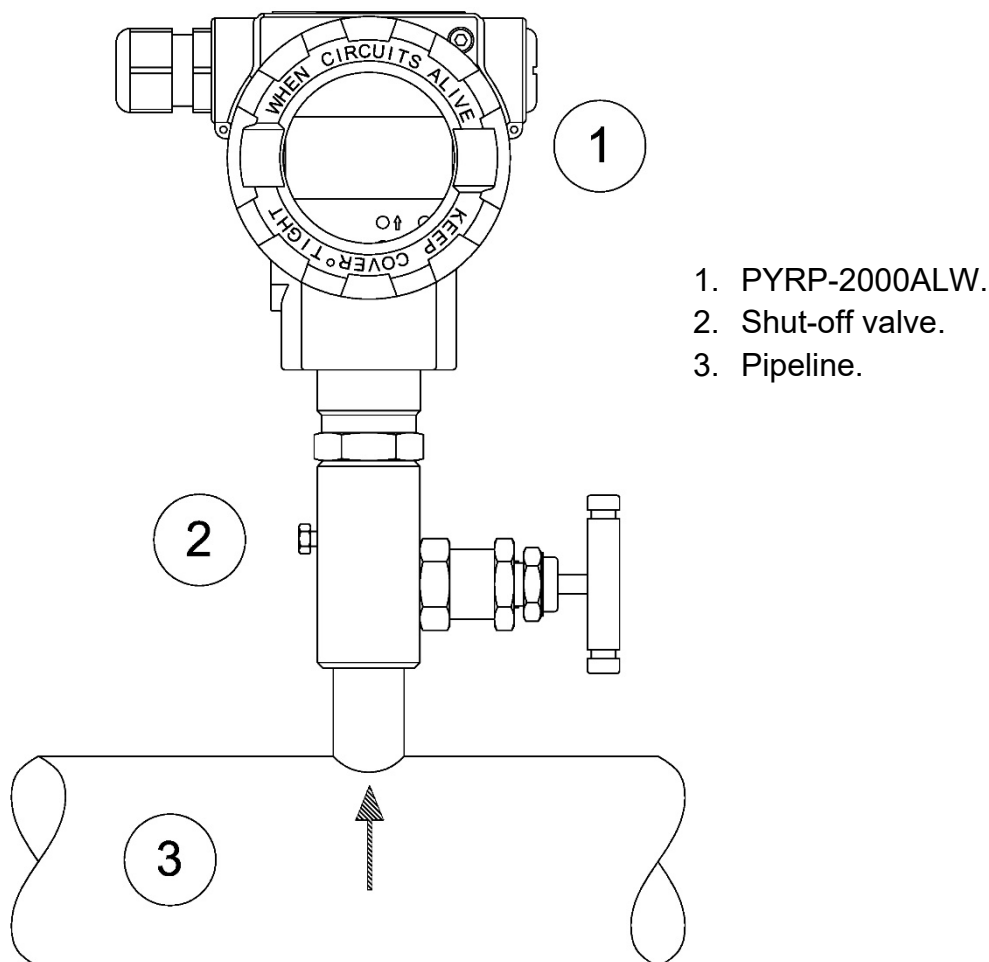


Figure 16. Gas pressure measurement system using PYRP-2000ALW.

Steam pressure measurement

A syphon loop should be used to measure pressure in steam applications.

It is preferable that the transmitter PYRP-2000ALW is installed below the measuring point. After installation ensure that water is present in the syphon loop.


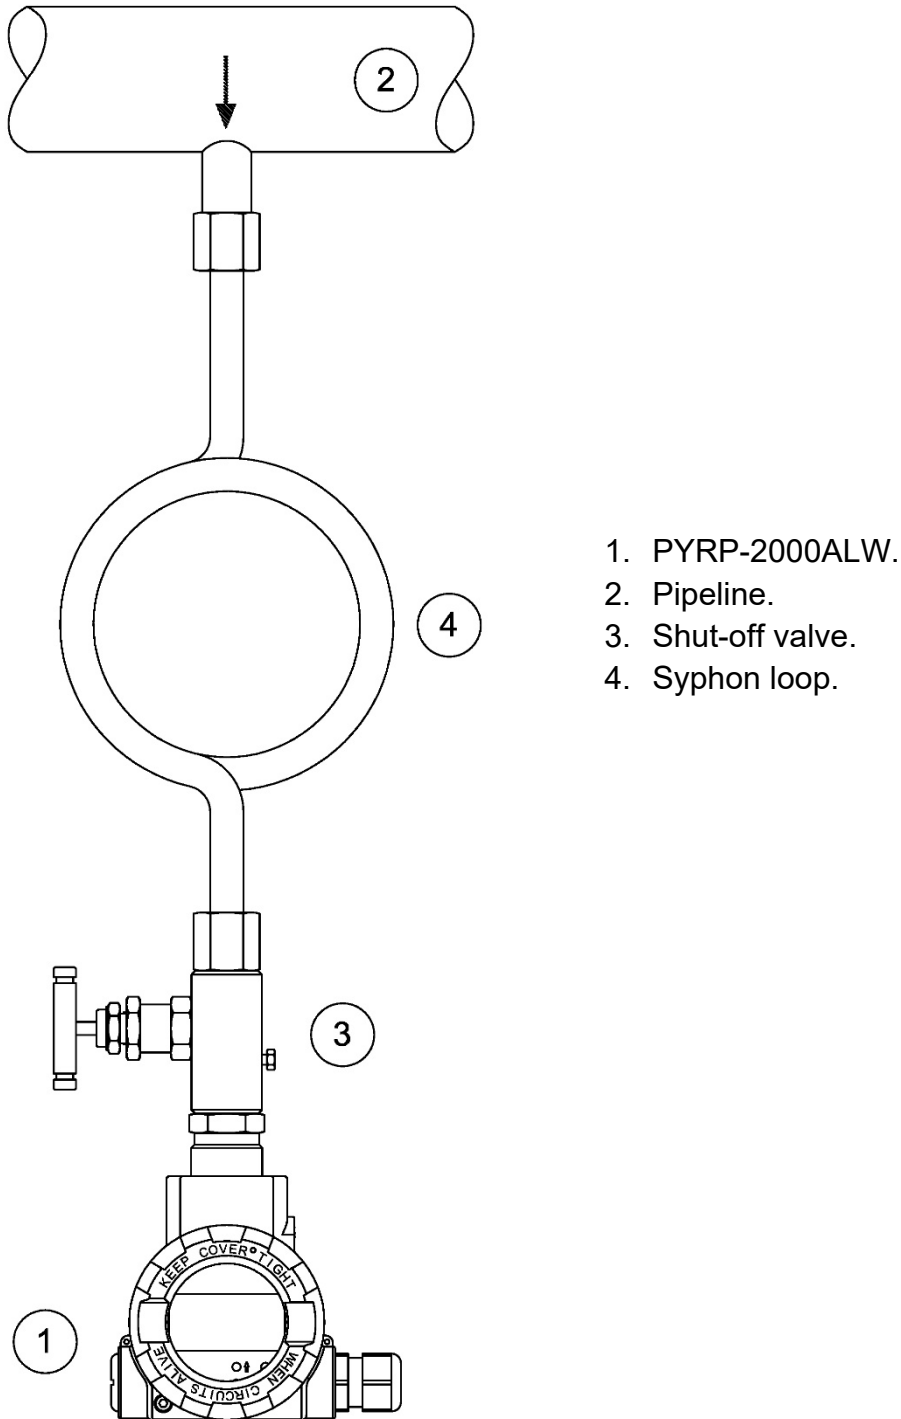


Figure 17. Steam pressure measurement on horizontal pipeline using PYRP-2000ALW.

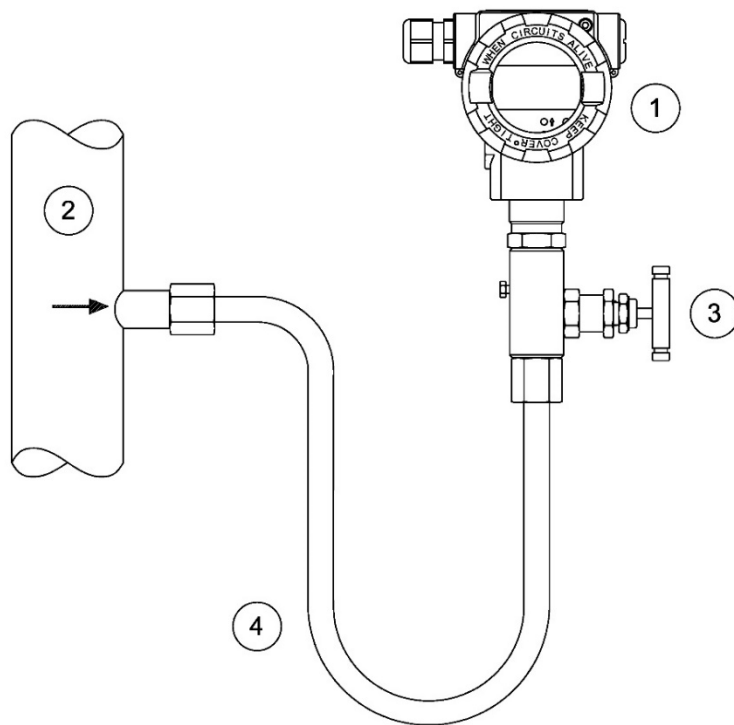


1. PYRP-2000ALW.
2. Pipeline.
3. Shut-off valve.
4. "U" tube.

Figure 18. Steam pressure measurement on vertical pipeline using PYRP-2000ALW.

Liquid pressure measurement

Transmitter PYRP-2000ALW must be mounted below the measuring point or at the same level as the measuring point.

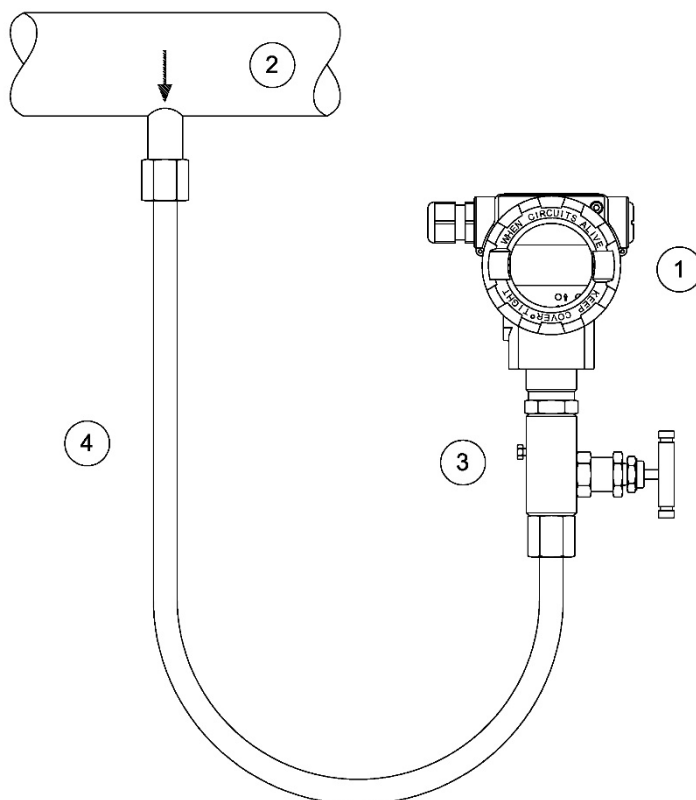

1. PYRP-2000ALW.
2. Pipeline.
3. Shut-off valve.
4. "U" tube.

Figure 19. Liquid pressure measurement using PYRP-2000ALW.

8.2.6. Differential pressure measurement

Gas and steam differential pressure measurement

Transmitter PYRD-2000ALW must be installed above the measuring point so that the condensate can flow through impulse tubes into the process pipes.

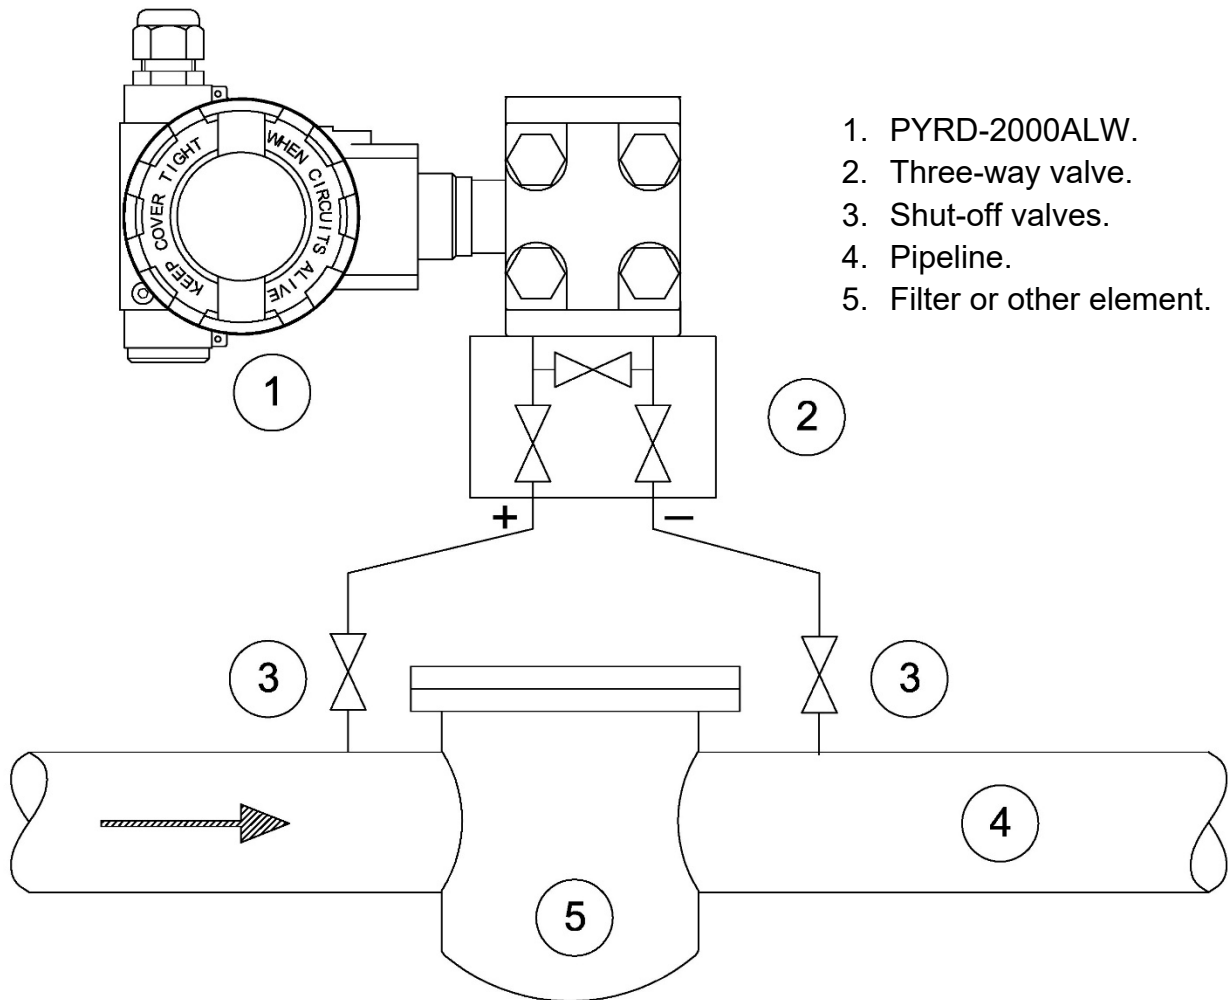


Figure 20. Gas and steam differential pressure measurement using PYRD-2000ALW.

Liquid differential pressure measurement system

Transmitter PYRD-2000ALW must be mounted below the measuring point so that the impulse tubes are always filled with liquid and the gas bubbles can freely escape to the process pipe.

If the measured medium contains particles, it is useful to install separators and drain valves to remove deposits.

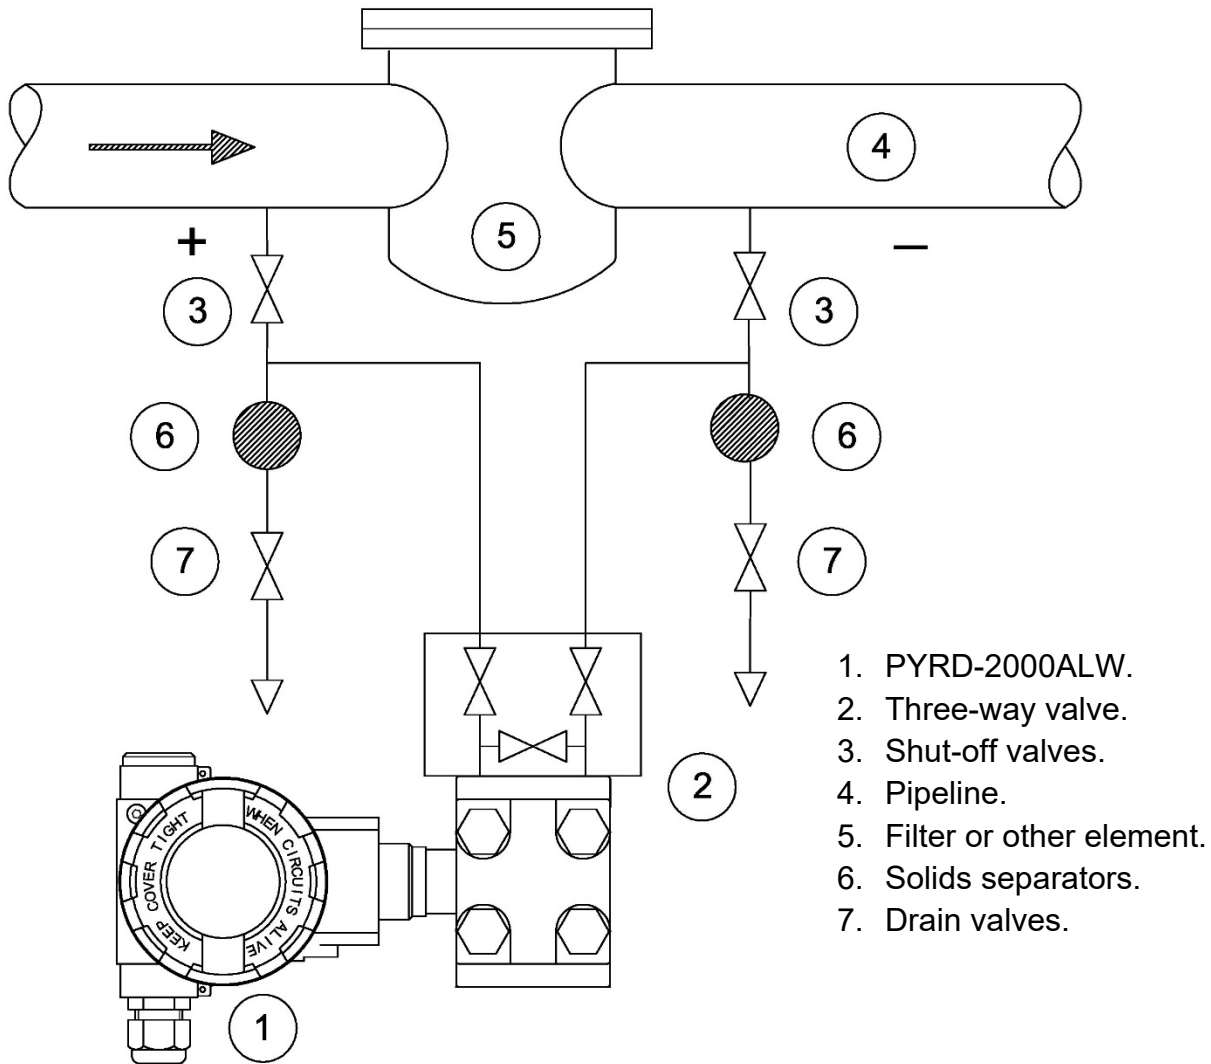



Figure 21. Liquid differential pressure measurement system using PYRD-2000ALW.

Gas, steam and liquid differential pressure measurement with the use of chemical seals

The chemical seals must be mounted on the top or side of the pipeline.

For vacuum measurements, transmitter PYRD-2000ALW must be installed below the measuring point.

Ensure the ambient temperature of both capillaries are equal.

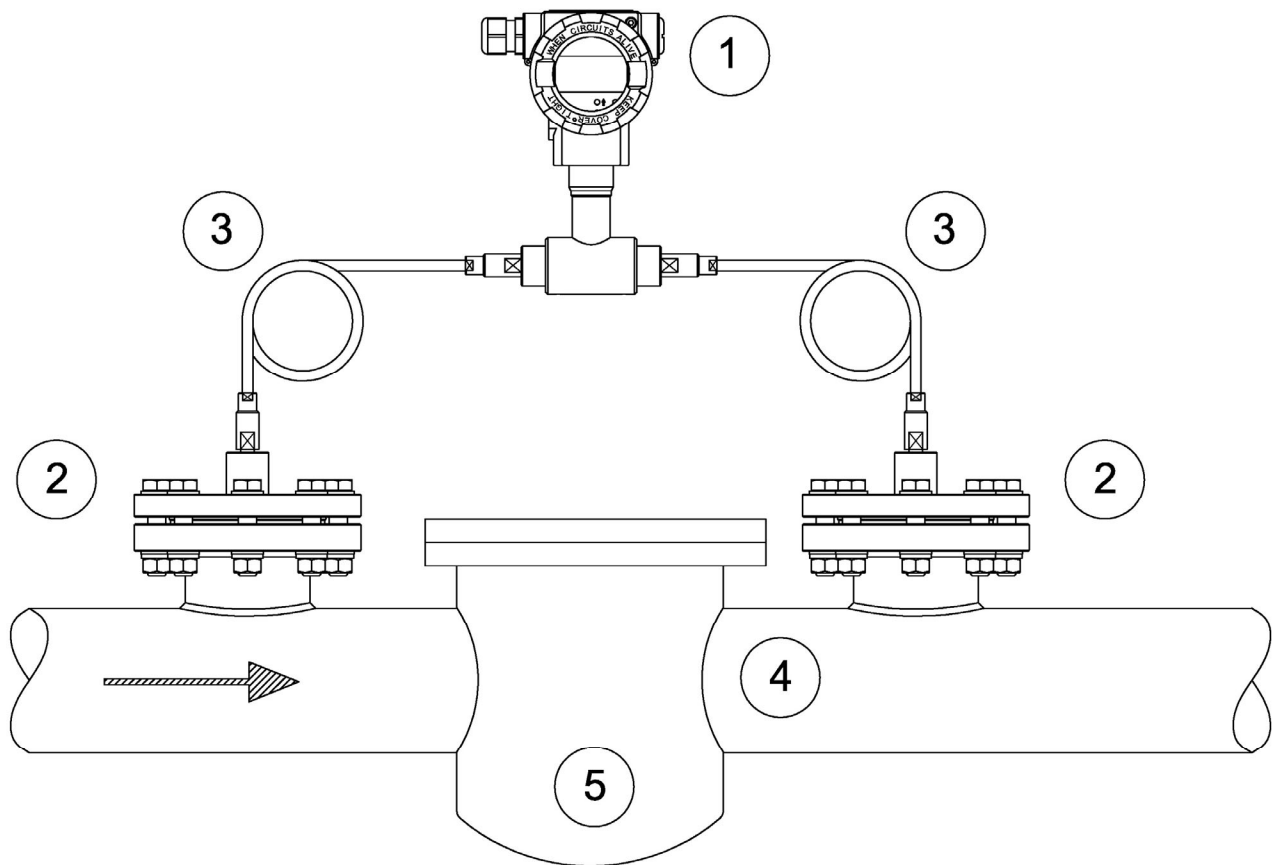

1. PYRD-2000ALW.
2. Chemical seals.
3. Capillary tubes.
4. Pipeline.
5. Filter or other element.

Figure 22. Gas, steam and liquid differential pressure measurement using PYRD-2000ALW with distance separators.

8.2.7. Installation instructions for transducers with chemical seals

The diaphragm protection of the chemical seal should not be removed until installation. The hydrostatic pressure of the gauge fluid column in the capillary may result in some drift in the zero of the transmitter. After installation, the transmitter must be zeroed. Do not clean or touch the chemical seal diaphragms hard or sharp objects.



The pressure transmitter with chemicals seals form a closed calibrated system which is filled with gauge fluid. The transmitter will fail to operate if this sealed system is tampered with.



When using a mounting bracket the capillary should be suitably supported to ensure against excessive bending.

8.2.8. Flange gasket installation instructions

The correct position of the gasket between the chemical seal and the mating flange is governed by the fixing screws. Ensure that the gasket diameter is sized to ensure correct sealing as indicated in the diagram below.



Incorrect installation of the gasket may affect measurement indications.



Special attention must be made when selecting correct dimensions of the gasket.


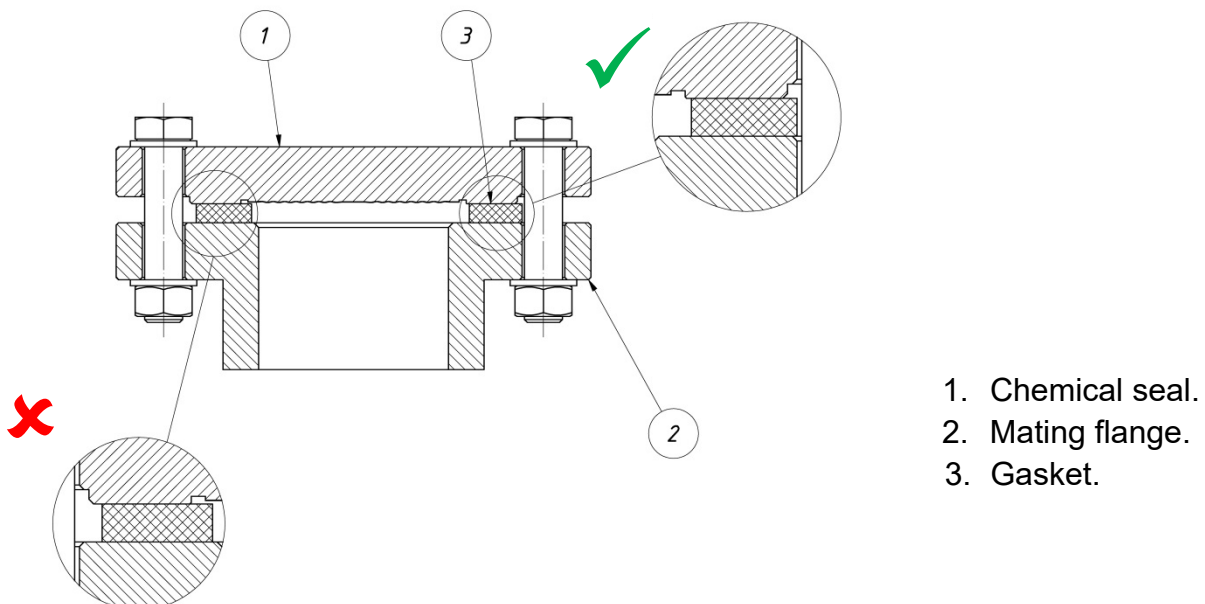


Figure 23. Installation of the flange gasket.

8.2.9. Installation of mounting bracket


Transmitter PYRP(R)-2000ALW can be bulkhead or pipe mounted by means of an AL mounting bracket (item 1) using the components as detailed below:

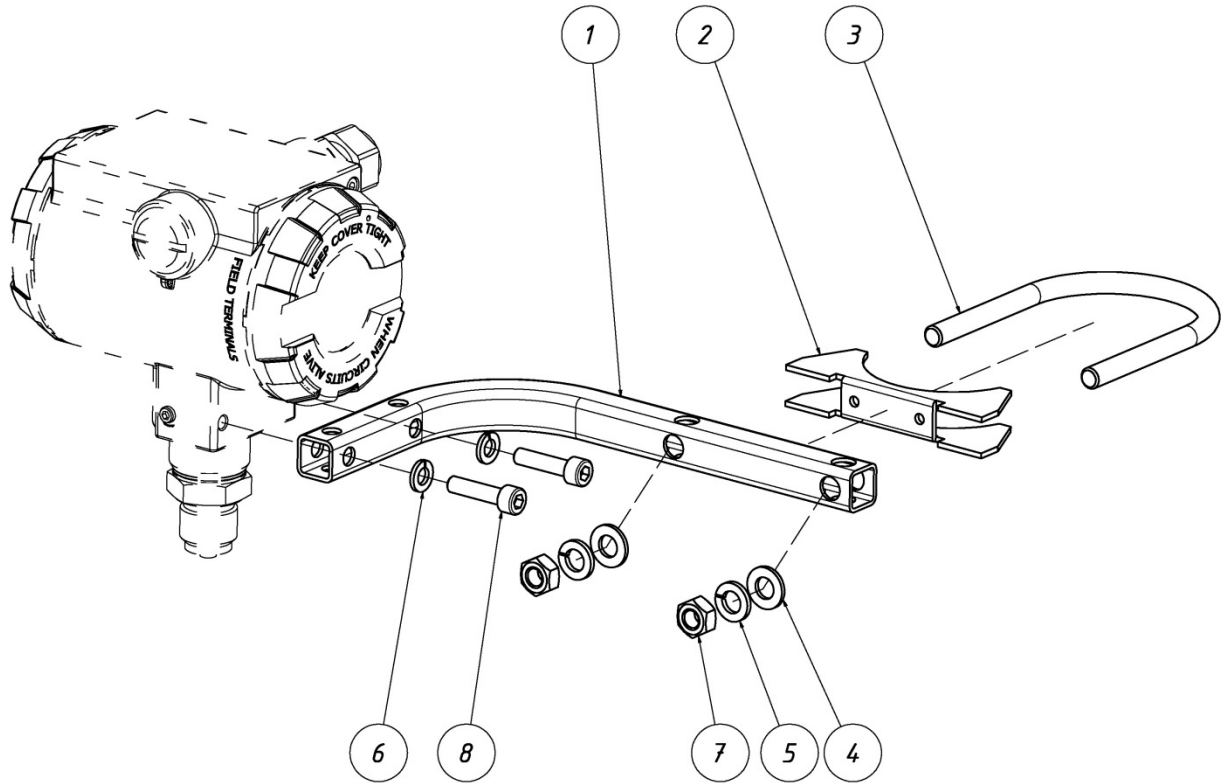

1. AL mounting bracket.
2. Clamp.
3. "U" bolt.
4. M8 Flat washer (2 pcs).
5. M6 Spring washer (2 pcs).
6. M8 Spring washer (2 pcs).
7. M8 nut (2 pcs).
8. M6 x 25 Hex socket head cap screw (2 pcs).

Figure 24. Transmitter PYRP-2000ALW. Wall and pipe mounting layout.

Transmitter PYRD-2000GALW can be bulkhead or pipe mounted by means of an AL mounting bracket (item 1) using the components as detailed below:

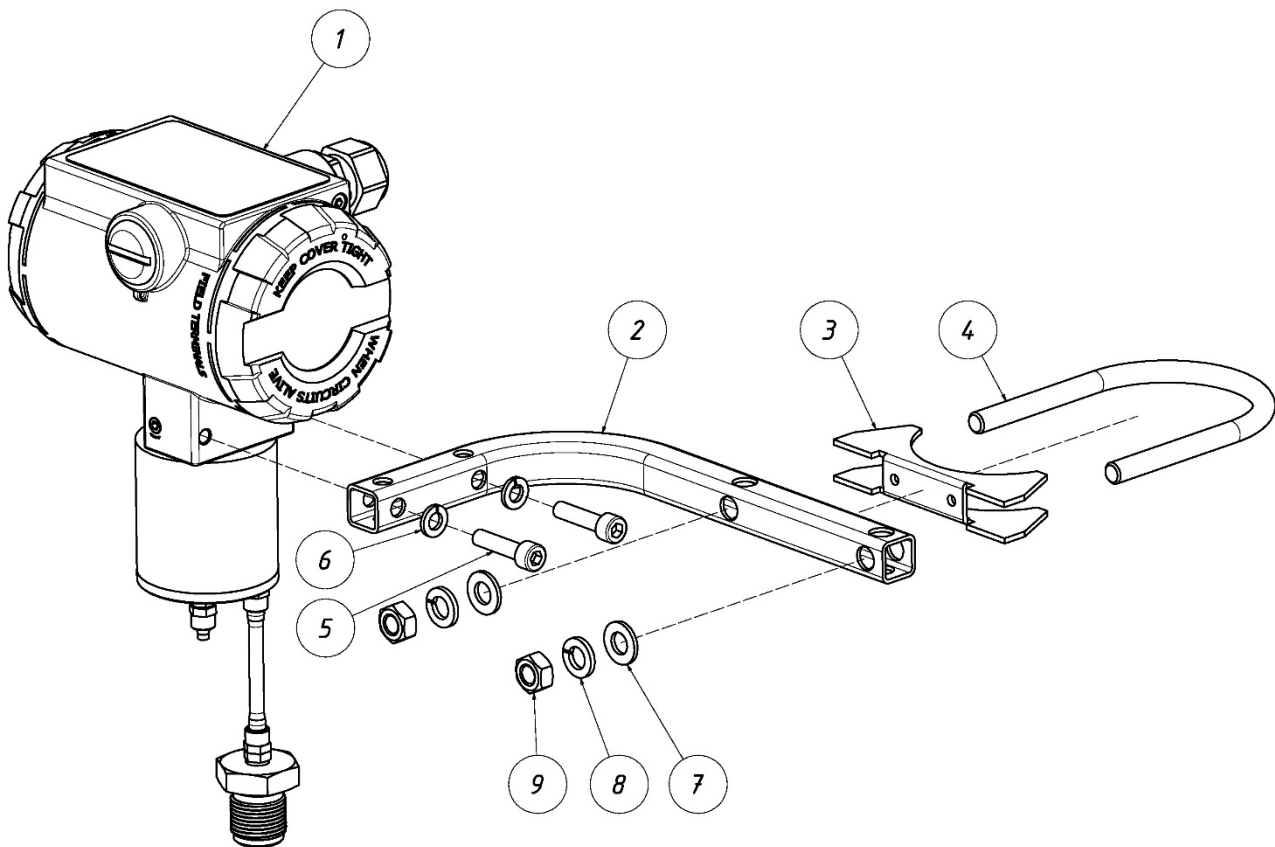

1. Transmitter PYRD-2000GALW.
2. AL mounting bracket.
3. Clamp.
4. "U" bolt.
5. M6 x 25 Hex socket head cap screw (2 pcs).
6. M6 Spring washer (2 pcs).
7. M8 Flat washer (2 pcs).
8. M8 Spring washer (2 pcs).
9. M8 nut (2 pcs).

Figure 25. Transmitter PYRD-2000GALW. Wall and pipe mounting layout.

Differential pressure transmitters PYRD-2000ALW with process connection type C can be pipe mounted using the mounting bracket C2 as detailed below:


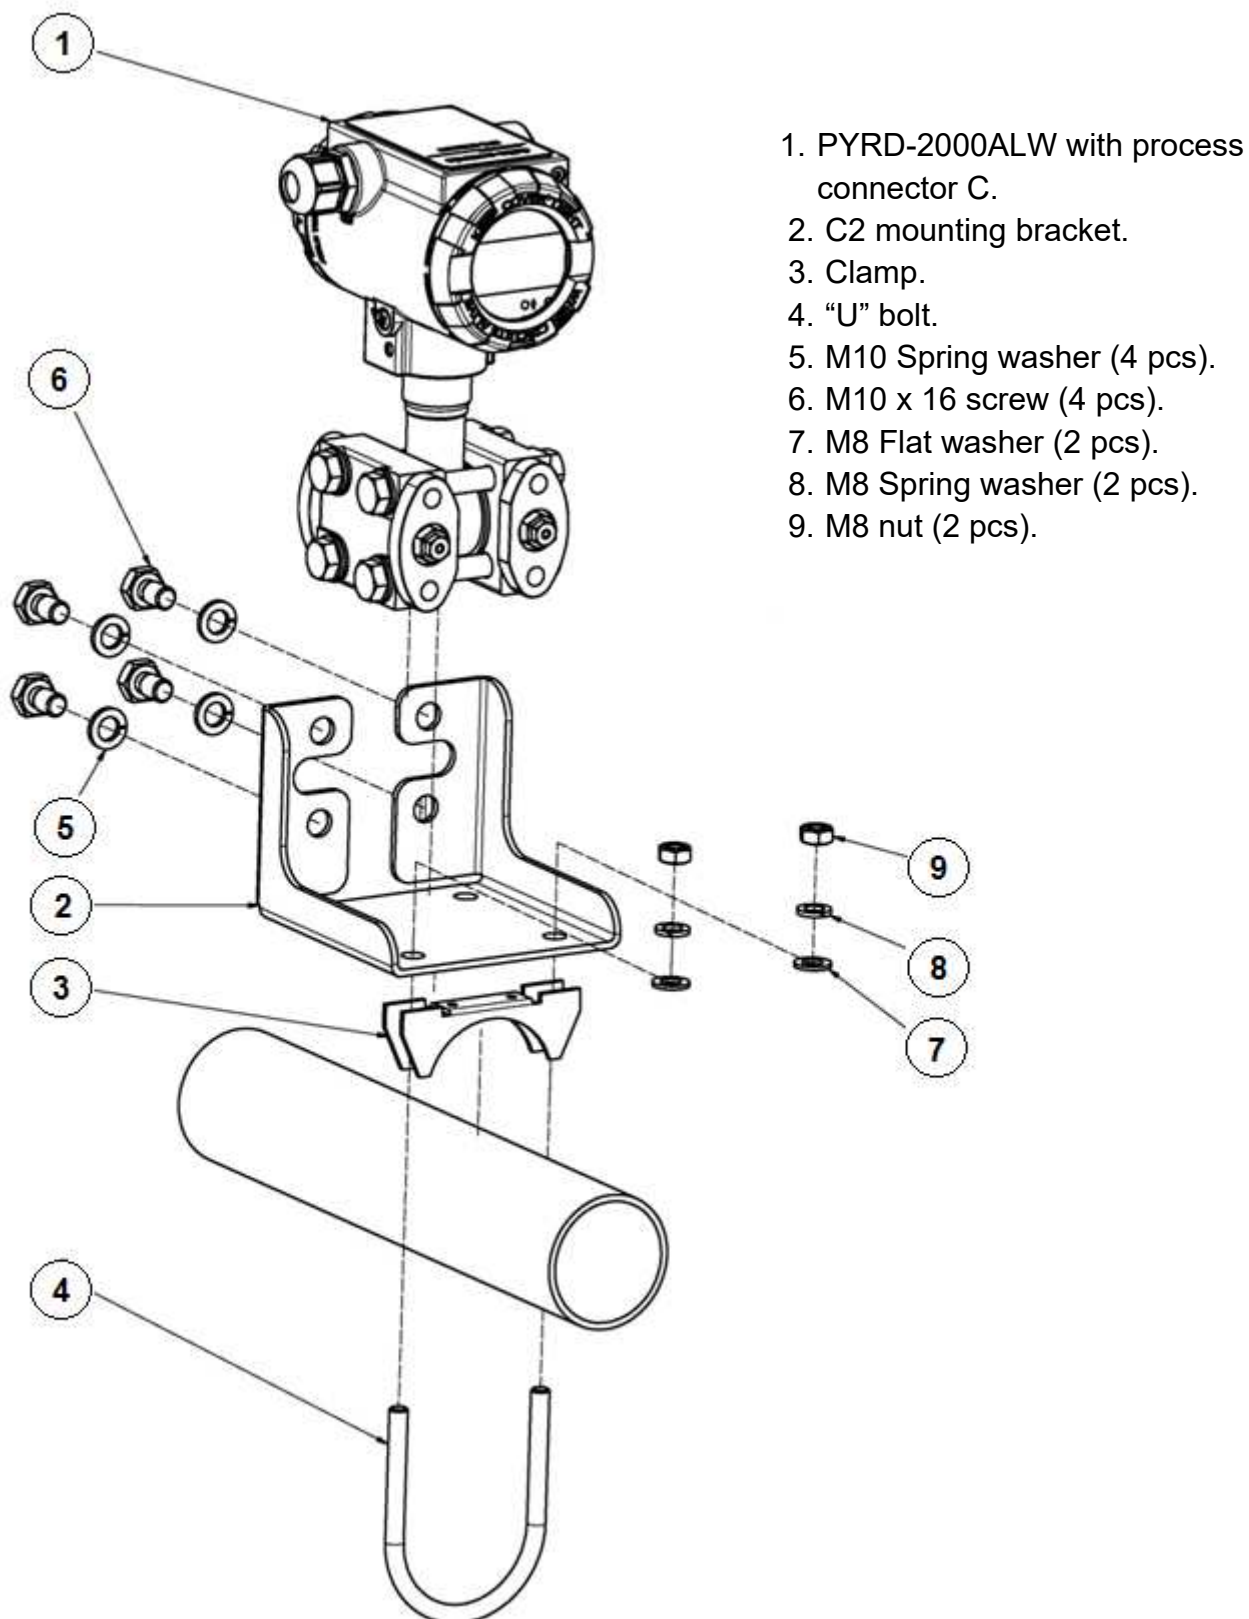


Figure 26. Transmitter PYRD-2000ALW with C type connector. Pipe mounting layout.

Differential pressure transmitters PYRD-2000ALW with process connection type CR can be pipe mounted using the mounting bracket C2 as detailed below:

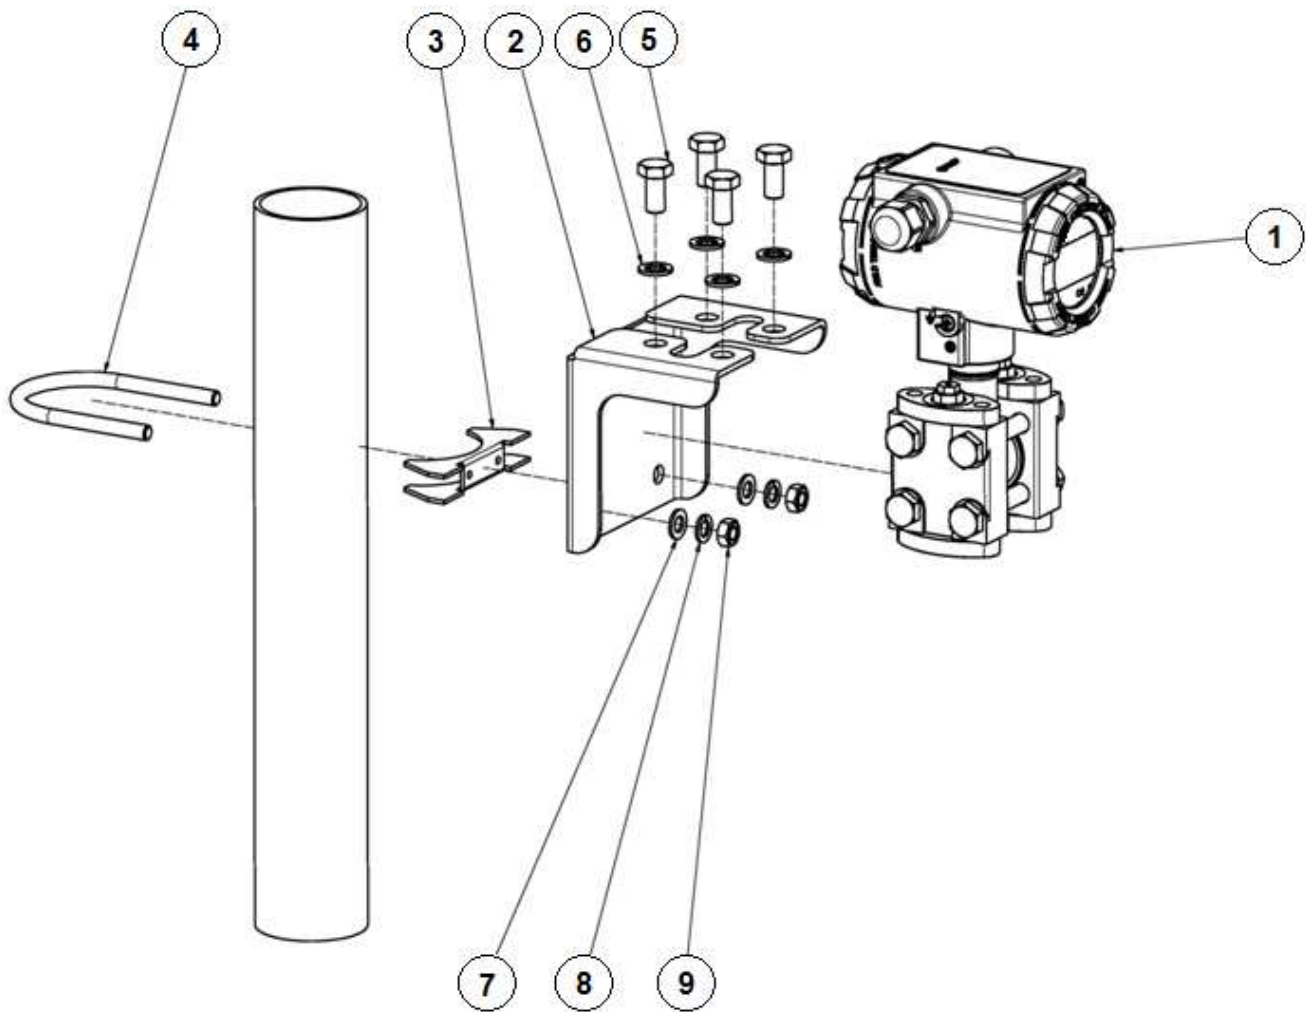

1. PYRD-2000ALW with process connector CR.
2. Mounting bracket.
3. Clamp.
4. "U" bolt.
5. M10 x 16 Screw (4 pcs)
6. M10 Spring washer (4 pcs).
7. M8 Flat washer (2 pcs).
8. M8 Spring washer (2 pcs).
9. M8 nut (2 pcs).

Figure 27. Transmitter PYRD-2000ALW with CR connector. Pipe mounting layout.

Assembly and mounting details of transmitter fitted with remote chemical seal

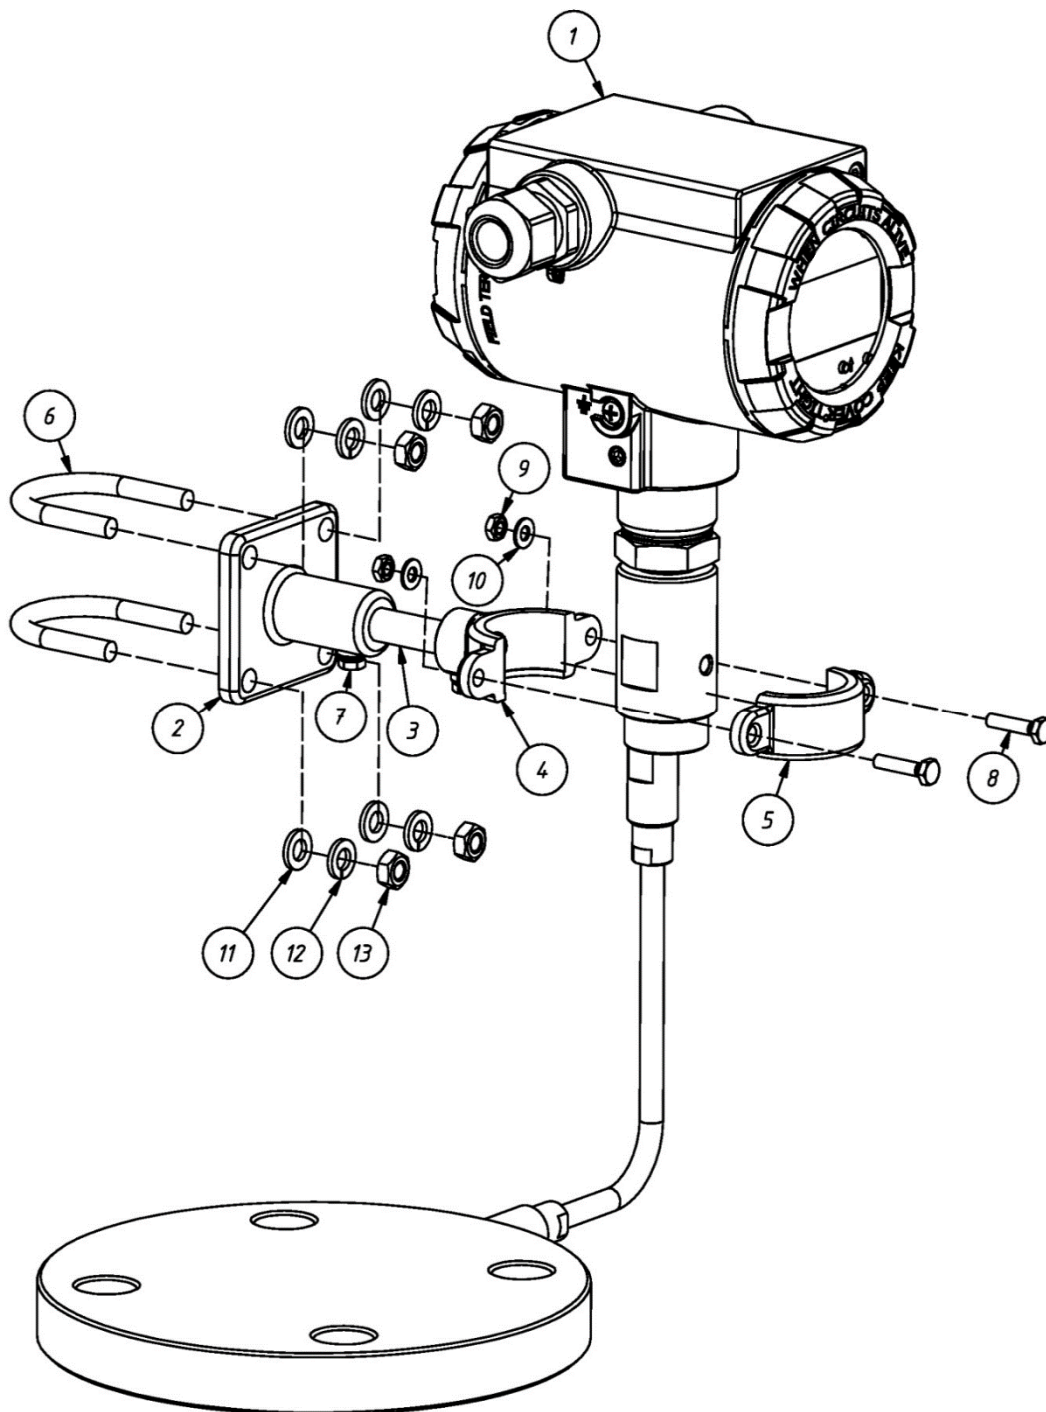


Figure 28. Assembly and mounting of transmitter with chemical seal.

List of parts for Type PCR pipe mounting bracket:

1. PYRP-2000ALW with remote chemical seal.
2. Bracket.
3. Bracket arm.
4. Clamp (back).
5. Clamp (front).
6. "U" bolt (2 pcs.).
7. M5 × 10 Hex head screw (2 pcs.).
8. M5 × 18 Hex head screw (2 pcs.).
9. M5 nut (2 pcs.).
10. M5 Flat washer (2 pcs.).
11. M6 Flat washer (4 pcs.).
12. M6 Spring washer (4 pcs.).
13. M6 nut (4 pcs.).

14. List of parts for Type PC wall mounting bracket:

1. PYRP-2000ALW with remote chemical seal.
2. Bracket.
3. Bracket arm.
4. Clamp (back).
5. Clamp (front)
7. M5 × 10 Hex head screw (2 pcs.).
8. M5 × 18 Hex head screw (2 pcs.).
9. M5 nut (2 pcs.).
10. M5 Flat washer (2 pcs.).

8.2.10. Rotation of the housing

The housing of transmitter can be rotated by 330°.

In order to do so:

- loosen the screw (item 1) to allow the housing to be rotated;
- position the transmitter housing as required (item 2);
- tighten the screw (item 1).

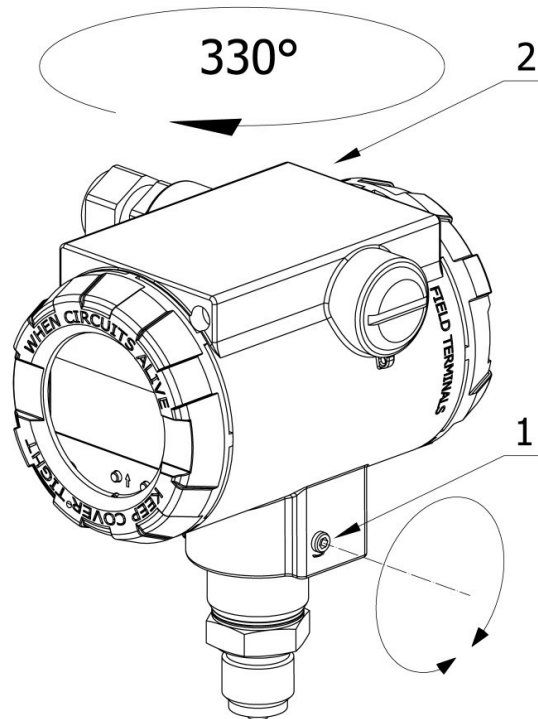


Figure 29. Rotation of the housing.

8.2.11. Closing of housing covers, sealing

The front and rear cover threads have a factory coating, therefore no additional coating is required.

Before tightening the covers make sure that the thread surfaces are free of contamination, e.g. sand etc. It should be possible to screw the covers smoothly. If resistance is felt when tightening, on the thread there is probably dirt which must be removed before continuing.



The transmitter housing does not provide correct sealing if the housing or covers threads are damaged.

Some transmitter applications require an interlock and sealing of covers to prevent unauthorised access to settings and adjustments. The method of sealing transmitters is shown in Figure 30 below:

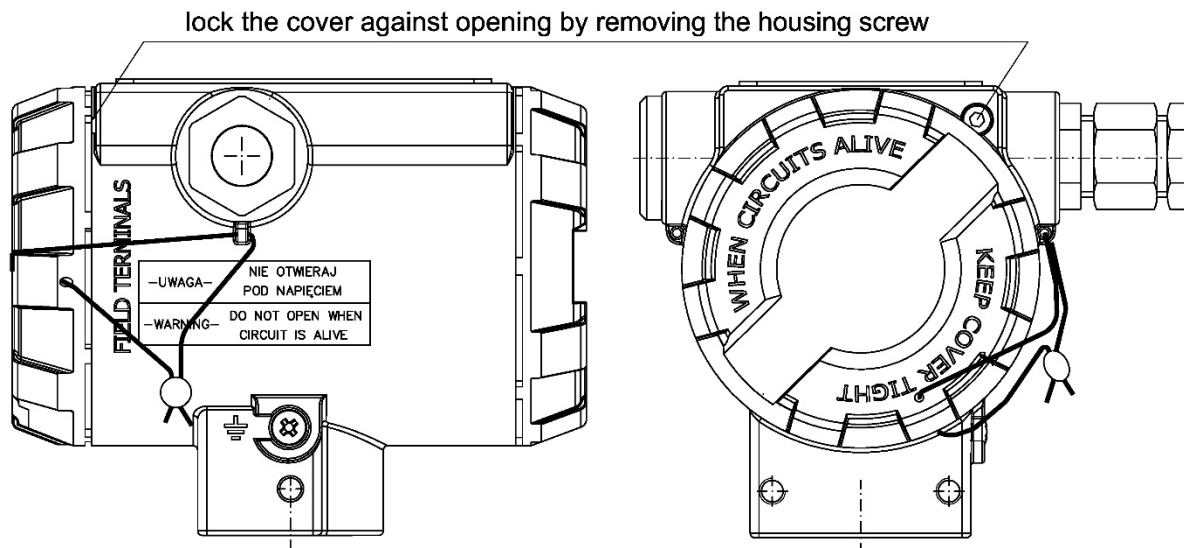


Figure 30. How to fit the transmitter with a tamperproof lead seal.

Loosen the screw until it engages with the cover.

8.3. Post-installation control operations

After installation make sure that all the transmitter fixing screws, separators and holders are properly secured and tightened.

9. ELECTRICAL CONNECTION

9.1. Cable connection to transmitter internal terminals



All connection and installation operations shall be performed with disconnected supply voltage and other external voltages, if used.

Risk of electric shock!



If the transmitter supply voltage exceeds 30 V DC there is a risk of electric shock from electrical contacts after opening the rear cover of the housing in damp environment.



Failure to provide proper connection to the transmitter may result in danger! Risk of electric shock and/or ignition in potentially explosive atmospheres!

In damp environment do not open the cover when the transmitter is energised. When using the transmitter in potentially explosive environments the system must comply with the applicable national standards, regulations and safety instructions or drawings of the control system.

Devices with integrated lightning protection **(SA)** must be grounded.

The transmitter's internal circuits are protected against reversed polarisation, impact of overvoltage and high-frequency electric fields.

The supply voltage must match the value given on the transmitter nameplate (→ [Transmitter identification](#)).

9.1.1. Cable connection

In order to perform correct connection of the cables, the following steps shall be performed:

- disconnect power supply of the supply cable line before connecting the transmitter cabling;
- unscrew the rear cover of the transmitter housing to access the power connector;
- pull the cable through the gland. For this purpose it is recommended to use two-wire screened twisted pair cable;
- connect the transmitter according to Figure 31, paying attention to the correct securing of the screws fixing the conductor core to the terminal;
- depending on the assumed earthing model of the system, attach the cable screen to the bolted terminal of the housing earth screw or remove the excess off the screen and secure with the insulation without connecting to the earth screw;
- check the correct fixing of the HART local communication jumper;
- Secure the rear cover of the transmitter housing until it is fully tightened;
- leaving a small clearance of the cable inside the housing, tighten the gland nut so that the gland seal is clamped on the power cable.

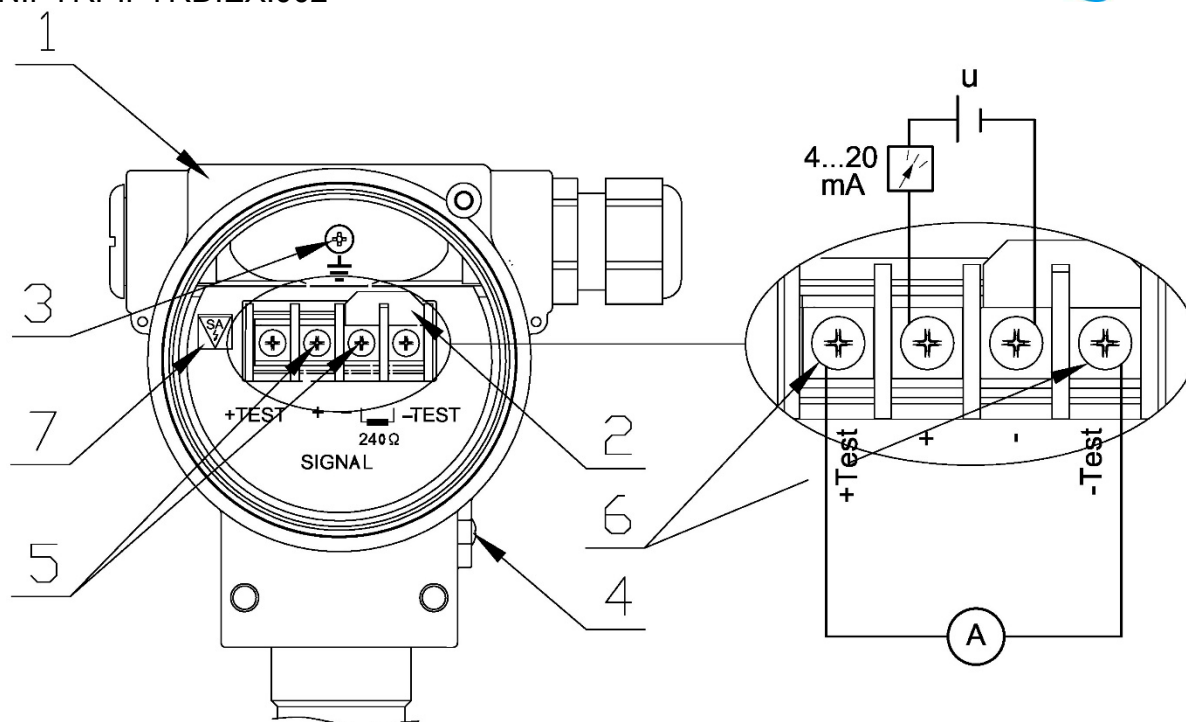


Figure 31. Electrical connection 4...20 mA of HART to transmitter.

1. Housing.
2. Jumper for local HART communication.
3. Internal ground terminal.
4. External ground terminal.
5. Transmitter power terminals, 4...20 mA current loop.
6. Ammeter connection terminals for uninterruptible current measurement (optional).
7. Designation of a device variant (SA) with integrated lightning protection.

9.1.2. Connection of transmitter with the option of using local HART communication

The transmitter permits the use of local HART communication. To implement this a HART communicator unit or modem interoperating with a computer or smartphone is required.

In order to establish the local communication, it is necessary to:

- remove HART communication jumper (item 2);
- connect the communicator or modem to electrical terminals (item 8).

Opening of the HART jumper results in the applying of a 240 Ω resistance in series in the 4...20 mA loop. This resistance reduces the voltage on the transmitter supply terminals by approximately 5 V DC for maximum current that can be set by the transmitter. Therefore, when the jumper is removed, the minimum power supply voltage increases by 5 V DC. When using power supplies with supply voltages below 17 V DC, **to avoid the supply voltage deficit on the transmitter terminals, the HART jumper must be removed only for the period of performing the HART local communication.**



Connection diagram of the communicator or modem to energised transmitter is shown in the following figure:

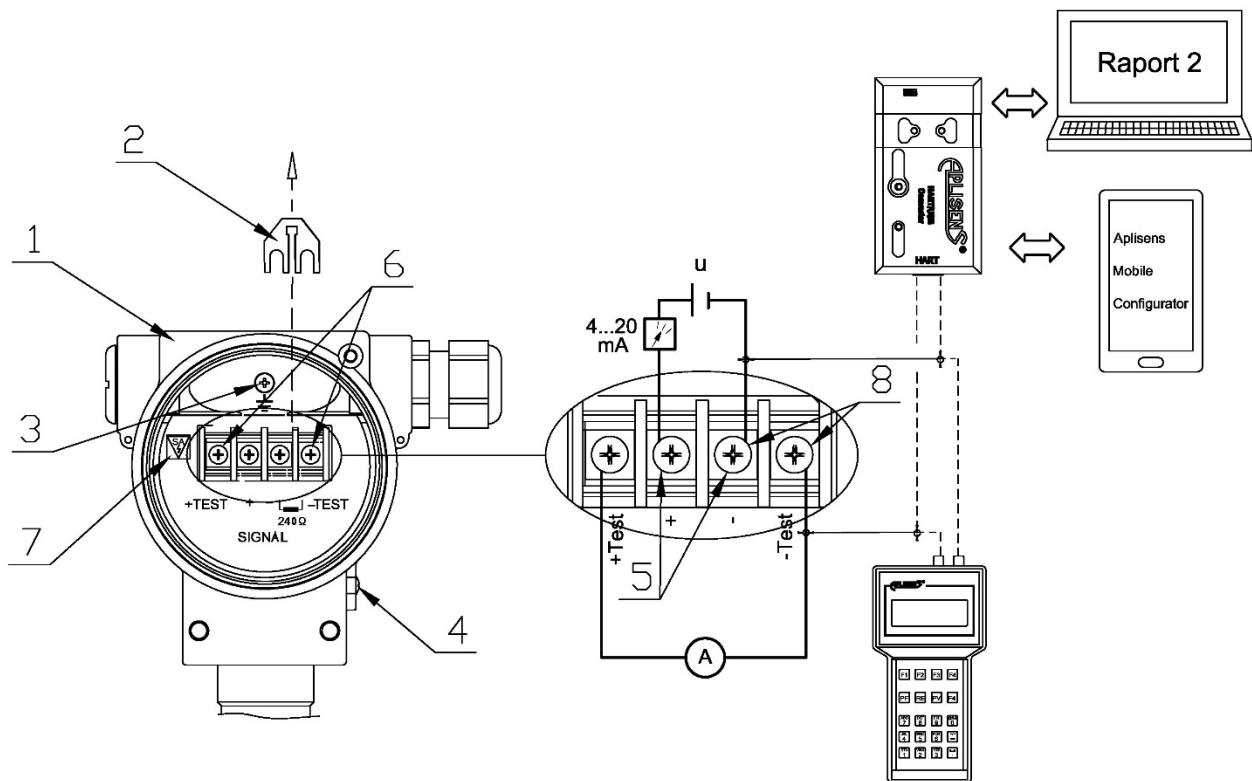


Figure 32. Electrical connection 4...20 mA of HART to transmitter with local HART communication.

1. Housing.
2. Removed local HART communication jumper.
3. Internal ground terminal.
4. External ground terminal.
5. Transmitter power terminals, 4 ... 20 mA current loop.
6. Ammeter connection terminals for uninterruptible current measurement (optional).
7. Designation of a device variant (SA) with integrated lightning protection.
8. Terminals – point of connection of the communicator or HART modem.

9.2. Transmitter power supply

9.2.1. Transmitter supply voltage

Power cables may be live!

There is a risk of electric shock and/or explosion!

When using the transmitter in identified hazardous areas the system must comply with local national standards and regulations, with intrinsic safety instructions and installation drawings.



All Ex protection data is provided in Manual MAN.PYRP.PYRD.EX.002 which is available on request. Ex documentation is supplied with all equipment approved for use in potentially explosive environments.

Table 2. Permissible supply voltages applicable to the specific Ex certification of the units.

Electronics version	Minimum supply voltage	Maximum supply voltage
4...20 mA HART, Exi and Exd variant*	11,5** V DC	30 V DC (Exi) 55 V DC (Exd)
4...20 mA HART, Exd variant*	13,5*** V DC	55 V DC
* For details on intrinsically safe and flameproof variant see manual MAN.PYRP.PYRD.EX.002. ** Minimum supply voltage with backlight off. Possibility of turning on the backlight only by manufacturer at the transmitter production stage – (then $U_{min}=14,5$ V DC). *** Minimum supply voltage with backlight on. Possibility of turning off the backlight only by manufacturer at the transmitter production stage – (then $U_{min}=10,5$ V DC).		

9.2.2. Uninterruptible current measurement in 4...20mA current loop

The transmitter is capable of uninterruptible current measurement in the current loop using an ammeter. In order to maintain the current measurement error below 0.05%, the internal resistance of the ammeter should be less than 10 Ω .

Ammeter connection diagram – see: ([→Figure 31. Electrical connection 4...20 mA of HART to transmitter.](#)).

9.2.3. Specifications of electrical switching terminals

Internal electrical switching terminals are suitable for conductors with the cross-section from 0.5 to 2.5 mm². The internal and external electrical ground terminal of the housing is suitable for conductors with cross-section from 0.5 to 5 mm².

9.2.4. Cabling specification

PyroPress recommend using two-wire screened twisted pair cable. The outer diameter of the cable shell from 5 to 9 mm is recommended.

9.2.5. Resistance load in power supply line

The power line resistance, power source resistance and other additional serial resistances increase the voltage drops between the power source and the transmitter terminals. The maximum transmitter current under normal operation conditions is defined as $I_{max} = 20.500 \text{ mA} + E$, where E is the acceptable safety error, which is $\pm 0.160 \text{ mA}$.

The maximum resistance value in the power circuit (along with the power cables resistance) is defined by the formula:

$$R_{L_MAX} [\Omega] \leq \frac{(U - 11,5)[V]}{0,02066 [A]} \quad (\text{for Exi and Exd variant})$$

$$R_{L_MAX} [\Omega] \leq \frac{(U - 10,5)[V]}{0,02066 [A]} \quad (\text{for Exd variant})$$

where:

U – voltage of 4...20 mA current loop power supply unit in [V];

R_{L_MAX} – maximum power supply line resistance in [Ω].

The above formula may be used to describe the indicative dependency of the maximum load resistance on the power supply voltage:

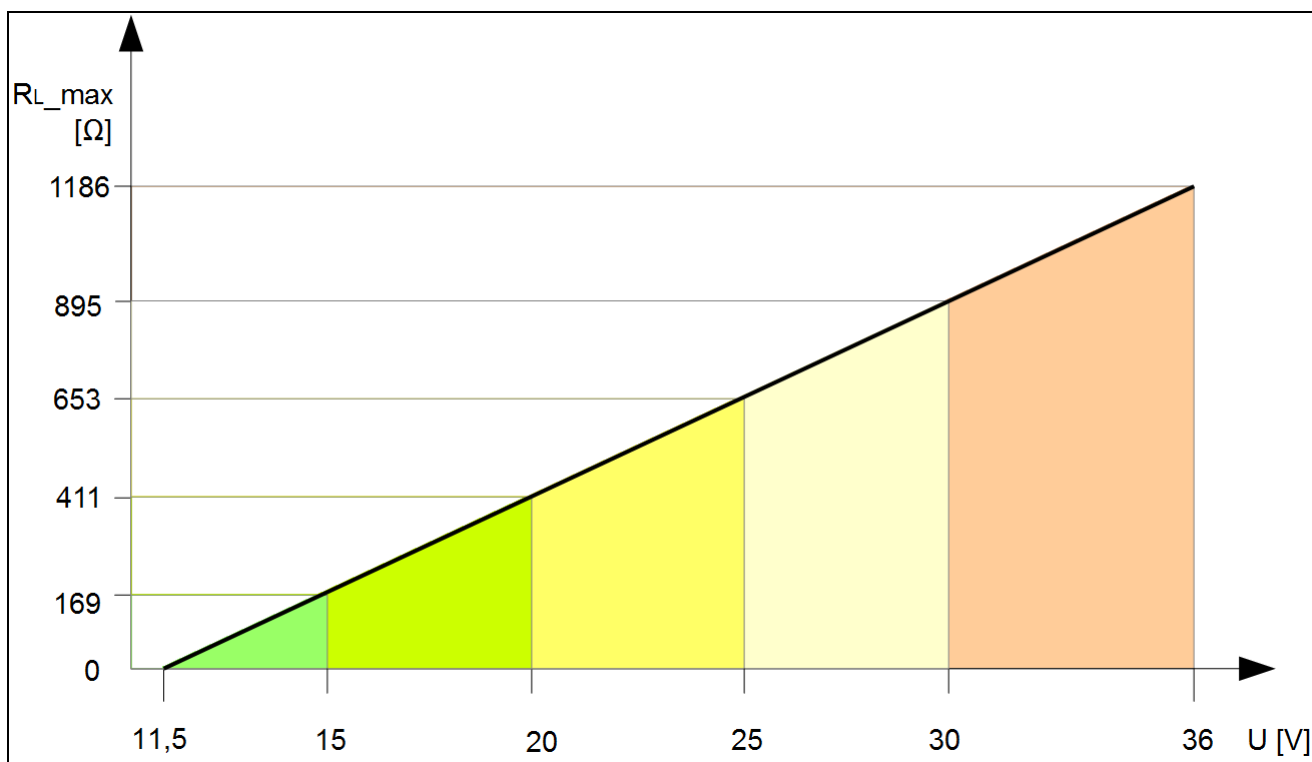


Figure 33. The maximum load resistance R_{L_MAX} [Ω] in the supply line of transmitter (Exi and Exd variant) depending on the power supply voltage U [V].

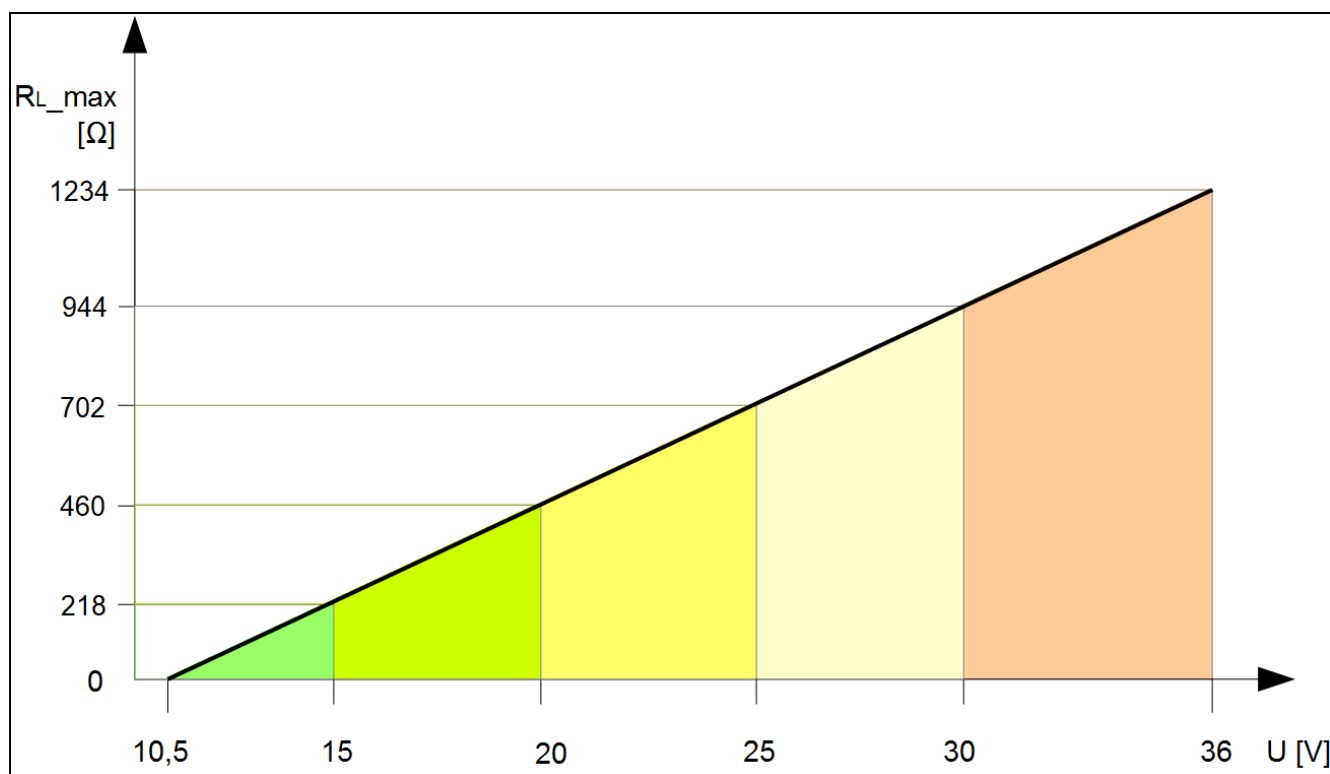


Figure 34. The maximum load resistance R_{L_MAX} [Ω] in the supply line of transmitter (Exd variant) depending on the power supply voltage U [V].

9.2.6. Shielding, equipotential bonding

- Optimal protection against interference is provided by the earthing of the screen on both sides (in the cabinet and equipment). In case of potential difference between earthing points of devices which may result in the flow of equipotential currents, the screen shall be earthed on one side – preferably at the transmitter.
- When used in potentially explosive environments, the applicable regulations must be observed. As a standard, all Ex transmitters are accompanied with separate documentation MAN.PYRP.PYRD.EX.002 containing additional technical data concerning Ex certified devices.

9.2.7. Connection of HART communicator unit

- For entering parameters into the transmitter the communicator **KAP-03, KAP-03 Ex** offered by **PyroPress** or a similar compatible industry standard communicator which accepts DDL libraries can be used;
- when the communicator is used in potentially explosive environments the applicable regulations must be observed.

The method of connecting the communicator or modem to the transmitter for local HART communication is shown in ([→Figure 32. Electrical connection 4...20 mA of HART to transmitter with local HART communication.](#)).

9.2.8. Connection of HART modem

For entering parameters into the transmitter a HART modem can be used, e.g. **HART/USB converter** offered by **PyroPress**. The converter will interoperate with the **Raport 2** software in Windows 7/10 operating systems or the equivalent software from a different source that accepts DDL or DTM libraries.

The converter may also be operated using the **Mobile Configurator** that can be installed on smartphones with Android system and connected using wireless communications.

The method of connecting the communicator or modem to the transmitter for local HART communication is shown in ([→Figure 32. Electrical connection 4...20 mA of HART to transmitter with local HART communication.](#)).

9.3. Equipotential bonding

When using a communicator in potentially explosive environments it may be necessary to use equipotential bonding of the equipment by means of equipotential bonding conductors. In this regard it is necessary to comply with locally applicable regulations.

9.4. Lightning protection

The transmitters comply with EMC standards for safety-related products used in general industrial environment. To increase the resistance of transmitters to excessive surges the lightning protection version **(SA)** can be selected. Transmitters with integrated lightning protection **(SA)** must be grounded. The presence of this protection in the transmitter is confirmed by the mark **(SA)** on the plastic cover of the power supply connector terminals.

Parameters of lightning protection equipment:

- discharge threshold voltage: 230 V DC;
- discharge threshold impulse voltage: 450 V (pulse 100 V/μs);
- discharge threshold impulse voltage: 600 V (pulse 1000 V/μs);
- discharge current for 1 surge: 20 kA, 8/20 μs;
- discharge current for 10 surges: 10 kA, 8/20 μs;
- discharge current for 300 surges: 200 A, 10/1000 μs.

9.5. Final inspection of cabling

After completing the electrical installation of the transmitter it is necessary to check the following:

- does the supply voltage measured at the transmitter terminals at maximum set current match the range of supply voltage specified on the transmitter nameplate?
- Is the transmitter connected according to the information given in section (→ [Cable connection to transmitter internal terminals](#))?
- Are all the screws properly tightened?
- Are the transmitter covers properly screwed?
- Are the cable gland and the gland plug correctly tightened?

10. OPERATION

10.1. Local LCD display

The transmitter provides the option of adjusting the display position relative to the mounting position of the housing. Access to the holders (item 2) used to rotate the display is provided after opening the front cover (item 1). The display may be rotated by an angle of 345° with a step of 15° :

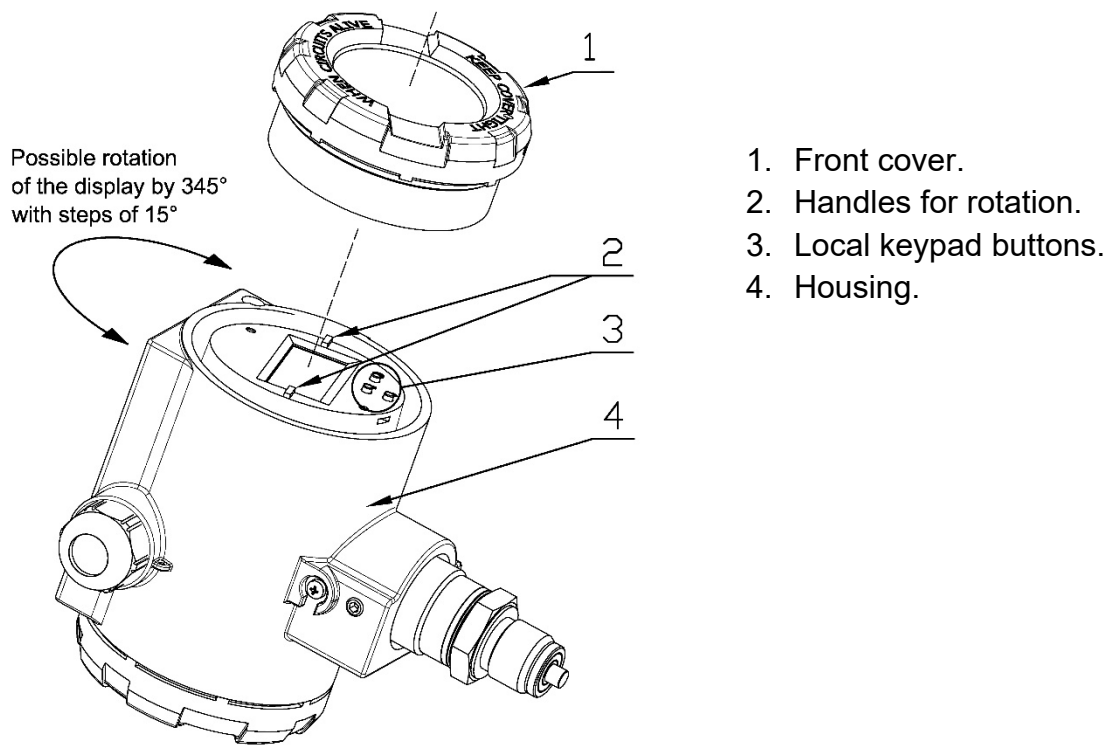


Figure 35. Change of display position and access to keypad buttons.

The LCD has three primary information fields identified in the figure below as LCD1, LCD2, LCD3.

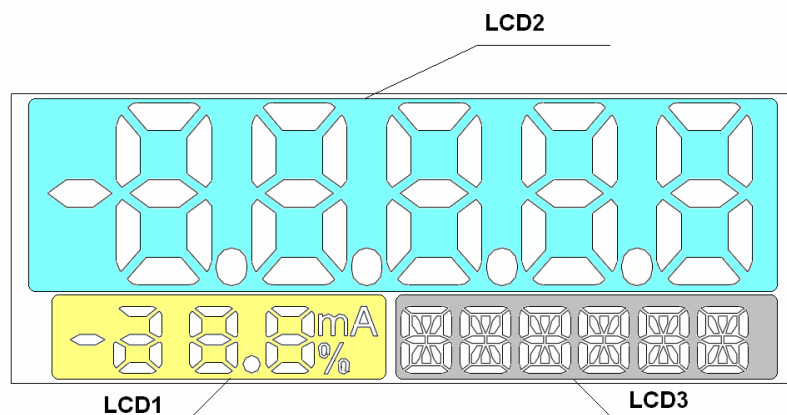


Figure 36. Display information fields.

Depending on the configuration **LCD1** field is used to display:

- values of process variable for current in [**mA**] with 0.1 mA resolution;
- values of the set range of current output in percent [%] with 1% resolution.

Depending on the configuration **LCD2** field is used to display:

- values of pressure/differential pressure in physical units;
- values of pressure/differential pressure in the user's units and scaling;
- value of temperature of the pressure sensor body;
- value of CPU temperature;
- values of the set range when changing the range by entering a number;
- information on error or failure number;
- information on exceeding the range of displayed values;
- information about exceeding the set range limits (only in MID mode).

Depending on the configuration **LCD3** field is used to display:

- physical unit of pressure displayed on LCD2;
- user's unit when displaying values of pressure/differential pressure on LCD2 in user's units and scaling done by the user;
- option of selecting a setpoint using the local setpoint change MENU;
- numbers of errors related to the execution of commands of the local setpoint change MENU.

Display configuration is changeable either by way of the local keypad/local MENU or via HART communication.

The local LCD has a limited number of character fields. For this reason the majority of the messages are displayed in an abbreviated form.

Below you will find a list of abbreviations used for each character field:

LCD1 field:

[mA] – value (milliamperes) of process current in line 4...20 mA, proportional to the measured pressure.

[%] – value (percentage) of the setpoint **U(t)** of current controller in current loop 4...20 mA. This value is the ratio of the process current **I_p(t)** to the current range width according to the following formula:

$$\%U(t) = \frac{I_p(t) - 4 \frac{[mA]}{16}}{16} * 100[\%]$$

LCD2 field:

The LCD2 field is used mainly to display floating point decimal values in a unit displayed on LCD3. In some cases, other messages may be displayed:

- **ERROR** in case of some operating errors or failure diagnosed in the transmitter, error/failure number **Exxxx** will appear on LCD2, the **ERROR** message will be displayed on LCD3. The image will blink to attract the operator's attention. The transmitter will set the current output to alarm status $I_{AL} < 3.600 \text{ mA}$.
In order to identify the cause, please refer to section ([→TROUBLESHOOTING](#));
- **undEr** if the limit below LRV of the set range (only in MID mode) is exceeded by the process, **undEr** (under) message will appear on LCD1. The image will blink to attract the operator's attention. The transmitter will set the current output to alarm status $I_{AL} < 3.600 \text{ mA}$;
- **ouEr** if the limit above URV of the set range (only in MID mode) is exceeded by the process, **ouEr** (over) message will appear on LCD1. The image will blink to attract the operator's attention;
- • • • • when the set position of the decimal point on LCD2 does not permit the correct display of the process variable, four dots • • • • will appear on LCD.
The image will blink to attract the operator's attention. In this event change the decimal point position in the local setpoint change MENU or via HART communications.

LCD3 field:

Abbreviations of physical units of pressures and levels and their description:

INH2O	inches of water column with temperature of 0°C.
INHG	inches of mercury column with temperature of 0°C.
FTH2O	feet of water column with temperature of 20°C (68°F).
MMH2O	millimetres of water column with temperature of 20°C (68°F).
MMHG	millimetres of mercury column with temperature of 0°C.
PSI	pounds per square inch.
BAR	bars.
MBAR	millibars.
GSQCM	grams per square centimetre.
KGSQCM	kilograms per square centimetre.
PA	pascals.
KPA	kilopascals.
TORR	torrs.
ATM	atmosphere.
MH2O4	metres of water column with temperature of 4°C.
MPA	megapascals.
INH2O4	inches of water column with temperature of 4°C.
MMH2O4	millimetres of water column with temperature of 4°C.
NOUNIT	the shortcut displayed when a unit not implemented in the transmitter is configured via HART communication.

Abbreviations of temperature measurement point name:

SENS °C	temperature of pressure/differential pressure sensor measurement structure in degrees Celsius.
CPU °C	temperature of the main CPU structure in degrees Celsius.

Abbreviations displayed during configuration via local MENU and their descriptions:

<-BACK	return to one level above in local MENU.
EXIT	going out of the local MENU.
UNIT	pressure and level unit selection menu.
SENS_T	option of measuring the temperature of pressure/differential pressure sensor measurement structure.
CPU_T	option of measuring the main CPU structure temperature.
DAMPIN	menu of selecting damping time constant of process variable.
TRANSF	menu of selecting the current output linearization function.
%SQRT	menu of selecting the deadband percentage of the root characteristics of the current output linearization.
PVZERO	pressure transmitter resetting menu and option.
SETURV	URV setting menu (upper pressure of the set range).
SETLRV	LRV setting menu (lower pressure of the set range).
BYPRES	option of setting the range according to pressure.
BYVALU	option of setting the set range by entering a value.
RESET	transmitter hot restart software menu.
LCD1VR	menu for selection of the type of measurement displayed on LCD1.
LCD2VR	menu for selection of the type of measurement displayed on LCD2.
LCD2DP	menu for selecting position of comma / decimal point.
FACTOR	return to factory values menu.
RECALL	option of return to factory settings. Factory pressure/differential pressure calibrations, zero setpoints of pressure and current will be restored.
LINEAR	option of linear function of current output setpoint linearization.
SQRT	option of root function of current output setpoint linearization.
SPECIA	option of the user's special characteristics of current output setpoint linearization.
SQUARE	option of square function of current output setpoint linearization.
CURREN	option of selecting the display of set current on LCD1.
PERCEN	option of selecting the display of set percentage on LCD1.
PRESS	option of selecting the display of pressure/differential pressure on LCD1.
USER	option of selecting user's units and scaling to be displayed on LCD1.
MID_WP	MID mode setting menu. In this mode, the option of changing the setpoints related to the transmitter metrology is disabled. Additionally, the exceeding of LRV and URV limits results in displaying the undEr or ouEr message, blinking of the display and setting of the process output to the current alarm mode I _{AL} < 3.600 mA.
ON	MID mode activation option.
OFF	MID mode deactivation option.
X.XXXX	option of selecting position of comma / decimal point.
XX.XXX	option of selecting position of comma / decimal point.
XXX.XX	option of selecting position of comma / decimal point.
XXXX.X	option of selecting position of comma / decimal point.
XXXXX.	option of selecting position of comma / decimal point.

MAN.PYRP.PYRD.EX.002

0 [S]	option of selecting damping time constant.
2 [S]	option of selecting damping time constant.
5 [S]	option of selecting damping time constant.
10 [S]	option of selecting damping time constant.
30 [S]	option of selecting damping time constant.
60 [S]	option of selecting damping time constant. The 60-second damping constant is only available from the local keypad; the configuration via HART in Revision 5 does not allow a damping value greater than 30 seconds. Other damping values are possible to be set via HART communication.
0.0%	option of selecting root characteristics deadband point.
0.2%	option of selecting root characteristics deadband point.
0.4%	option of selecting root characteristics deadband point.
0.6%	option of selecting root characteristics deadband point.
0.8%	option of selecting root characteristics deadband point.
1.0%	option of selecting root characteristics deadband point.
	Other deadband values are possible to be set via HART communication.
DONE	message about the acceptance and implementation of the set-point change.

Abbreviations of local configuration errors and description of abbreviations:

ER_L07	message displayed on LCD3. It is displayed if a user tries to change the set-point in the transmitter protected against entry (change of setpoints) or in active MID mode.
ER_L09	message displayed on LCD3. It is displayed if: <ul style="list-style-type: none"> – a user tries to change the set range by set pressure which is not within the allowable upper URL pressure. – A user tries to reset pressure when the pressure exceeds the allowable upper limit.
ER_L10	message displayed on LCD3. It is displayed if: <ul style="list-style-type: none"> – a user tries to change the set range by set pressure which is not within the allowable lower LRL pressure. – A user tries to reset pressure when the pressure exceeds the allowable lower limit.
ER_L14	message displayed on LCD3. It is displayed if: <ul style="list-style-type: none"> – the adopted URV value through the set pressure or entry of a value cannot be accepted because it causes a reduction of the set pressure range set below the allowable limit.
ER_L16	message displayed on LCD3. It is displayed if: <ul style="list-style-type: none"> – a user tried to perform an operation that is disabled or unavailable. It may be caused by: <ul style="list-style-type: none"> • attempting to access the local setpoint change MENU when the access to the local MENU is disabled; • attempting to reset pressure in the absolute pressure measurement transducer.
WG_L14	the message will appear if the assumed LRV value through the set pressure or entry of a value causes a decrease of the current set range. Entry of LRV automatically results in the transmitter's attempt to set URV in such a way that the current width of the set range is maintained. If this is not possible due to exceeded URL, the transmitter automatically adopts the URV = URL and a new LRV. Since the set range width and URV deviate from previous values, a message is displayed.

ASCII characters displayed on LCD3 in user's unit:

- using HART communication the user can configure their own 6-character unit displayed on LCD3. ASCII characters from the range (32 ... 96 dec) or (20 ... 60 hex), can be configured and displayed i.e.:

!"#\$%&'()*+,-./0123456789:;<=>?@ABCDEFGHIJKLMNOPQRSTUVWXYZ[\]^_`

10.2. Local keypad

The local keypad is used to enable the configuration mode of some transmitter parameters and to navigate through MENU and accept MENU options. The MENU can be accessed by pressing and holding any of the keys for at least 4 seconds. After this time, the LCD3 display will show an **EXIT** message. This indicates the entering into the MENU navigation mode.

10.3. Local configuration of setpoints

Transmitter enables local configuration of some of the most common setpoints via local keypad and local LCD display.

10.4. Navigation in local setpoints MENU

The MENU can be accessed by pressing and holding any of the keys for at least 4 seconds. After this time, the LCD3 display will show an **EXIT** message. This indicates entering into the local configuration MENU. Pressing the buttons with arrows [↑] [↓] for at least 1 second will move up or down the MENU.

10.5. Acceptance of local setpoints

The key marked with symbol [•] is to accept the selection. The acceptance of setpoint change is confirmed by a **DONE** message displayed on LCD3. After changing the setpoint, the transmitter exits the local configuration change MENU. When in MENU mode, if no key activity has occurred for 2 minutes the transmitter will automatically exit the menu and return to display the standard messages. The MENU can also be exited by selecting and accepting the **EXIT** option.

10.6. List of local setpoints MENU messages


EXIT→	[↓][scroll down]	[↑][scroll up]	→	■ [set]
PVZERO→	[↓][scroll down] ←BACK PVZERO	[↑][scroll up] ←BACK PVZERO	→	■ [set]
SETLRV→	[↓][scroll down] ←BACK SETLRV	[↑][scroll up] ←BACK SETLRV	→	■ [set]
SETURV→	[↓][scroll down] ←BACK SETURV	[↑][scroll up] ←BACK SETURV	→	■ [set]
UNIT→	[↓][scroll down] ←BACK INH2O INHG FTH2O MMH2O MMHG PSI BAR MBAR GSQCM KGSQCM PA KPA TORR ATM MH2O4 MPA INH2O4 MMH2O4	[↑][scroll up] ←BACK MMH2O4 INH2O4 MPA MH2O4 ATM TORR KPA PA KGSQCM GSQCM MBAR BAR PSI MMHG MMH2O FTH2O INHG INH2O	→	■ [set]
DAMPIN→	[↓][scroll down] ←BACK 60 [S] 30 [S] 10 [S] 5 [S] 2 [S] 0 [S]	[↑][scroll up] ←BACK 0 [S] 2 [S] 5 [S] 10 [S] 30 [S] 60 [S]	→	■ [set]
TRANSF→	[↓][scroll down] ←BACK LINEAR SQRT SPECIA SQUARE	[↑][scroll up] ←BACK SQUARE SPECIA SQRT LINEAR	→	■ [set]
%SQRT→	[↓][scroll down] ←BACK 1.0 % 0.8 % 0.6 % 0.4 % 0.2 % 0.0 %	[↑][scroll up] ←BACK 0.0 % 0.2 % 0.4 % 0.6 % 0.8 % 1.0 %	→	■ [set]

LCD1VR→	[↓][scroll down] ←BACK CURREN PERCEN	[↑][scroll up] ←BACK PERCEN CURREN	→	Ⓢ [set]
LCD2VR→	[↓][scroll down] ←BACK PRESS USER SENS_T CPU_T	[↑][scroll up] ←BACK CPU_T SENS_T USER PRESS	→	Ⓢ [set]
LCD2DP→	[↓][scroll down] ←BACK XXXXX● XXXX●X XXX●XX XX●XXX X●XXXX	[↑][scroll up] ←BACK X●XXXX XX●XXX XXX●XX XXXX●X XXXXX●	→	Ⓢ [set]
FACTOR→	[↓][scroll down] ←BACK RECALL	[↑][scroll up] ←BACK RECALL	→	Ⓢ [set]
RESET→	[↓][scroll down] ←BACK RESET	[↑][scroll up] ←BACK RESET	→	Ⓢ [set]
MID_WP→	[↓][scroll down] ←BACK ON OFF	[↑][scroll up] ←BACK OFF ON	→	Ⓢ [set]


10.7. Structure of local setpoints MENU

(Press and hold any of 3 buttons for 4 secs.)

When navigating through the active local MENU area depress the keypad buttons for a minimum of 1 sec to trigger the action. The pushing and holding of button ↑ or ↓ enables scrolling through the MENU options approximately every 1 sec. If no key activity has been detected for 2 minutes the transmitter will automatically exit the MENU and return to display the process variable.

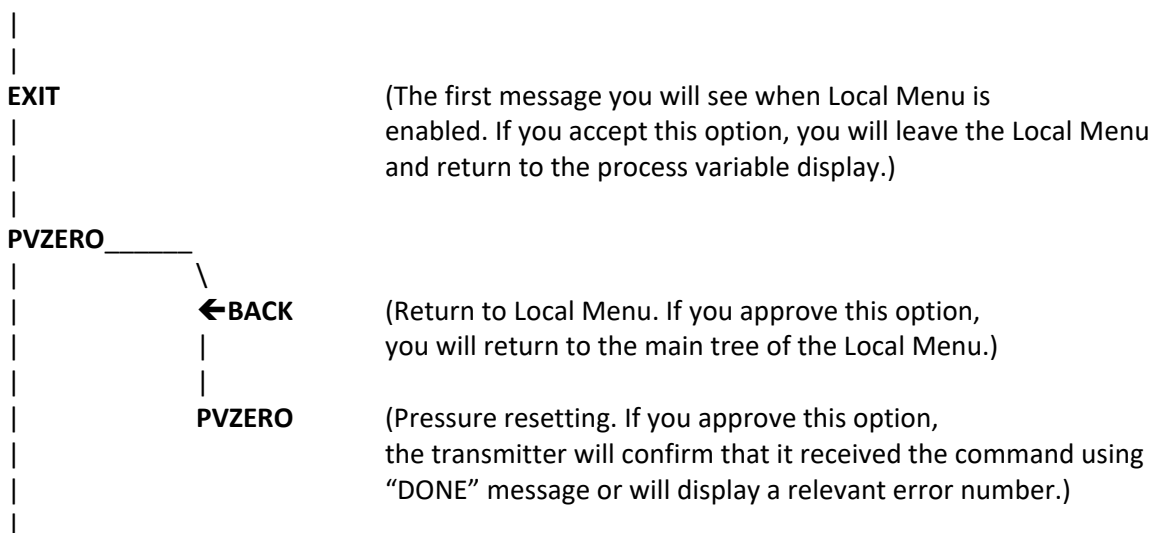

MAN.PYRP.PYRD.EX.002

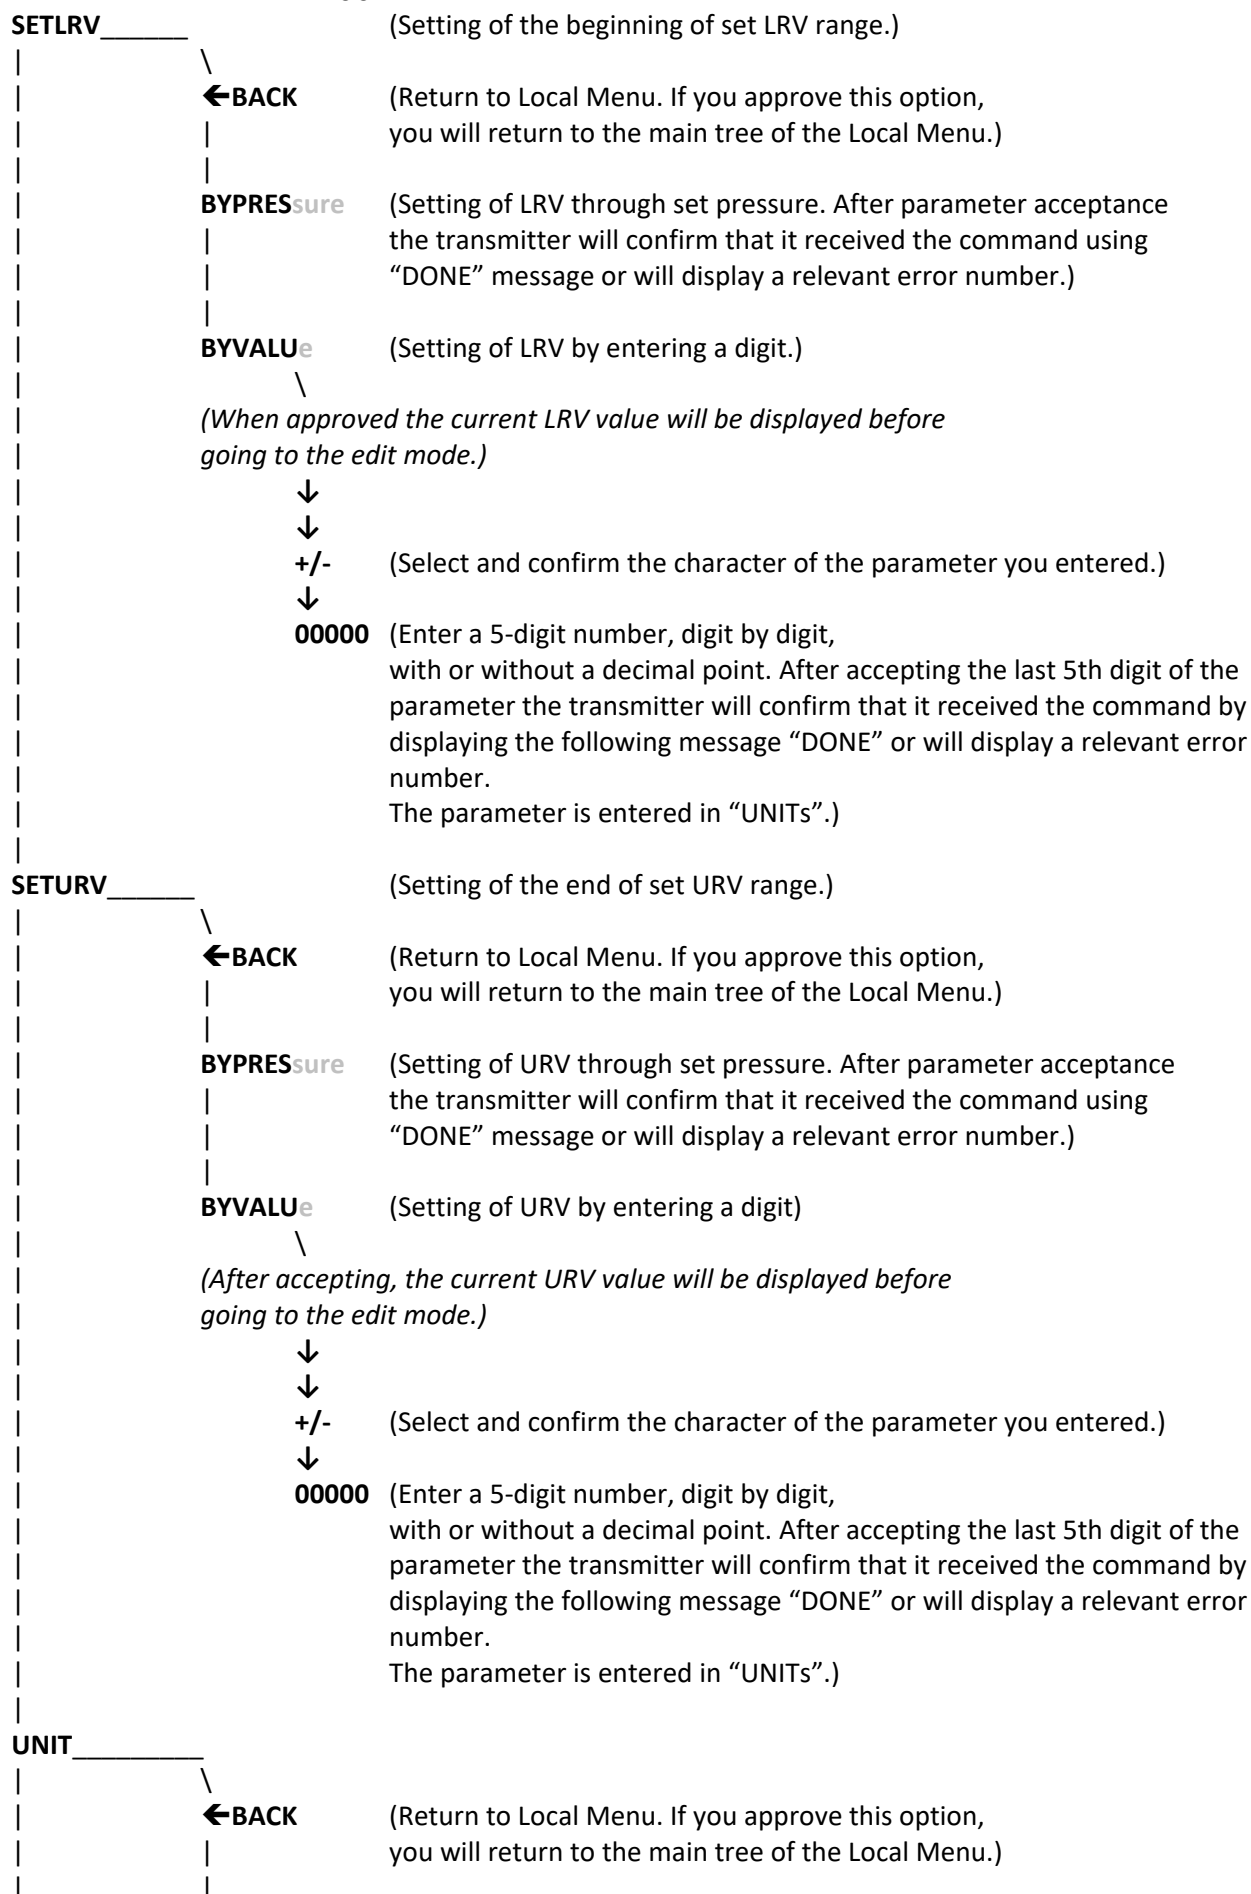

(Accept one of the following units by

pressing ● button. After accepting the parameter,

the transmitter will confirm that it received the command by displaying the following message "DONE".)

INH2O
INHG
FTH2O
MMH2O
MMHG
PSI
BAR
MBAR
GSQCM
KGSQCM
PA
KPA
TORR
ATM
MH2O4
MPA
INH2O4
MMH2O4

DAMPING_____

(Setting of damping time constant of process variable.)

←BACK

(Return to Local Menu. If you approve this option, you will return to the main tree of the Local Menu.)

(Accept one of the following values of time constant by

pressing and holding ● button. After accepting the parameter,

the transmitter will confirm that it received the command by displaying the following message "DONE".)

0 [s]
2 [s]
5 [s]
10 [s]
30 [s]
60 [s]

TRANSFer_____

(Setting of transfer type for current output characteristics.)

←BACK

(Return to Local Menu. If you approve this option, you will return to the main tree of the Local Menu.)

(Accept one of the following values of time by pressing and holding

pressing ● button. After accepting the parameter,

the transmitter will confirm that it received the command by displaying the following message "DONE".)

LINEAr
SQRT

(Linear)

(Square root.)

MAN.PYRP.PYRD.EX.002

SPECIAL	(Special user specified.)
SQUARE	(Square.)
% SQRT	(Setting of root characteristic cut-off point.)
←BACK	(Return to Local Menu. If you approve this option, you will return to the main tree of the Local Menu.)
	(Accept one of the following values by pressing and holding pressing ● button. After accepting the parameter, the transmitter will confirm that it received the command by displaying the following message "DONE".)
0.0%	
0.2%	
0.4%	
0.6%	
0.8%	
1.0%	
LCD1Variable	(Type of process variable displayed on LCD1.)
←BACK	(Return to Local Menu. If you approve this option, you will return to the main tree of the Local Menu.)
	(Accept one of the following options by pressing ● button. After accepting the parameter, the transmitter will confirm that it received the command by displaying the following message "DONE".)
CURRENT	(LCD1 display will display a value of current in the current loop.)
PERCENT	(LCD1 display will display a percentage value of output setpoint.)
LCD2Variable	(Type of variable displayed on LCD2.)
←BACK	(Return to Local Menu. If you approve this option, you will return to the main tree of the Local Menu.)
	(Accept one of the following options by pressing ● button. After accepting the parameter, the transmitter will confirm that it received the command by displaying the following message "DONE".)
PRESSure	(LCD2 will display pressure.)
USER	(LCD2 display will display the value scaled in user units.)

	SENS_T	(LCD2 display will display the current temperature of pressure sensor – head in °C.)
	CPU_T	(LCD2 display will display the current temperature of transducer CPU – electronic elements in °C.)
LCD2DP		(Position of decimal point of the variable displayed on LCD2.)
	←BACK	(Return to Local Menu. If you approve this option, you will return to Local Menu main tree.)
		(Accept one of the following options by pressing ● button. After accepting the parameter, the transmitter will confirm that it received the command by displaying the following message “DONE”.)
	XXXXX●	
	XXXX●X	
	XXX●XX	
	XX●XXX	
	X●XXXX	
FACTORY		(Removal of pressure and current sub-calibration. Return to factory settings.)
	←BACK	(Return to Local Menu. If you approve this option, you will return to the main tree of the Local Menu.)
		(Accept the following command by pressing and holding ● button. After accepting the parameter, the transmitter will confirm that it has received the command with “DONE” message.)
	RECALL	
RESET		(Software forcing of transmitter reset.)
	←BACK	(Return to Local Menu. If you approve this option, you will return to the main tree of the Local Menu.)
		(Accept the following command by pressing and holding ● button. After accepting the parameter, the transmitter will perform hot restart.)
	RESET	
MID_WP		(Locked modification of parameters related to MID metrology.)

MAN.PYRP.PYRD.EX.002

	←BACK	(Return to Local Menu. If you approve this option, you will return to the main tree of the Local Menu.)
		(Accept one of the following options by
		pressing ● button. After accepting the parameter,
		the transmitter will confirm that it received the command by displaying the
		following message "DONE".)
	ON	(Activation of the interlock of parameters affecting metrology.)
	OFF	(Deactivation of the interlock of parameters affecting metrology.)

10.8. Remote configuration of setpoints (HART 5 / HART 7)

The transmitter allows to read out and configure the parameters via HART communication using 4...20 mA loop as a physical layer for modulation FSK BELL 202.

10.8.1. Compatible devices

The following devices may be used to communicate with the transmitter:

- PyroPress supplied KAP-03 communicator (only HART 5);
- communicators from other sources, including those using DDL and DTM libraries;
- PC computers equipped with HART modem (e.g. HART/USB offered by PyroPress) with Windows 7 or Windows 10 operating system with installed Raport 2 software;
- PC computers equipped with HART modem using software from other sources, accepting DDL and DTM libraries;

10.8.2. Compatible configuration software

- Raport 2 software loaded within Windows 7 or Windows 10 operating systems;
- Mobile Configurator under control of the Android system;
- Equivalent software from other sources accepting DDL and DTM libraries.

10.8.3. Local HART communication jumper

The transmitter permits the use of local HART communication. To implement this a HART communicator unit or modem interoperating with a computer or a smartphone is required. In order to establish communication, it is necessary to:

- remove the HART communication jumper (→ [Figure 32, item 2](#));
- connect the communicator or modem to terminals (→ [Connection of transmitter with the option of using local HART communication](#)).

10.8.4. Method of connecting communication devices

The method of connecting the communication devices locally to the transmitter is described in section (→ [Connection of transmitter with the option of using local HART communication](#)). For remote communication the HART modem should be connected in parallel to the 4...20 mA loop. The resistance between the power supply and the modem connection point should be greater than 240 Ω. The guidelines of the minimum load resistance R_{L_MAX} described in section (→ [Resistance load in power supply line](#)) should also be observed. When using measuring cards with built-in HART master it shall be necessary to observe the regulations of the card manufacturer.

10.8.5. Structure of remote configuration menu

Transmitter provides a number of parameters, data and methods via remote HART communication. The structure of the menu in this configuration and access to other data depends on the software used to communicate with the transmitter or libraries used in the applications.

On that basis it is not possible to describe these structures in this manual.

The transmitter meets the requirements of the HART standard, revision 5.1 and revision 7. The available commands and the associated parameters and methods are shown in Table 3 and Table 4.

Table 3. HART rev 5.1 communication. Commands, parameters, methods.

Specific data related to the protocol HART rev5.1 application layer		
HART Command No	Type	Function
Universal commands		
0	READ	Read unique identifier
1	READ	Read primary variable
2	READ	Read current and percent of range
3	READ	Read current and four dynamics variables
6	WRITE	Write pooling address
11	READ	Read unique identifier associated with TAG
12	READ	Read message
13	READ	Read TAG, DESCRIPTOR, DATE
14	READ	Read PV sensor information
15	READ	Read output information
16	READ	Read final Assembly Number
17	WRITE	Write message
18	WRITE	Write tag, descriptor, date
19	WRITE	Write final assembly number
General-purpose commands		
34	WRITE	Write PV damping value
35	WRITE	Write PV unit code and upper and lower range values
36	WRITE	Set PV upper range value URV by PV value
37	WRITE	Set PV lower range value LRV by PV value
38	WRITE	Reset "configuration changed" flag
40	WRITE	Enter/exit PV current mode
42	WRITE	Perform master reset

43	WRITE	Set PV zero
44	WRITE	Write PV unit
45	WRITE	Trim PV current DAC zero
46	WRITE	Trim PV current DAC gain
47	WRITE	Write PV transfer function
48	READ	Read additional transmitter status
59	WRITE	Set numbers of response preambles
Manufacturer's specific commands		
128	READ	Read static data materials
129	READ	Read device variable trim points
130	WRITE	Trim upper sensor calibration
131	WRITE	Trim lower sensor calibration
132	WRITE	LCD1 variable, LCD2 variable, decimal points, LCD operation, keyboards operation – set local control modes
133	READ	Read local control modes
135	WRITE	Write user's characteristic coefficients
136	READ	Read user's characteristic coefficients
138	WRITE	Return to factory settings
141	WRITE	Write Analog Input function block configurations
142	READ	Read Analog Input function block configurations
230	READ	Read CPU, Master, Slave, HART firmware revision
231	READ	Read product codes
233	READ	Read separator codes
235	READ	Read manifold codes
237	READ	Read operational limits
240	WRITE	Write long TAG
241	READ	Read long TAG
242	WRITE	Write sqrt start point coefficient
243	READ	Read sqrt start point coefficient
244	WRITE	Write User's unit name and rearrange coefficients
245	READ	Read User's unit name and rearrange coefficients
246	WRITE	Write customer's security code
247	WRITE	Set write protect code

Table 4. HART rev 7 communication. Commands, parameters, methods.

Specific data related to the protocol HART rev7 application layer		
HART Command No	Type	Function
Universal commands		
0	READ	Read unique identifier
1	READ	Read primary variable
2	READ	Read current and percent of range
3	READ	Read current and four dynamics variables
6	WRITE	Write pooling address
7	WRITE	Read Loop Configuration
8	READ	Read Dynamic Variable Classifications
9	READ	Read Device Variables with Status
11	READ	Read unique identifier associated with TAG
12	READ	Read message

13	READ	Read TAG, DESCRIPTOR, DATE
14	READ	Read PV sensor information
15	READ	Read output information
16	READ	Read final Assembly Number
17	WRITE	Write message
18	WRITE	Write tag, descriptor, date
19	WRITE	Write final assembly number
20	READ	Read Long Tag
21	READ	Read Unique Identifier Associated With Long Tag
22	WRITE	Write Long Tag
38	WRITE	Reset Configuration Changed Flag
48	READ	Read Additional Device Status
General-purpose commands		
31	READ/WRITE	Extended Command Numbers
34	WRITE	Write Primary Variable Damping Value
35	WRITE	Write Primary Variable Range Values
36	WRITE	Set Primary Variable Upper Range Value
37	WRITE	Set Primary Variable Lower Range Value
38	WRITE	Reset Configuration Changed Flag
40	WRITE	Enter/Exit Fixed Current Mode
42	WRITE	Perform Device Reset
43	WRITE	Set Primary Variable Zero
44	WRITE	Write Primary Variable Units
45	WRITE	Trim Loop Current Zero
46	WRITE	Trim Loop Current Gain
47	WRITE	Write Primary Variable Transfer Function
50	READ	Read Dynamic Variable Assignments
54	READ	Read Device Variable Information
59	WRITE	Write Number Of Response Preambles
80	READ	Read Device Variable Trim Points
81	READ	Read Device Variable Trim Guidelines
82	WRITE	Write Device Variable Trim Point
83	WRITE	Reset Device Variable Trim
1280	READ	Read Pressure Status
1281	READ	Read Capabilities
1282	READ	Read Supported Status Mask
1283	READ	Read Pressure Sensor Information
1284	READ	Read Process Connection
1285	READ	Read Associated Device Variables
Manufacturer's specific commands		
128	READ	Read static data materials
129	READ	Read device variable trim points
130	WRITE	Trim upper sensor calibration
131	WRITE	Trim lower sensor calibration
132	WRITE	LCD1 variable, LCD2 variable, decimal points, LCD operation, keyboards operation - set local control modes
133	READ	Read local control modes
134	WRITE	Write HART5/HART7 mode
135	WRITE	Write user's characteristic coefficients

MAN.PYRP.PYRD.EX.002

136	READ	Read user's characteristic coefficients
138	WRITE	Return to factory settings
141	WRITE	Write Analog Input function block configurations
142	READ	Read Analog Input function block configurations
230	READ	Read CPU, Master, Slave, HART firmware revision
231	READ	Read product codes
233	READ	Read separator codes
235	READ	Read manifold codes
237	READ	Read operational limits
240	WRITE	Write long TAG
241	READ	Read long TAG
242	WRITE	Write sqrt start point coefficient
243	READ	Read sqrt start point coefficient
244	WRITE	Write User's unit name and rearrange coefficients
245	READ	Read User's unit name and rearrange coefficients
246	WRITE	Write customer's security code
247	WRITE	Set write protect code

Configurable, non-configurable parameters, methods and diagnostic statuses are described in detail in Technical Information.

11. START-UP

The transmitter is typically set to the set range equal to the base range. The base range and the basic unit of the transmitter is indicated on its nameplate (→ [Transmitter identification](#)).



Danger of injury due to component breakage after exceeding the maximum permitted operating pressure!



Always use the transmitter within the allowable pressure limits!

11.1. Alarm configuration

Transmitter has developed internal diagnostics which monitor the work of its electronic circuits, process and environmental parameters. Diagnosis of dangerous statuses or malfunctioning of the internal transmitter systems results in setting alarm current $I_{AL} < 3.600$ mA. These current alarms can be enabled or disabled by the operator though they are factory set as disabled by default. The figure below shows the normal operation ranges of the transmitter process output and the ranges of saturation and alarm currents.

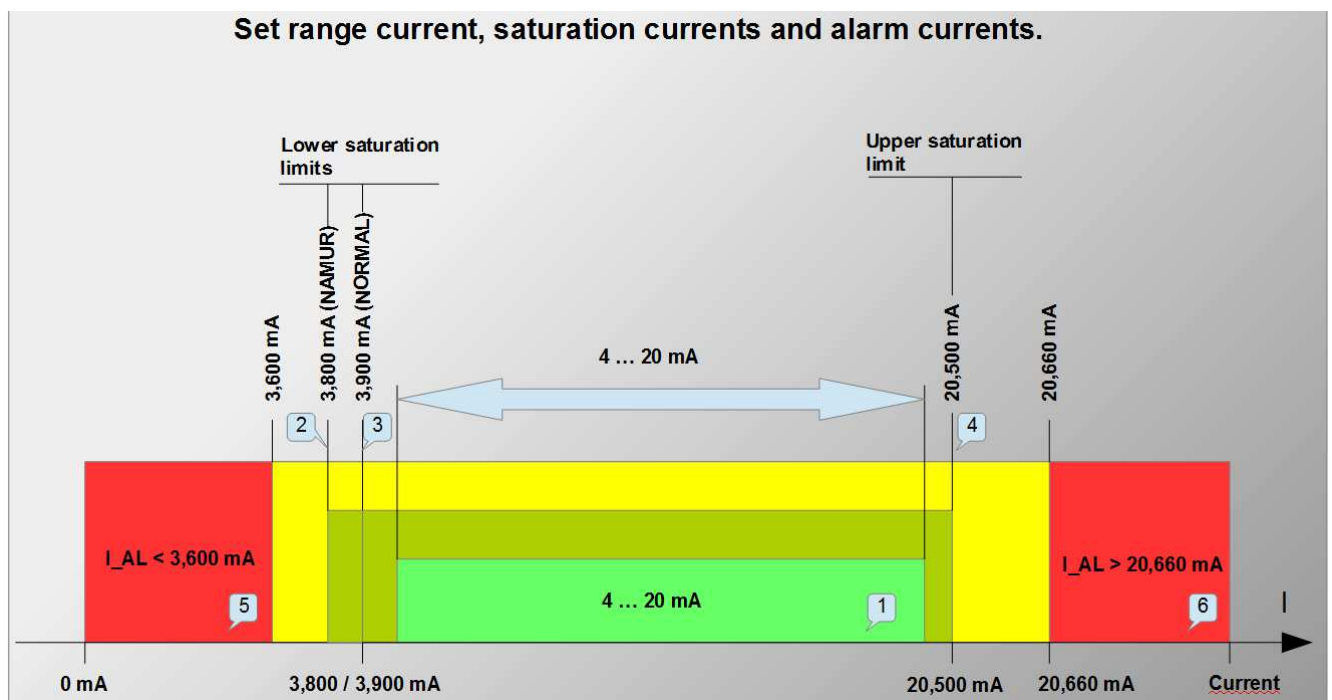


Figure 37. Set range current, saturation currents, alarm currents.

- 1 – Set 4...20 mA current area is corresponding to setpoint 0...100% of the process output.
- 2 – Lower saturation current of 3.800 mA for NAMUR mode.
- 3 – Lower saturation current of 3.900 mA for NORMAL mode.
- 4 – Upper saturation current of 20.500 mA for NAMUR and NORMAL mode.
- 5 – Alarm current area $I_{AL} < 3.600$ mA for internal diagnostic alarm
- 6 – Alarm current area $I_{AL} > 20.660$ mA for alarms related to safe failures with external diagnostics.

The transmitter diagnostics continually tests the environmental parameters:

- temperature of the pressure measurement structure sensor;
- temperature of the ADC transducer converting the electrical signal from the pressure sensor to the digital value of measurement;
- temperature of the CPU structure (transmitter's main microcontroller). If the transmitter operating temperature limits are exceeded the diagnostics will initiate alarm $I_{AL} < 3.600 \text{ mA}$. On the return to the permissible operational temperature range the diagnostic alarm mode will be deactivated and the transmitter returned to normal operation.

The transmitter diagnostics continually tests the pressure process parameters:

- if the pressure/differential pressure value increases above 50% of the base range width from URL, reaching the UPL point, the diagnostics will initiate alarm $I_{AL} < 3.600 \text{ mA}$. The re-establishment of the pressure/differential pressure below the UPL point will deactivate the alarm and return the transmitter to its normal operation;
- if the pressure/differential pressure value decreases below 50% of the base range width from LRL, reaching the LPL point, the diagnostics will initiate alarm $I_{AL} < 3.600 \text{ mA}$. The re-establishment of the pressure/differential pressure above the LPL point will deactivate the alarm and return the transmitter to its normal operation.

The transmitter diagnostics continually tests electric parameters and software resources of transmitter:

- if the internal diagnostics detect the malfunctioning or failure of the transmitter which is not critical in regard to the integrity of hardware and software, the transmitter software will activate alarm $I_{AL} < 3.600 \text{ mA}$. The diagnostic alarm condition will continue until the failure or damage is resolved. Error/failure number **Exxxx** will appear on LCD2; the **ERROR** message will be displayed on LCD3. The image will blink to attract the operator's attention. The transmitter will set the current output to alarm status $I_{AL} < 3.600 \text{ mA}$. In order to identify the cause, please refer to section ([→ TROUBLESHOOTING](#));
- if the internal diagnostics detect malfunctioning or failure of the transmitter which is critical from the point of view of integrity of hardware and software, such as the hardware error of RAM, FLASH, SVS, CPU logs, mathematical computation error, or if there is a difference exceeding 1% between the set process current and the current measured in the line, the transmitter will immediately cease operation and activate the critical diagnostic alarm mode. The transmitter display will be switched off. HART communication with the transmitter will not be possible. In the critical diagnostic alarm mode the additional protection of the transmitter disconnects its power supply from 4...20 mA loop. In this event the alarm current I_{AL} will be $< 0.500 \text{ mA}$ which is considerably lower than 3.600 mA. The transmitter will remain OFF until the power is disconnected and reconnected.

11.2. Configuration of operating mode

Before starting the work, the transmitter must be configured. The configuration should cover the following basic parameters:

- basic unit of transmitter;
- processing characteristics;
- the beginning of the set LRV range;
- the end of the set URV range;
- damping time constant;
- NORMAL/NAMUR analogue output operation mode;
- transmitter tag (TAG);
- LCD display configuration parameters;
- setting of the settings change lock password.

11.3. Correction of impact of mounting position

Once the transmitter has been mounted in its selected location it must be reset. This operation will eliminate the possible influence of the mounting position on the indication of pressure/differential pressure. In order to do so:

- in the case of atmospheric pressure transmitter without pressure applied (vented), perform the pressure resetting operation using the local MENU or HART communication;
- in the case of a differential pressure transmitter at compensated pressures on the Lo and Hi inputs, perform the pressure reset operation by means of local MENU or HART communication;
- in case of absolute pressure transmitter, resetting is not possible. The attempt to reset the transmitter will result in error message being displayed.

Once the transmitter parameters have been entered and it has been reset at the workstation, it is necessary to:

- **secure the device against the unauthorised access and tampering in the local setpoint change MENU;**
- **set a new password different from default password of “00000000”. The new password may consist of any combination of 8 hexadecimal characters 0...9, A...F. Store the password in a safe place. If the password is lost, its restoration or resetting to factory settings may only be performed by the manufacturer;**
- **activate the setpoint change lock to secure the transmitter against accidental, unintentional change of parameters.**

Pressure resetting can be done via local setpoint change MENU or HART communication. The remaining operations described in this section may only be performed using HART communication.

11.4. Flow measurements

Differential pressure transmitter can be used for flow measurement. The method of connecting the transmitter to the pressure system is described in sections ([➔ Gas and steam flow rate measurement system](#)) and ([➔ Liquid flow measurement](#)).

Flow measurements often require setting of pressure-processing characteristics for output current setpoints other than linear. In PYRD-2000ALW the following characteristics are available for the user:

- linear characteristics;
- second-stage root characteristics with relay characteristics and 0.2% hysteresis in the deadband;
- manufacturer's dual linear characteristics No 1 + second-stage root characteristics for constant deadband = 0.6% of setpoints;
- manufacturer's single linear characteristics No 2 + second-stage root characteristics and 0.2% hysteresis in the deadband;
- square characteristics;
- special characteristics based on user-modified table.

For more flow measurement issues refer to Technical Information.

11.5. Level measurements

Transmitters PYRP-2000ALW, PYRD-2000ALW, PYRD-2000YALW, PYRD-2000ALW can be used for liquid level measurement in open or closed tanks.

The method of connecting the transmitter to the level measurement system is described in the following sections: [➔ Liquid level measurement in open tanks](#) and [➔ Liquid level measurement in closed tanks](#).

The transmitter can be configured in physical units of liquid column such as water and mercury at several temperatures of the liquid. It is also possible to enter the user's unit and perform scaling of the setpoint indication. In case of tanks with irregular shapes, it is possible to use the user's characteristics to compensate the effect of the shape on the converted volume of liquid in the tank.

For more level measurement issues refer to Technical Information.

11.6. Pressure measurements

Transmitter PYRP(R)-2000ALW can be used for pressure measurement. The method of connecting the transmitter to the measurement system is similar to the method of connecting the differential pressure measurement system. If differential pressure transmitter PYRD-2000ALW is used, one pressure side of the transmitter is connected to the process, the other one remains open to the atmosphere.

For more pressure measurement issues refer to Technical Information.

11.7. Differential pressure measurements

The method of connecting transmitter PYRD-2000ALW to the differential pressure measurement system is described in the section ([➔ Differential pressure measurement](#)).

The transmitter can be configured in one of many physical units of pressure. It is also possible to enter the user's unit and perform scaling of the setpoint indication.

For more differential pressure measurement issues refer to Technical Information.

12. MAINTENANCE

12.1. Periodic inspections

Periodic inspections shall be carried out in accordance with applicable standards.

During the inspection, the condition of the pressure (tightness & physical condition of the connections & sensing element) and electrical (check of connections reliability and condition of gaskets and glands) connectors, condition of separating diaphragms (tarnish, corrosion) and stability of fixing of the housing and brackets (if used) shall be checked. Check the processing characteristics by performing the operations specific for the CALIBRATION and possibly CONFIGURATION procedure.

12.2. Non-periodic inspections

If the transmitter at the installation site has been exposed to mechanical damage, pressure overload, hydraulic pulses, overvoltage, deposits, medium crystallization, undercutting of the diaphragm, or incorrect operation of the transmitter is detected, proceed as necessary. Check the condition of the diaphragm, clean it, check the electrical functionality of the transmitter and the processing characteristics.



If there is no signal in the transmission line or its value is improper, check the supply line, connection status on terminal blocks, connectors, etc. Check the correct supply voltage value and load resistance.

12.3. Cleaning / washing

To remove impurities from the external surfaces of the transmitter, it must be wiped out/dry washed or if necessary wiped with a wetted cloth.

12.3.1. Diaphragm cleaning

The only possible method of cleaning the transmitter diaphragms is to dissolve the sludge produced.



Do not remove deposits and dirt from the transmitter diaphragms which are formed during operation mechanically using tools, since the diaphragms and the transmitter can be damaged.

The causes of transmitter malfunctioning also include damages to the sensors diaphragm resulting from overloads caused, for example, by:



- **application of over pressure;**
- **freezing or solidification of medium;**
- **pushing or scraping the diaphragm with a hard object, e.g. with a screw-driver.**

The symptoms of damage are generally such that the transmitter does not respond to pressure changes or responds incorrectly.

12.4. Spare parts

Parts of the transmitter that may be worn or damaged and thus replaced:
- cover seals.



Other parts in the case of Ex certified transmitters may only be replaced by the manufacturer.

12.5. Repair

Faulty or non-operational transmitter shall be returned to the manufacturer.

12.6. Returns

In the following cases the transmitter shall be returned directly to the manufacturer:

- the need for repair has been identified;
- it is necessary to perform factory calibration;
- a wrongly selected transmitter has been ordered;
- an incorrect transmitter has been delivered.

13. SCRAPPING, DISPOSAL



Worn or damaged devices shall be scrapped in accordance with WEEE Directive (2012/19/EU) on waste electrical and electronic equipment or returned to the manufacturer.

14. TROUBLESHOOTING

14.1. Malfunction messages on LCD display

In the case of diagnosed failures, transmitter will inform the user about the failure by setting alarm current $I_{AL} < 3.600 \text{ mA}$ and displaying a blinking collective error number on LCD2. The error number is displayed in the E character format and 4-digit decimal numbers. To identify the cause of malfunction, it is necessary to:

- read out statuses of Analog Input, Physical Block, Sensor Block and Transducer Block through HART communication, The statuses marked in these blocks will indicate a relatively accurate cause of a failure. This is the recommended method of obtain information to identify particular types of malfunction.

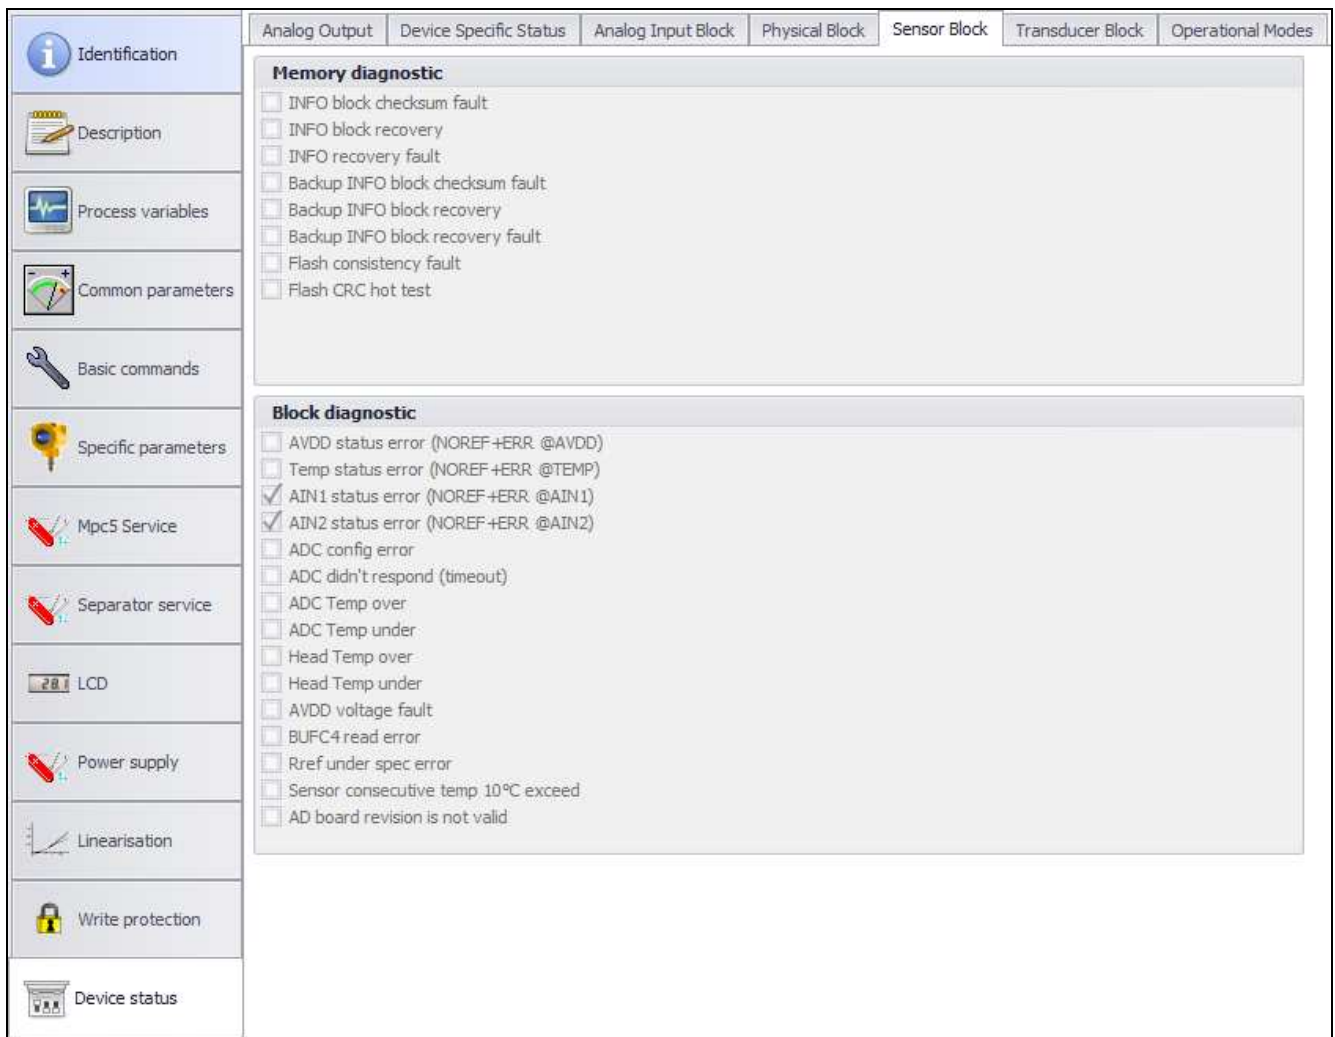


Figure 38. Example of the Sensor Block statuses read out from the transmitter via Raport 2.

- If the readout via HART communication is difficult or impossible for unidentified reasons, the error status number displayed on the transmitter's LCD2 screen can be referenced to assist in identification. However this is only a summary status which is a synthesis of failures and errors of all the blocks and for this reason it is less precise.

MAN.PYRP.PYRD.EX.002

To decode it, proceed as follows:

- replace a 4-digit decimal number displayed after E to a binary value, e.g. by means of a Windows calculator with a programmer's view option;
- read out statuses from the table below, one in the binary value item means that the status is active, zero means the status is not active.

Table 5. Numbers of error statuses displayed on the display.

Binary value bit	Status name	Description
BIT0 (1 dec)	SECURITY_VIOLATION	The permissible number of 20 attempts of unauthorised access to change the access password or unauthorised change of write protection was exceeded. The attempt counter takes into account the repetitions of HART command performed automatically by Master, thus when configuring Master, for example, to 2 repetitions, a user can make max. 10 attempts. The next unauthorised attempt will result in displaying the message and setting alarm current $I_{AL} < 3.600\text{mA}$. This condition will continue until the transmitter is reset or disconnected and reconnected to the power supply. If the access password is lost, the transmitter must be sent back to the manufacturer to restore the default password.
BIT1 (2 dec)	CLOCK_FAULT	The local quartz generator failure has been diagnosed. The transmitter will switch to the operation mode with the DCO standby generator and will set alarm current $I_{AL} < 3.600\text{ mA}$. This condition will continue until the transmitter is reset or disconnected and then re-energised. If the failure is repeated once again, the transmitter must be sent back to the manufacturer.
BIT2 (4 dec)	MEMORY_FAULT	RAM or FLASH memory fault was detected. This is a major failure of the equipment. The message on the display may appear only momentarily because due to the critical failure, the control will be taken over by the internal redundant alarm module WDT_SIL which disconnects the transmitter's internal power supply. The display will be off. Current will flow in the current loop $I_{AL} < 3.600\text{ mA}$. This condition will continue until the transmitter is disconnected and reconnected to the power supply. If the failure is repeated once again, the transmitter must be sent back to the manufacturer.
BIT3 (8 dec)	SENSOR_FAULT	Saturation of A/D transducer (USAL, LSAL), equipment problem related to damage of pressure measuring structure in the head or component damage were diagnosed in the pressure sensor block or pressure sensor power supply. The transmitter will set alarm current $I_{AL} < 3.600\text{ mA}$. This condition will continue until the cause of the damage ceases to exist. To determine whether the cause may be pressure overload, the pressure transmitter should be vented or pressure should be compensated between Lo and Hi levels (for differential pressure transmitter). If after this operation, the transmitter returns to the measurement indication without error, this means that the cause of the error was exceeded pressure (USAL or LSAL). Otherwise, if the error is still displayed, it is likely that a failure occurred and the transmitter must be sent back to manufacturer.

BIT4 (16 dec)	BARRIER_COMM_ FAULT	The digital communication failure through an optical galvanic barrier has been detected. The transmitter will set alarm current $I_{AL} < 3.600 \text{ mA}$. This condition will continue until the cause of the fault ceases to exist. The transmitter must be sent back to the manufacturer.
BIT5 (32 dec)	VOLTAGE_FAULT	Incorrect supply voltage of one of the transmitter modules has been detected. The transmitter will set alarm current $I_{AL} < 3.600 \text{ mA}$. This condition will continue until the cause of the fault ceases to exist. The transmitter must be sent back to the manufacturer.
BIT6 (64 dec)	CURRENT_LOOP_ FAULT	Difference greater than 1% (160 μA) between the current measured by the transmitter in the current loop 4...20 mA and set current calculated by the transmitter was detected. The transmitter will set alarm current $I_{AL} < 3.600 \text{ mA}$. If in an alarm condition the difference between the measured current and the set current calculated by the transmitter is less than 1%, the transmitter will remain in such an alarm condition. This condition will continue until the cause of the fault ceases to exist. However, if the alarm current will also deviate by more than 1% from the value of set current calculated by the transmitter, the control will be taken over by redundant alarm module WDT_SIL which disconnects the transmitter's internal power supply. The display will be off. Current will flow in the current loop $I_{AL} < 3.600 \text{ mA}$. This condition will continue until the transmitter is disconnected and reconnected to the power supply. As the error may appear as a result of very strong over-normative radio interference, the quality of the voltages supplying the transmitter with regard to EMC must be checked. If the power supply is correct and the failure is repeated once again, the transmitter must be sent back to the manufacturer.
BIT7 (128 dec)	PV_OUTOFLIM	The LPL or UPL point was exceeded on pressure/differential pressure scale. The digital measurement of the transmitter outside these points is not possible. The transmitter will set alarm current $I_{AL} < 3.600 \text{ mA}$. This condition will continue until the cause of the overload ceases to exist. If the transmitter is within the correct pressure range according to the information on the nameplate and the error message is still displayed, this may indicate a failure of the transmitter component. In this situation, the transmitter must be sent back to the manufacturer.
BIT8 (256 dec)	SEC_NEXT_VAR_ OUTOFLIM	The limits of the permissible temperature range of the transmitter operation were exceeded. The temperature measurement is done at 3 points: pressure sensor, A/D transducer and main CPU controller. The transmitter will set alarm current $I_{AL} < 3.600 \text{ mA}$. This condition will continue until the operating temperature returns to its correct range. If the transmitter is within the correct temperature range according to the information on the nameplate and the error message is still displayed, this may indicate a failure of the transmitter component. In this situation, the transmitter must be sent back to the manufacturer.

14.2. Failure statuses read using HART

The transmitter permits the interrogation of statuses using HART communication. The range of information available in this way is broader than the information diagnosed purely based on the error number shown on the transmitter display. The diagnostics permit the read out of the operation parameters of the transmitter blocks. Exemplary screen shots from Raport 2 software show the range of available diagnostic information. If the transmitter reports an error and the cause is not known the manufacturer recommends using HART diagnostics to determine the type of failure during contact with the manufacturer. The statuses indicated in the figures below are of indicative nature and show the way of displaying the failures.

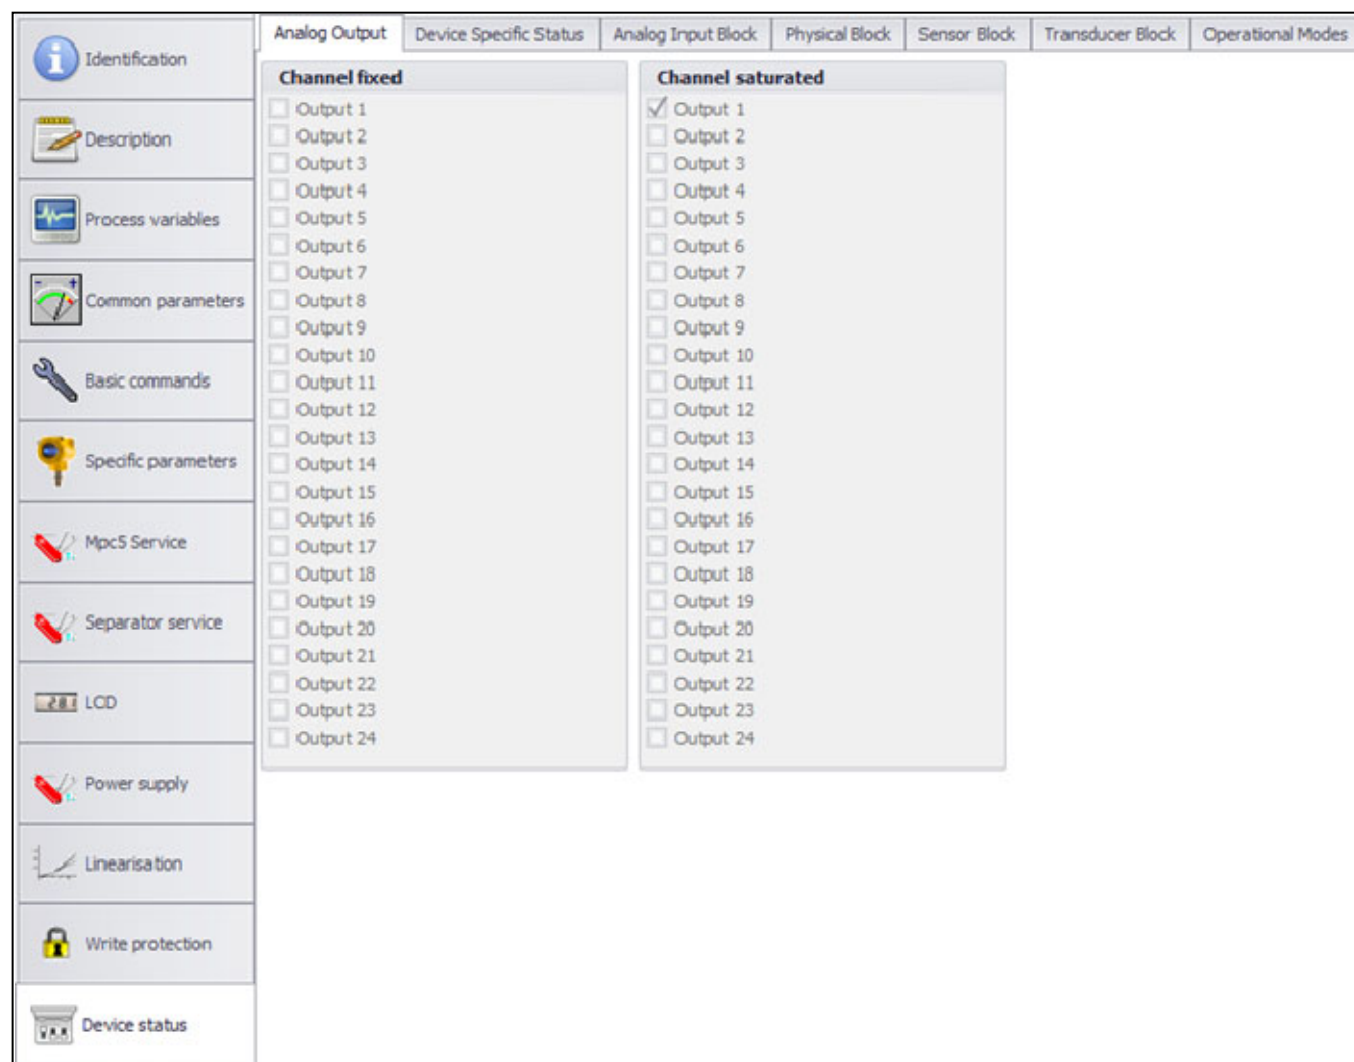


Figure 39. Statuses of the analogue output block.

	Analog Output	Device Specific Status	Analog Input Block	Physical Block	Sensor Block	Transducer Block	Operational Modes
Identification							
Description							
Process variables							
Common parameters							
Basic commands							
Specific parameters							
Mpc5 Service							
Separator service							
LCD							
Power supply							
Linearisation							
Write protection							
Device status							
	Device specific status <ul style="list-style-type: none"> <input type="checkbox"/> Security violation <input type="checkbox"/> Clock fault <input type="checkbox"/> Memory fault <input checked="" type="checkbox"/> Sensor fault <input type="checkbox"/> Barrier communication fault <input type="checkbox"/> Internal voltage fault <input type="checkbox"/> Current loop regulation fault <input type="checkbox"/> PV out of limits <input type="checkbox"/> Second or next variable out of limits <input type="checkbox"/> Analog output saturated <input type="checkbox"/> Output current fixed <input type="checkbox"/> Hot start occurred 		Configuration changes counter <div>Counter <input type="text" value="36"/></div>				

Figure 40. Device specific (summary) statuses.

MAN.PYRP.PYRD.EX.002

	Analog Output	Device Specific Status	Analog Input Block	Physical Block	Sensor Block	Transducer Block	Operational Modes
Identification	<div> Memory diagnostic <ul style="list-style-type: none"> <input type="checkbox"/> INFO block checksum fault <input type="checkbox"/> INFO block recovery <input type="checkbox"/> INFO recovery fault <input type="checkbox"/> Backup INFO block checksum fault <input type="checkbox"/> Backup INFO block recovery <input type="checkbox"/> Backup INFO block recovery fault <input type="checkbox"/> Flash consistency fault <input type="checkbox"/> Flash CRC hot test </div> <div> Block diagnostic <ul style="list-style-type: none"> <input type="checkbox"/> AI Current Loop Fault </div>						
Description							
Process variables							
Common parameters							
Basic commands							
Specific parameters							
Mpc5 Service							
Separator service							
LCD							
Power supply							
Linearisation							
Write protection							
Device status							

Figure 41. Analog input block statuses.

	Analog Output	Device Specific Status	Analog Input Block	Physical Block	Sensor Block	Transducer Block	Operational Modes
Identification	<div> Memory diagnostic <ul style="list-style-type: none"> <input type="checkbox"/> INFO block checksum fault <input type="checkbox"/> INFO block recovery <input type="checkbox"/> INFO recovery fault <input type="checkbox"/> Backup INFO block checksum fault <input type="checkbox"/> Backup INFO block recovery <input type="checkbox"/> Backup INFO block recovery fault <input type="checkbox"/> Flash consistency fault <input type="checkbox"/> Flash CRC hot test </div> <div> Block diagnostic <ul style="list-style-type: none"> <input type="checkbox"/> LFX1 fault <input type="checkbox"/> Local loopback (Master) fault <input type="checkbox"/> Remote loopback (Slave) fault <input type="checkbox"/> Barrier data error <input type="checkbox"/> ADC not ready <input type="checkbox"/> MSP temp over <input type="checkbox"/> MSP temp under </div>						
Description							
Process variables							
Common parameters							
Basic commands							
Specific parameters							
Mpc5 Service							
Separator service							
LCD							
Power supply							
Linearisation							
Write protection							
Device status							

Figure 42. Physical block statuses.

MAN.PYRP.PYRD.EX.002

	Analog Output	Device Specific Status	Analog Input Block	Physical Block	Sensor Block	Transducer Block	Operational Modes
Identification	<div> Memory diagnostic <ul style="list-style-type: none"> <input type="checkbox"/> INFO block checksum fault <input type="checkbox"/> INFO block recovery <input type="checkbox"/> INFO recovery fault <input type="checkbox"/> Backup INFO block checksum fault <input type="checkbox"/> Backup INFO block recovery <input type="checkbox"/> Backup INFO block recovery fault <input type="checkbox"/> Flash consistency fault <input type="checkbox"/> Flash CRC hot test </div> <div> Block diagnostic <ul style="list-style-type: none"> <input type="checkbox"/> AVDD status error (NOREF+ERR @AVDD) <input type="checkbox"/> Temp status error (NOREF+ERR @TEMP) <input checked="" type="checkbox"/> AIN1 status error (NOREF+ERR @AIN1) <input checked="" type="checkbox"/> AIN2 status error (NOREF+ERR @AIN2) <input type="checkbox"/> ADC config error <input type="checkbox"/> ADC didn't respond (timeout) <input type="checkbox"/> ADC Temp over <input type="checkbox"/> ADC Temp under <input type="checkbox"/> Head Temp over <input type="checkbox"/> Head Temp under <input type="checkbox"/> AVDD voltage fault <input type="checkbox"/> BUFC4 read error <input type="checkbox"/> Rref under spec error <input type="checkbox"/> Sensor consecutive temp 10°C exceed <input type="checkbox"/> AD board revision is not valid </div>						
Description							
Process variables							
Common parameters							
Basic commands							
Specific parameters							
MpcS Service							
Separator service							
LCD							
Power supply							
Linearisation							
Write protection							
Device status							

Figure 43. Pressure sensor block statuses.

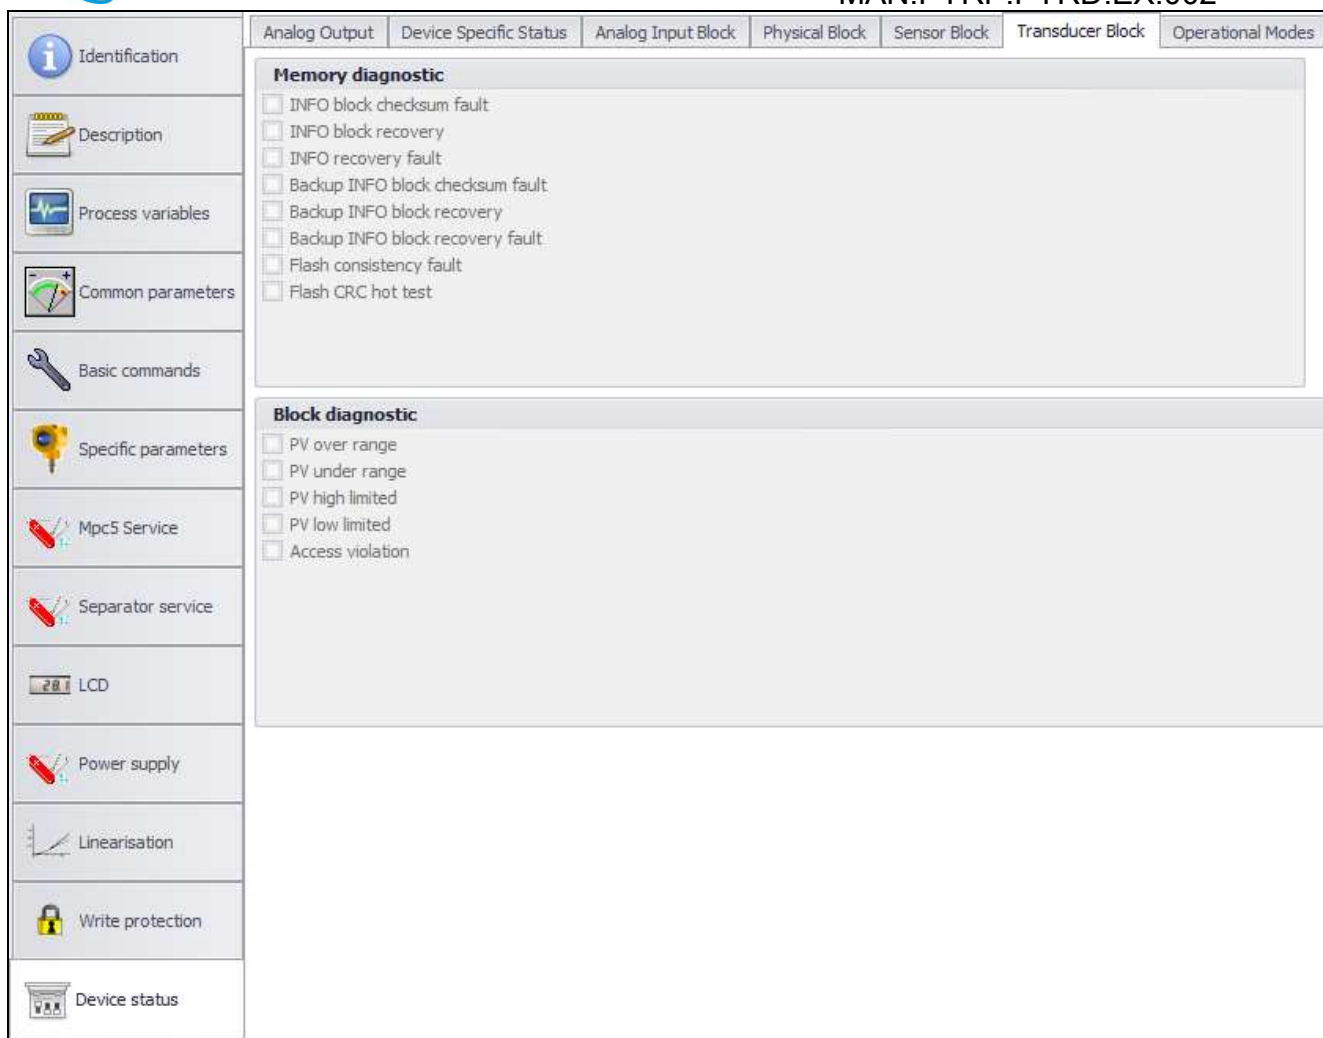


Figure 44. Transducer block statuses.

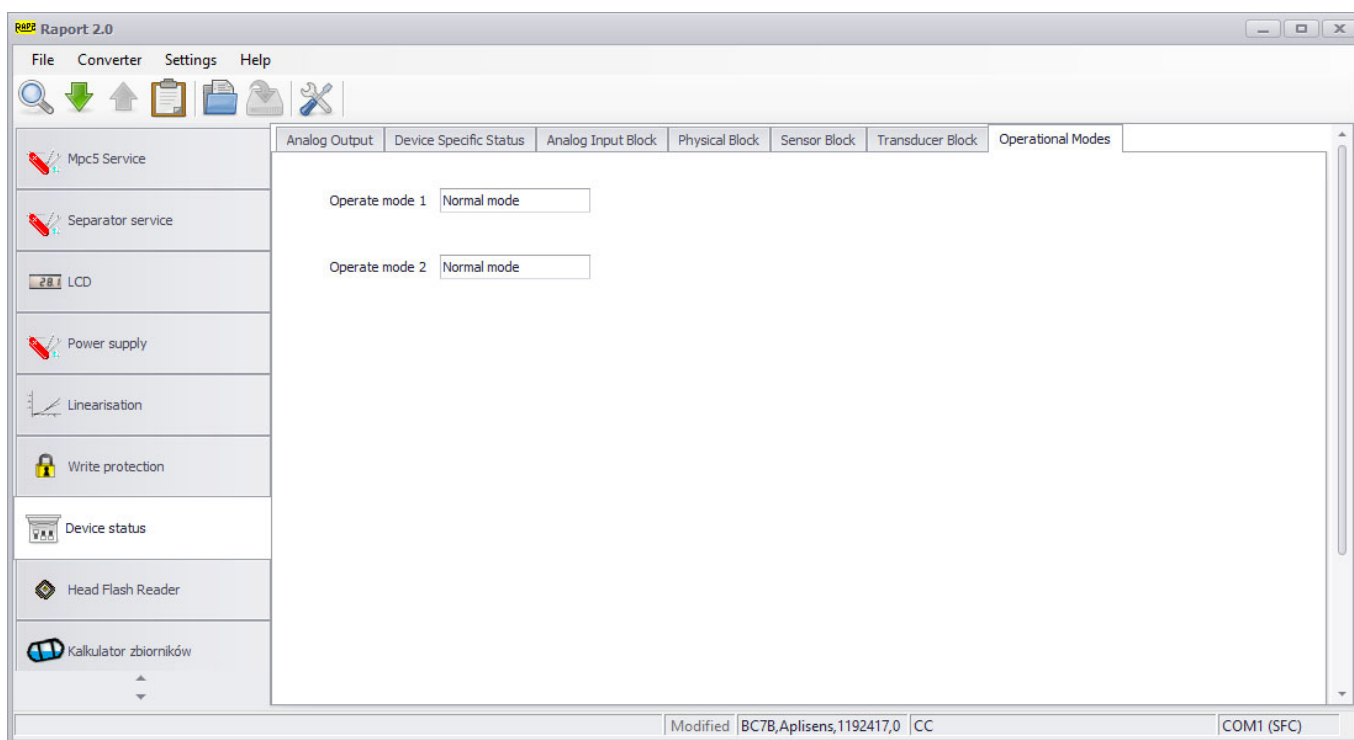


Figure 45. Operational modes statuses.

14.3. Influence of malfunction and failure on transmitter operation and output current

Any diagnosed malfunctioning and failures trigger alarm current $I_{AL} < 3.600 \text{ mA}$ (approx. 3.440 mA) or $I_{AL} \ll 3.600 \text{ mA}$ (approx. 0.300 mA). These two types of alarms differ from one another in the method of their handling.

When the cause of failure ceases to exist, alarm current $I_{AL} < 3.600 \text{ mA}$ (approx. 3.440 mA) usually automatically returns to the process current of the measurement (except for an alarm caused by unauthorised attempt to change the access password or unauthorised change of write protection).

Alarm current $I_{AL} \ll 3.600 \text{ mA}$ (approx. 0.300 mA) is activated by a separate alarm module triggered in critical situations from the point of view of the transmitter diagnostics. This condition is latched, the transmitter will remain in it until the power supply is disconnected and re-connected.

15. TECHNICAL DATA

Technical parameters of the device are included in Technical Information available on the manufacturer's website.

16. ADDITIONAL INFORMATION

16.1. Additional information

The manufacturer reserves the right to introduce structural and technological changes to the device which does not deteriorate its performance.

16.2. History of revisions

Revision No	Document revision	Description of changes
-	A – Feb 2020	First issue, developed by PM

